


LA CROSSE®
TECHNOLOGY

Indoor Temperature & Humidity Station

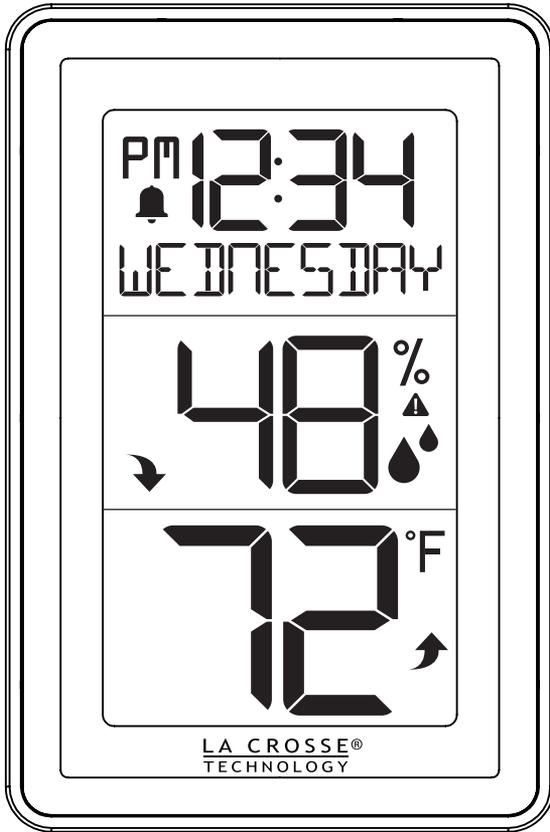

For online video support:
<http://bit.ly/LaxTechTalk>

Model: 308-1911
DC: 070517


Table of Contents

Button Function Explanation	1
Setup	1
Settings Menu	2
LCD Features	3
Custom Weekday Date Display	3
Set Alarms	4
Activate Deactivate Alarm	4
HI LO Temperature/Humidity Records	4
Trend Arrows	5
Humidity Alert	5
Activate Deactivate Alert	5
Visit Us on Social Media	6
Low Battery Icon	6
Specifications	6
Care and Maintenance	6
Warranty and Support	7
FCC Statement	7

Button Function Explanation


For better programming instructions, please note these terms for button use:

- Press: Press and release the designated button.
- Hold: Hold the button for 3 seconds then release the button.

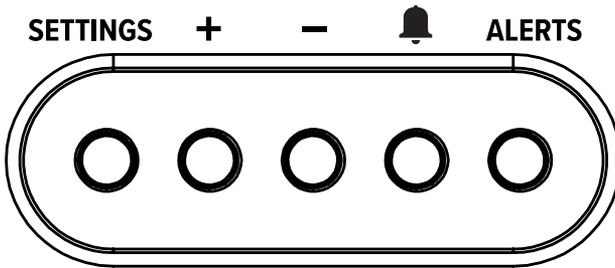

Setup

1. Insert 2 AAA batteries into the back of the station.
2. Set language, time, calendar, and temperature units.

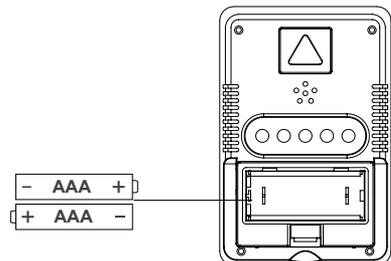

Settings Menu

- Hold the SETTINGS button to enter settings mode.
- Press the + or - button to adjust the values.
- Press the SETTINGS button to confirm adjustments and move to the next item.
- Press the ALERTS button at any time to exit.

Setting menu order:

1. Language (English | Español | Francais)
2. Beep ON/OFF
3. Hour
4. Minutes
5. Year
6. Month
7. Date
8. Temp Fahrenheit / Celsius

Note: When a different language is selected, the instructions on screen will be in the selected language.

Language

ENGLISH

Beep ON | OFF

ON

BEEP

Set Hour

AM 12

SET HOUR

Minutes

:34

MINUTES

Year

17

YEAR

Month

01

MONTH

Date

01


DATE

Temp Display

OF

TEMP

LCD Features

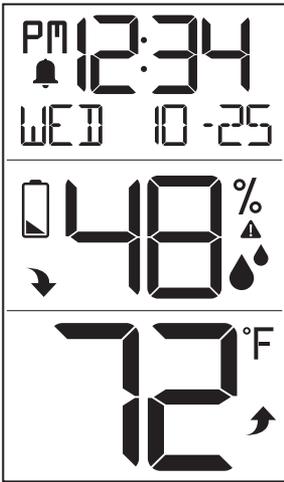

AM | PM

🔔 Alarm Active

🔋 Low Battery

↘ Trend Arrow

% Percent Humidity


⚠️ Humidity Alert Active

💧 Humidity Section Icon


°F Fahrenheit | Celsius

Custom Weekday | Date Display

- Press and release the SETTINGS button to display either the full Weekday, or three letter Weekday, Month, & Date.
- The station will remain on the display chosen.

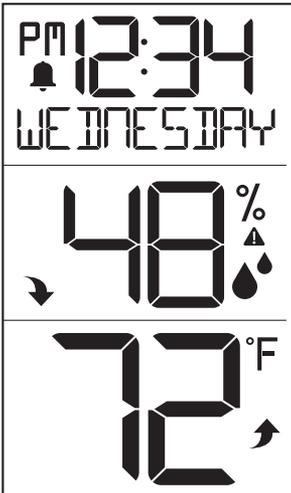

Full Weekday


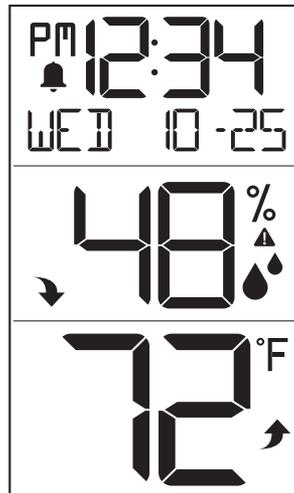


Weekday | Month | Date

Set Alarm

1. Hold the ALARM button to enter alarm time set mode. The hour will flash.
2. Press the + or - button to adjust the alarm hour.
3. Press the ALARM button to confirm and move to the minutes.
4. Press the + or - button to adjust the alarm minutes.
5. Press the ALARM button to confirm and exit.

Note: When you finish alarm settings, the alarm is active. The bell icon will show.

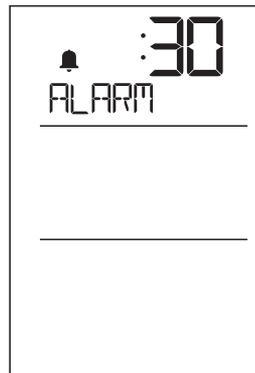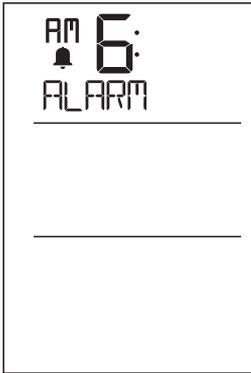

Activate | Deactivate Alarm

- From normal time display, press and release the ALARM button to deactivate or to activate the alarm. The alarm time will show for 2 seconds.
- When active, the Bell Icon will show. If the icon is not showing, the alarm is not active and will not go off.



HI | LO Temperature/Humidity Records

All HI | LO temperature/humidity records reset automatically at 12:00 (midnight). There is no manual reset.

- From normal display, press the PLUS button to view HI temperature/humidity records
- From normal display, press the MINUS button to view LO temperature/humidity records.

Trend Arrows

The UP and DOWN arrows indicate changes in temperature and humidity over the past hour. They update every 15 minutes and compare data from exactly one hour prior.

Temperature: arrow changes every 1 degree Fahrenheit.

Humidity: arrow changes every 2% RH

Humidity Alert

This station has programmable indoor humidity alerts, no temperature alerts.

1. Hold the ALERTS button to enter alert set mode. The HI Humidity value will flash.
2. Press the + or - button to adjust the HI Humidity value.
3. Press the ALERTS button to confirm and move to the LO Humidity. The LO Humidity value will flash. ON will show.
4. Press the + or - button to adjust the LO Humidity value.
5. Press the ALERTS button to confirm and exit.

Note: When you set one alert, **both** alerts are active. The alert icon will show after the humidity.



Activate | Deactivate Alert

- Press the ALERTS button to activate or deactivate both Humidity Alerts.
- Both humidity alerts are activated or deactivated at the same time.
- When the alert is off, the alert icon will not show.

Visit Us on Social Media



Latest video content
http://bit.ly/LaxTech_YouTube



For personalized interaction
http://bit.ly/LaxTech_Facebook



Join the conversation
http://bit.ly/LaxTech_Twitter



Pin and share
http://bit.ly/LaxTech_Pinterest

Low Battery Icon

- Low battery icon indicates it is time to replace the batteries in the station.

Specifications

Power: 2-AAA, IEC, LR3 batteries (not included)

Battery Life: Battery life is over 12 months with reputable batteries

Temperature Range: 32°F to 122°F (0°C to 50°C)

Humidity Range: 10% RH to 99%

Dimensions: 4.34" H x 2.84" W x 0.85" D
(11.03 H x 7.23 W x 2.15 D cm)

Care and Maintenance

- Do not mix old and new batteries.
- Do not mix Alkaline, Standard, Lithium, or Rechargeable Batteries.
- Always purchase the correct size and grade of battery most suitable for intended use.
- Replace all batteries of a set at the same time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed with correct polarity (+ and -).
- Remove batteries from equipment when it is not used for an extended period of time.
- Promptly remove expired batteries.

Warranty and Support

La Crosse Technology, Ltd. provides a 1-year limited time warranty (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

Before returning a product, please contact our friendly customer support with questions or visit our online help:

Phone: 1-608-782-1610

Online Product Support and Registration:
www.lacrossetechnology.com/support

View full warranty details online at:
www.lacrossetechnology.com/warranty_info.pdf

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher. This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.

Made in China - Printed in China