



Spreader Parts List

Before you begin, please verify that all of the parts below have been included with your spreader. Your spreader is packaged nearly complete in one box.

<p>ITEM #1 PT # 324-223</p>	<p>TAILGATE SPREADER ASSEMBLY (WITH 2 PRE-PAIRED WIRELESS REMOTE CONTROLS) (QTY 1)</p>	
<p>ITEM #2 PT # 298-178</p>	<p>2" RECEIVER ASSEMBLY (QTY 1)</p>	
<p>ITEM #3 PT # 250-761</p>	<p>5/8-11 X 3.50" HEX HEAD CAP SCREW, 18-8 STAINLESS (QTY 2)</p>	
<p>ITEM #4 PT # 253-255</p>	<p>5/8-11 NYLOCK NUT, 18-8 STAINLESS (QTY 2)</p>	
<p>ITEM #5 PT # 254-018</p>	<p>5/8" SAE FLAT WASHER, 18-8 STAINLESS (QTY 4)</p>	
<p>ITEM #6 PT # 263-320</p>	<p>Ø5/8"x4.0" HITCH PIN w/ R-CLIP (Not Shown) (QTY 1)</p>	
<p>ITEM #7 PT # 324-239</p>	<p>RIGID PLASTIC LID ASSY KIT (STRAP AND BRKTS NOT SHOWN) (QTY 1)</p>	



Assembly tool list

	Ratcheting Wrench
	15/16" Socket, 1/2" Socket (For Deflector Adjustment)
	15/16" Open Ended Wrench
	9/64" Long Shank Allen Key wrench (For Main Shaft Adjustment (if required))