
# Installation Guide






## VONN Lighting Model: VOI92363

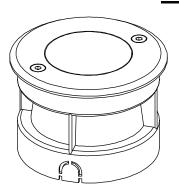


 
# LED INFO & WARNINGS 🕂




- Make sure that you have all necessary parts by checking the parts list. If any part is missing or damaged, please contact VONN Lighting Customer Service at 888-604-8666 for a replacement.
- All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn or broken.
- Inspect the LED fixture prior to installation to make sure that it has not been damaged during shipping.
- Please handle the LED light with care when unpacking. Do not apply
  pressure to the LED's, do not open any factory sealed compartments, and
  do not touch the LEDs with your hands.

VONN highly recommends to use a qualified, licensed electrician to install the fixture.


- Do not remove or replace VONN manufactured driver that are provided with the fixture.
- Shut "OFF" the electricity at main fuse box.
- 12V AC Low Voltage Fixture (TRANSFORMER IS REQUIRED)

## Parts List

 


A. Wire Connectors x 4 B. Hex Wrench

## Circuit Box

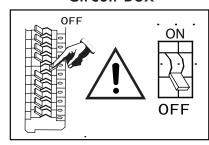

## Tools You May Need

 


Legend

L = Live/Hot/Black N = Neutral/White

N -

= Ground/Green



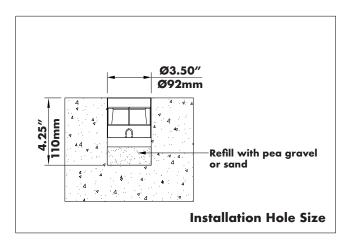



### 1. Prepare Hole

Prepare concrete for plastic housing.

#### 2. Remove Fixture

- Remove fixture from plastic housing by loosening hex screws with hex wrench (B).
- Thread supply wires through plastic housing.
- Insert plastic housing into prepared concrete ground.

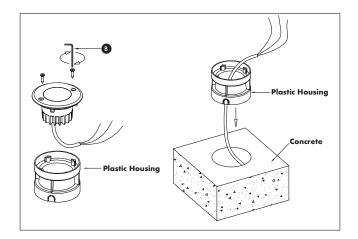

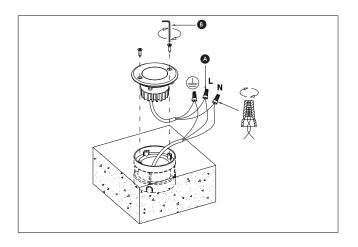

## 3. Supply Wires:

- Connect Black (Line Wire) from fixture to power Black (Hot Wire).
- Connect White (Neutral Wire) from fixture to power White (Neutral Wire).

**Ground Wires:** 

- Connect Green (Ground Wire) from fixture to supply Green (Ground Wire).
- Twist wires together clockwise and secure with wire connector (A).
- Tuck wires in plastic housing. Insert fixture into plastic housing.
- Secure fixture by tightening screws with hex wrench (B).

### 4. Turn Power ON

•Turn electricity "ON" at main fuse box.

