 


INTRODUCING YOUR WASHING MACHINE

 
Parts and Accessories

Parts

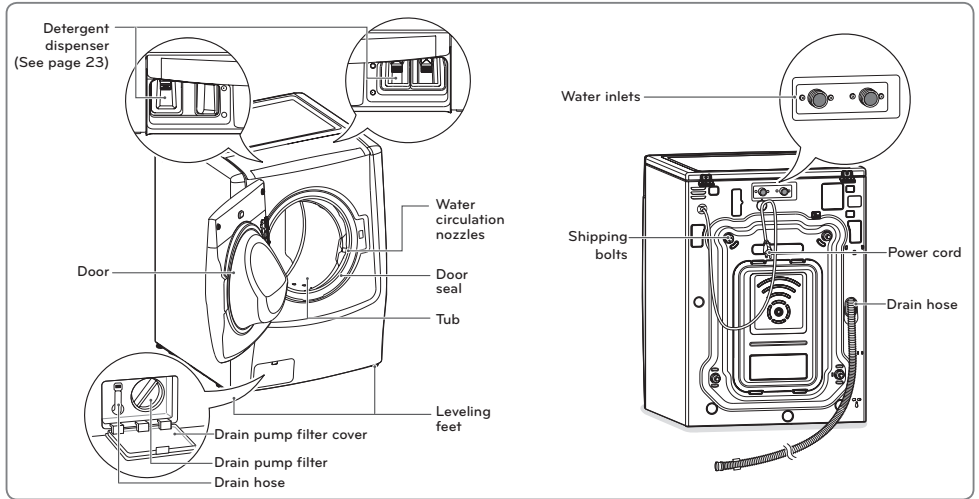 


Accessories

Included Accessories

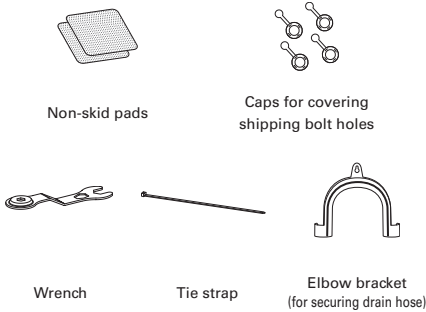

Optional Accessories

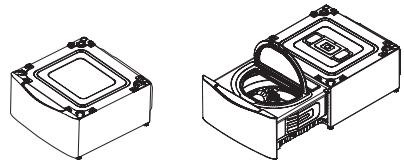 



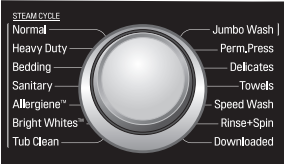 


Pedestal or Pedestal Washer
(sold separately)

NOTE



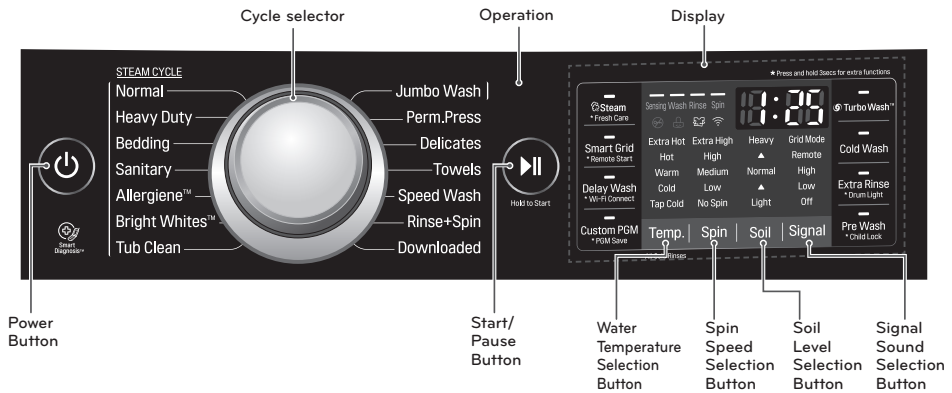





- Contact LG Customer Service at 1-800-243-0000 (1-888-542-2623 in Canada) if any accessories are missing.
- For your safety and for extended product life, use only authorized components. The manufacturer is not responsible for product malfunction or accidents caused by the use of separately purchased unauthorized components or parts.
- The images in this guide may be different from the actual components and accessories, and are subject to change by the manufacturer without prior notice for product improvement purposes.

Control Panel Features

 








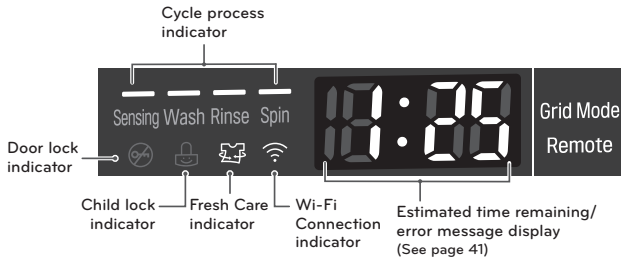

Button	Description
	<ul style="list-style-type: none"> Turns the washing machine on and off. (During the wash cycle) stops operation, and cancels the settings.
	<ul style="list-style-type: none"> Bright Whites™ <ul style="list-style-type: none"> - For white fabrics (see page 26) Allergiene™ <ul style="list-style-type: none"> - For cotton, underwear (see page 26) Sanitary <ul style="list-style-type: none"> - For underwear, diapers, etc. (see page 26) Bedding <ul style="list-style-type: none"> - For blankets or large bulky items (see page 26) Heavy Duty <ul style="list-style-type: none"> - For heavily soiled cotton fabric (see page 26) Normal <ul style="list-style-type: none"> - For general laundry, such as cotton T-shirts or towels (see page 26) Jumbo Wash <ul style="list-style-type: none"> - For blankets or king size items (see page 26) Perm.Press <ul style="list-style-type: none"> - For wrinkle-free fabrics (see page 26) Delicates <ul style="list-style-type: none"> - For sheer and delicate fabrics (see page 26) Towels <ul style="list-style-type: none"> - For towels (see page 26) Speed Wash <ul style="list-style-type: none"> - For small quantities of lightly soiled items (see page 26) Rinse + Spin <ul style="list-style-type: none"> - For Rinse, drain and Spin only (see page 26) Downloaded <ul style="list-style-type: none"> - For downloadable cycles. The default cycle is Small Load. (see page 27). Tub Clean <ul style="list-style-type: none"> - For tub clean (see page 36)
	<ul style="list-style-type: none"> Starts or pauses the washing machine cycle. Hold a second to Start - If you do not press the  button within 1 hour of selecting a cycle, the washing machine will turn off automatically.
Temp.	<ul style="list-style-type: none"> (Press repeatedly) Selects the water temperature for the wash cycle (see page 27). - Select water temperature from 5 settings.
Spin	<ul style="list-style-type: none"> (Press repeatedly) Selects the spin speed in the desired level (see page 27). - Selects spin speed from 5 settings.
Soil	<ul style="list-style-type: none"> (Press repeatedly) Selects a wash cycle by soil level (see page 27). - Selects soil level from 5 settings.
Signal	<ul style="list-style-type: none"> (Press repeatedly) Selects a Melody or Button sound by signal(see page 28).

Operation (continued)

Button	Description
	<ul style="list-style-type: none"> • (Press before starting wash cycle) Use Steam option for extra cleaning power (See page 28). • (Press and hold 3 seconds) Fresh Care tumbles clothes to prevent wrinkles (See page 30).
	<ul style="list-style-type: none"> • Use Smart Grid to lower your energy costs by avoiding peak usage times (See page 28). • (Press and hold 3 seconds before starting wash cycle) Use Remote Start to control your washer remotely (See page 28).
	<ul style="list-style-type: none"> • (Press before starting wash cycle) Set delay time of starting cycle (See page 29). • (Press and hold 3 seconds after turning on the machine) Use Wi-Fi Connect for connecting to the internet through your home Wi-Fi network (See page 31).
	<ul style="list-style-type: none"> • Use Custom PGM to recall the customized wash cycle you had previously saved (See page 29). • (Press and hold 3 seconds after setting the desired option) Use PGM Save to save special combination of setting that you use frequently (See page 30).
	<ul style="list-style-type: none"> • Use Turbo Wash™ to save time (See page 29).
	<ul style="list-style-type: none"> • Use Cold Wash to save on energy consumption (See page 29).
	<ul style="list-style-type: none"> • (Press before wash cycle) Add an extra rinse to the selected cycle (See page 29). • (Press and hold during wash cycle) The drum is equipped with a white LED light that illuminates when the washer is turned on (See page 30).
	<ul style="list-style-type: none"> • Pre-wash heavily soiled laundry (See page 29). • (Press and hold 3 seconds during wash cycle) Use the Child Lock option to Lock/Unlock the controls (See page 30).

Display



Display Icon	Description
	<ul style="list-style-type: none"> • This portion of the display shows which stage of the wash cycle is currently underway (Sensing, Wash, Rinse and Spin).
	<ul style="list-style-type: none"> • Indicates that the door is locked. The washer door will lock while the washer is operating. The door can be unlocked by pressing the Start/Pause button to stop the washer.
	<ul style="list-style-type: none"> • When Child Lock is set, the Child Lock indicator appears and all buttons are disabled except the Pre Wash button. This prevents children from changing settings while the washer is operating.
	<ul style="list-style-type: none"> • This indicator shows that the washer has been set for Fresh Care. This function provides periodic tumbling for up to about 19 hours to prevent wrinkles.
	<ul style="list-style-type: none"> • When the appliance is connected to the internet through a home Wi-Fi network, this indicator appears.
	<ul style="list-style-type: none"> • When the Start/Pause button is pressed, the washer automatically detects the wash load (weight) and optimizes the washing time, based on the selected cycle and options. The display will then indicate the estimated time remaining for the selected wash cycle.
	<ul style="list-style-type: none"> • When the Smart Grid signal is detected, this indicator appears.
	<ul style="list-style-type: none"> • When the Remote Start mode is activated, this indicator appears.