


EVERBILTTM

Item # 1002 782 607

Model # 9235927

USE AND CARE GUIDE

WIDE-ANGLE HINGE

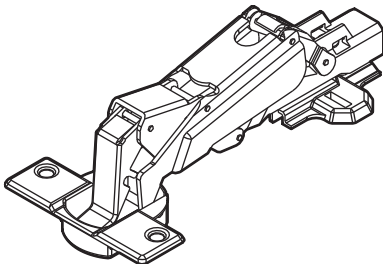

Questions, problems, missing parts? Before returning to the store,
call Everbilt Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-305-1726

HOMEDEPOT.COM

924393800

THANK YOU

We appreciate the trust and confidence you have placed in Everbilt through the purchase of this hinge. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Everbilt!

Safety Information

Please read and understand this manual before installing this product.



CAUTION:
Always be cautious when using power tools.

Warranty

Subject to the terms of this warranty, the Manufacturer warrants to the original consumer purchaser that the product will be free from defects in material and workmanship. If the product does not comply with this warranty, the Manufacturer will repair or replace the product or, at the Manufacturer's option, refund the purchase price. Repair, replacement, or refund of the original purchase price is your sole remedy under this or any other warranty on the product, whether expressed or implied.

For additional details and questions,
please contact Everbilt Customer Service at 1-800-305-1726.

EVERBILT™

Questions, problems, missing parts? Before returning to the store,
call Everbilt Customer Service
8 a.m.-6 p.m., EST, Monday-Friday


1-800-305-1726

HOMEDEPOT.COM



PLANNING INSTALLATION

Ensure all parts listed in the Package Contents section are included and that you have the listed Tools Required on hand. If any part is missing or damaged, contact customer service.


When planning your installation, ensure the hinge is oriented in its final position as shown:

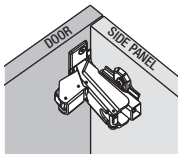

These hinges can be installed in frameless and face frame cabinetry. Ensure that you choose the correct mounting plate in the Package Contents for your task.

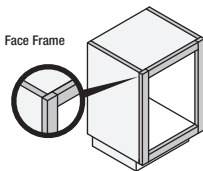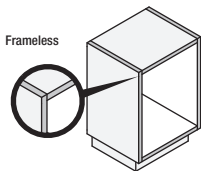

When installed successfully, these hinges can open to a maximum of 160°.

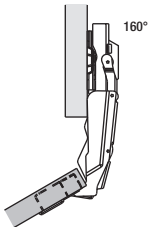

Pre-Installation

TOOLS REQUIRED



#2 Screwdriver



Pencil or Scribe



Ruler (in. and mm)



Drill




1/6 in. Drill bit




35 mm boring bit (Forstner bit)

PACKAGE CONTENTS

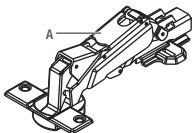


A

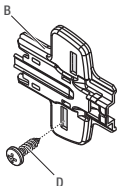

B

D

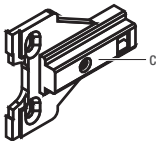


C

Part	Description	Quantity
A	Wide Angle Hinge	2
B	Frameless Mounting Plate	2
C	Face Frame Mounting Plate	2
D	#8 x 5/8 in. Screw	8

Pre-Installation

RECOMMENDED NUMBER OF HINGES PER DOOR SIZE

Use this diagram to determine how many hinges you will need for your door. If you are hanging a door with a mirror or a door that is wide, you will need additional hinges.

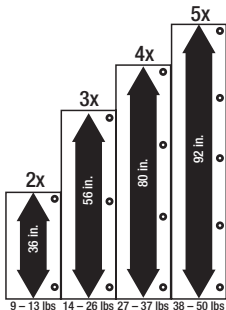


SPECIFICATIONS

Door thickness should be 3/4 in. (19 mm) or 1 in. (25 mm).


Placing several cabinets together requires that an amount of the opening (reveal) must show between the door for the door to properly open and close:

Door	Minimum Reveal
3/4 in. (19 mm) thick	1/16 in. (2 mm)
1 in. (25 mm) thick	1/8 in. (mm)



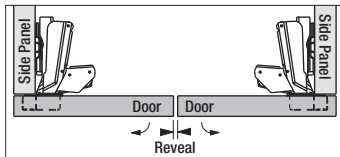


1 Pre-drilling the installation holes

- Use a pencil and tape measure to measure and mark the installation locations as this diagram shows.
- Then use a 1/16 in. drill bit to drill the cabinet holes and a 35 mm boring bit to drill the door hole. Ensure the door hole is no deeper than 15/35 in. (12 mm). Do not drill through the either the door face or the cabinet.

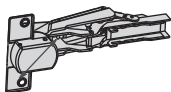


Door

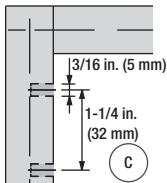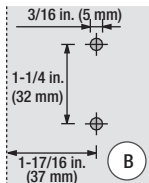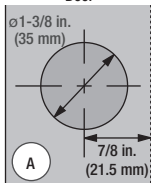

2 Installing the hinges to the door

- Insert each hinge (A) into the pre-drilled holes in the door and secure using two screws (C) for each hinge (A).

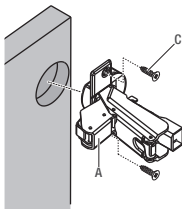


Installation


3 Installing the mounting plates

- Align the mounting plates (B or C) to the pre-drilled holes and fasten to the cabinet using two screws (D) per mounting plate (B or C).

Frameless


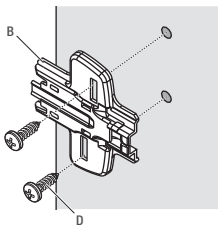


Face Frame

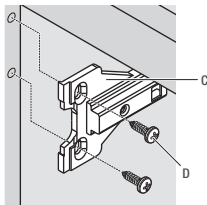



4 Installing the door to the cabinet

- Open the hinges (A) to the fully-extended position.
- Connect the hinge arms (A) to the mounting plates (B or C) and press the hinge arms (A) down until they snap to the plates (B or C).

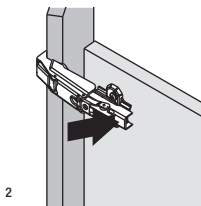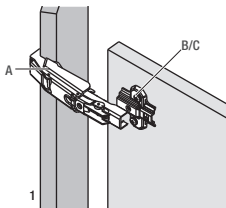


5 Adjusting the door

- **Height Adjustment:** Loosen the top mounting screw (1) to adjust the door up or down.

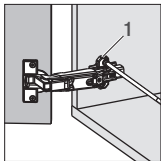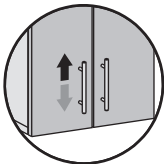

- **Overlay Adjustment:** Turn the adjustment screw (2) to adjust the door overlay.

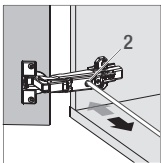

- **Depth Adjustment:** Turn the eccentric screw (3) to adjust the distance of the doors from the cabinet.

