



CANTERBURY II LED OUTDOOR POST TOP LIGHT

Item # 578675

Please read carefully and save these instructions, as you may need them at a later date.

CAUTION

WARNING: For fixtures labeled for outdoor and wet location use, provide a water-tight seal between the fixture and the wall surface by using silicone or similar caulking. Turn off the main power at the circuit breaker before installing or service the fixture.

GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and mounting hardware from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

TOOLS REQUIRED

Phillips screwdriver

ASSEMBLY AND INSTALLATION

1. Carefully unpack and identify all parts referring to Figure.
2. Make wire connection with WIRE NUTS (E)
 - black fixture wire to live supply wire.
 - white fixture wire to neutral supply wire.
 - fixture ground wire to supply ground wire.
3. Carefully tuck the wire and WIRE NUTS (E) into the POST CUP (D).
4. Fasten the FIXTURE COVER (A) to the FRAME (B) with the SCREWS (C).
5. Attach the POST CUP (D) to the POST (G) with the SET SCREWS (F).
6. Turn on the power at the main fuse or circuit breaker box.

