




Item: 1002 630 374
1002 705 904
1001 857 617
Model : D11334G-7PC2
D11334G-7PC-B
D11334-DSR-B

USE AND CARE GUIDE

BELCOURT MOTION DINING CHAIR

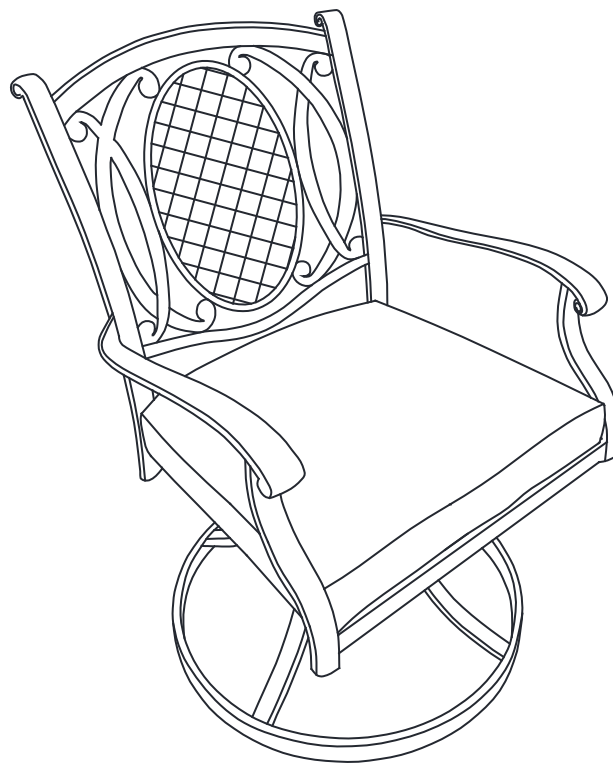

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday
9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this motion dining chair. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Table of Contents	2	Assembly	5
Warranty	2	Care and Cleaning	6
What is Covered	2		
What is Not Covered	2		
Pre-Assembly	3		
Planning Assembly.....	3		
Hardware Included.....	3		
Motion Dining Chair Package Contents.....	4		

Warranty

THIS IS A RESIDENTIAL WARRANTY ONLY. THIS WARRANTY DOES NOT APPLY TO COMMERCIAL USE.

5 YEAR FRAME AND 3 YEAR FABRIC LIMITED WARRANTY

WHAT IS COVERED

We warrant the frame to be free of manufacturing defects to the original purchaser for five years and the fabric for three years.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing, and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

For a copy of our full limited warranty, please contact our customer service at 1-855-HD-HAMPTON or visit www.hamptonbay.com.

Pre-Assembly

PLANNING ASSEMBLY

Please read this entire instruction manual prior to assembly!

Identify all parts packed in the carton against the parts list. Remove all protective materials and place the parts on a non-abrasive surface to avoid scratching.




NOTE: More than one person may be required to complete the assembly of this product.

HARDWARE INCLUDED







NOTE: Hardware not shown to actual size.

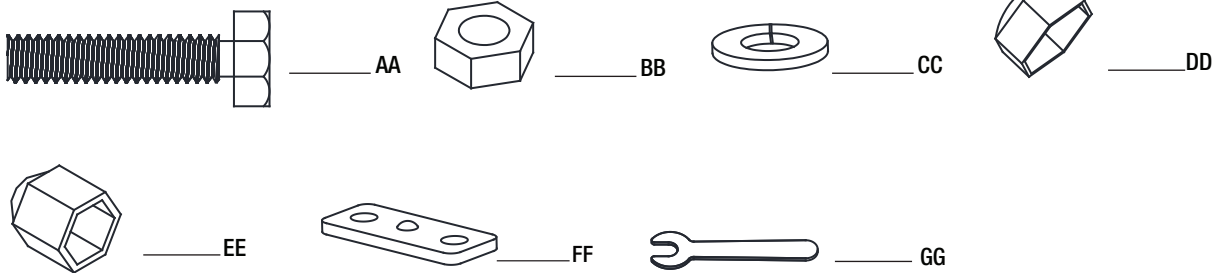

Part	Description	Quantity
AA	M8x38mm Bolt	4
BB	M8 Nut	4
CC	Spring washer	4
DD	Bolt cap	4
EE	Nut cap	4
FF	Metal plate	4
GG	Wrench	2

Pre-Assembly (continued)

MOTION DINING CHAIR PACKAGE CONTENTS

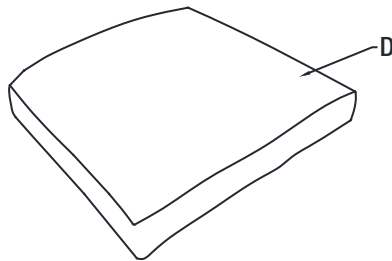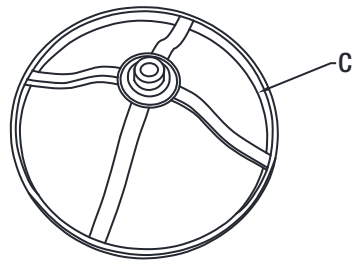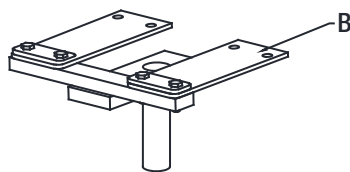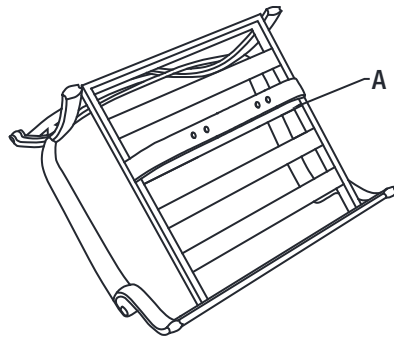


Part	Description	Quantity
A	Seat frame	1
B	Stem bracket	1
C	Chair base	1
D	Seat cushion	1

Assembly


1 Attaching the stem bracket

- Place the seat frame (a) on a soft, flat non-abrasive surface.
- Attach the stem bracket (B) to the seat frame (A) using the spring washers (CC), M8x38mm bolts (AA), M8 nuts (BB), and metal plates (FF). Do not fully tighten the bolts.
- Ensure all bolts are aligned and assembled correctly.
- Tighten all M8x38 mm bolts (AA) and M8 nuts (BB) with the wrench (GG). Cover the bolts (AA) and nuts (BB) with bolt caps (DD) and nut caps (EE).

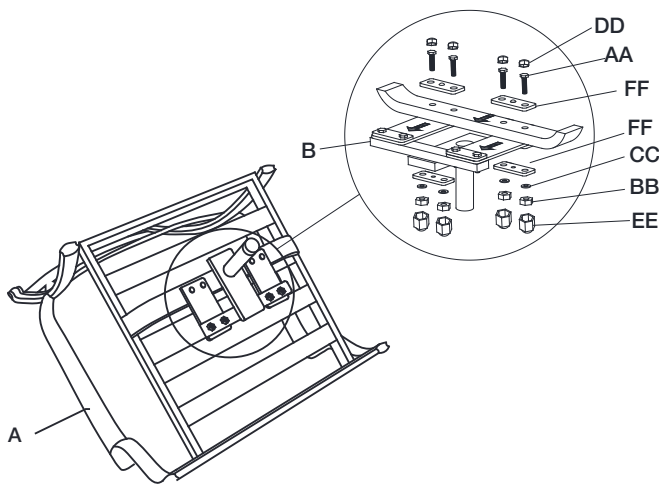


2 Connecting the base and seat

- Place the seat frame (A) into the chair base (C) by inserting the shaft directly into the plastic bushing of the chair base (C). Use a twisting motion if necessary. Make sure you have inserted it all the way and that the base is locked onto the shaft.

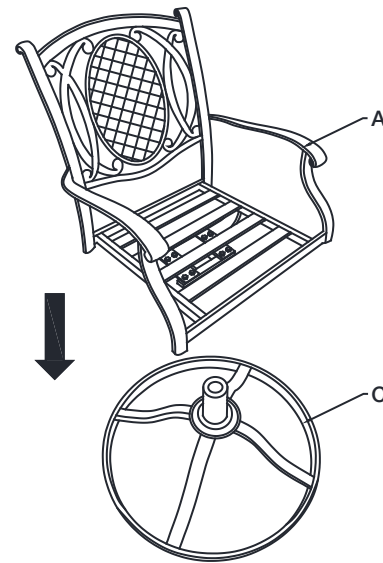

3 Adding the seat cushion

- Place the seat cushion (D) onto the chair. The chair is now ready for use.

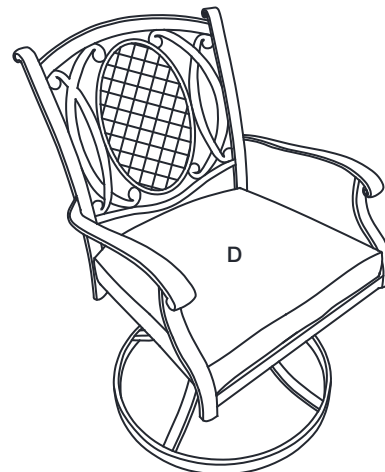

Care and Cleaning

- Do not allow water to build up in the frames. This will cause corrosion and possible freezing damage in cold climates.
- Use a mild soap and water for normal cleaning. Do not use janitorial or alcohol based cleaners. Some cleaners may be marked as natural, but some ingredients may cause discoloration or have an adverse reaction to your finish.
- Rinse with clean water and dry with a soft, absorbent cloth towel.
- Treat the frame with a liquid wax for maximum protection against UV rays and/or salty, damp air.



Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday
9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM


Retain this manual for future use.



Item: 1002 630 373
1002 705 903
Model : D11334G-7PC2
D11334G-7PC-B

USE AND CARE GUIDE

BELCOURT RECTANGULAR DINING TABLE

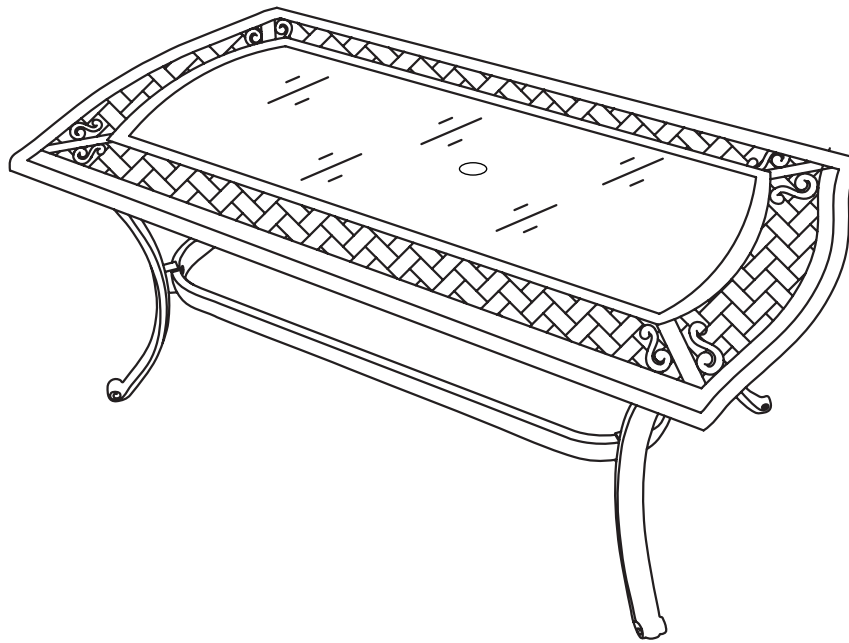

Questions, problems, missing parts ?Before returning to the store,
call Hampton Bay Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday
9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this dining table. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs.

Thank you for choosing Hampton Bay!

Table of Contents

Table of Contents.....	2	Assembly.....	5
Safety Information.....	2	Care and Cleaning.....	6
Warranty.....	2		
What is Covered.....	2		
What is Not Covered.....	2		
Pre-Assembly.....	3		
Planning Assembly.....	3		
Hardware Included.....	3		
Table Package Contents.....	4		

Safety Information

This glass table top is designed to shatter into small pieces when impacted or stressed beyond its strength limitations.



WARNING: Do not sit or stand on the glass table top.



WARNING: Do not place heavy items on the glass table top.



WARNING: Do not place extremely hot or cold items on the glass table top.



WARNING: An umbrella base must be used at all times. The umbrella should not be used in the event of wind, rain, hail, sleet, snow or any other inclement weather.

Warranty

THIS IS A RESIDENTIAL WARRANTY ONLY. THIS WARRANTY DOES NOT APPLY TO COMMERCIAL USE.

5-YEAR FRAME LIMITED WARRANTY

WHAT IS COVERED

We warrant the frame to be free of manufacturing defects to the original purchaser for five years.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center.

This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use.

In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

For a copy of our full limited warranty, please contact our customer service team at 1-855-HD-HAMPTON or visit www.hamptonbay.com.

Pre-Assembly


PLANNING ASSEMBLY

Please read this entire instruction manual prior to assembly. Identify all parts packed in the carton against the parts list. Remove all protective materials and place the parts on a non-abrasive surface to avoid scratching.

 **NOTE:** More than one person may be required to assemble the product.

HARDWARE INCLUDED


 **NOTE:** Hardware not shown to actual size.

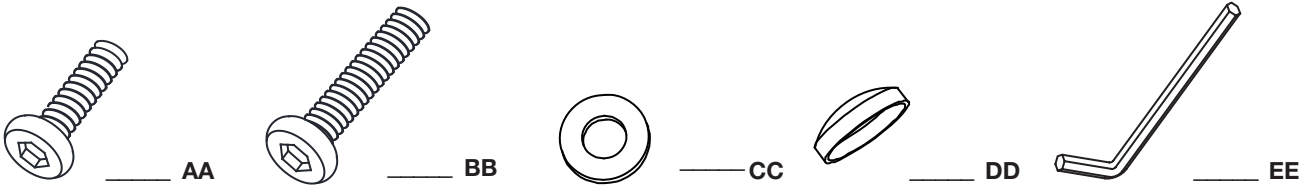

Part	Description	Quantity
AA	M6x25 mm Bolt	8
BB	M6x40 mm Bolt	8
CC	M6 Washer	16
DD	Bolt cap	16
EE	Hex wrench	1

Pre-Assembly (continued)

TABLE PACKAGE CONTENTS

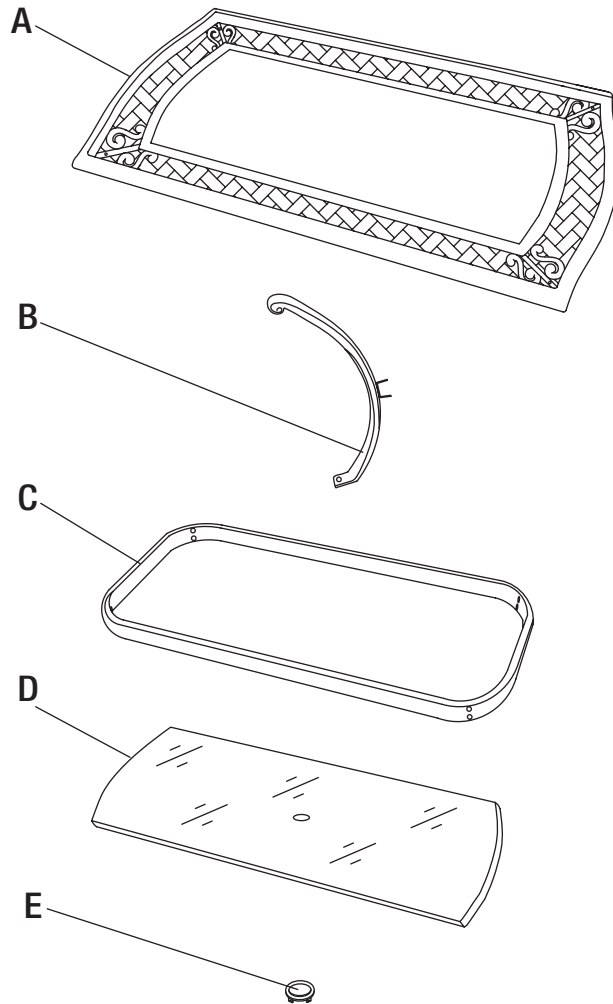


Part	Description	Quantity
A	Table frame	1
B	Table legs	4
C	Connector ring	1
D	Glass	1
E	Umbrella ring	1

Assembly


1 Attaching the table legs

- Place the table frame (A) upside-down on a soft, flat, non-abrasive surface. Attach the table legs (B) to the table frame (A) using M6x40mm bolts (BB) and M6 washers (CC).
- Do not fully tighten the bolts.

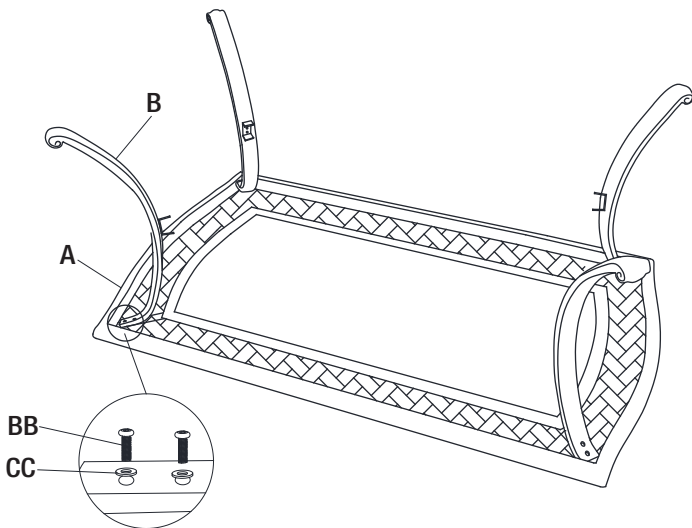


2 Attaching the connector ring

- Attach the connector ring (C) to the table legs (B) using M6x25 mm bolts (AA) and M6 washers (CC). Fully tighten all the bolts with the hex wrench (EE). Ensure all bolts are aligned and assembled correctly.
- Attach the bolt caps (DD) on all bolts.

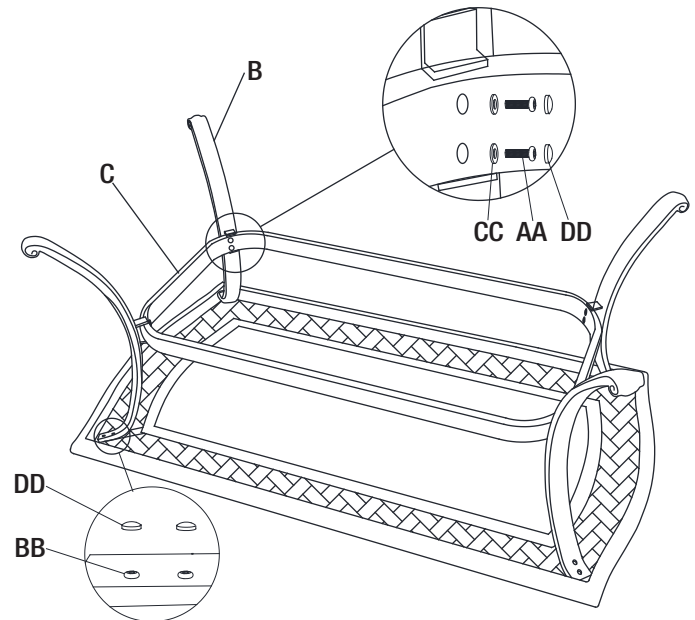

3 Positioning the table

- Turn the table right side up.
- Put the glass (D) into the table frame (A).
- Place the umbrella ring (E) through the hole in the center of the glass (D).

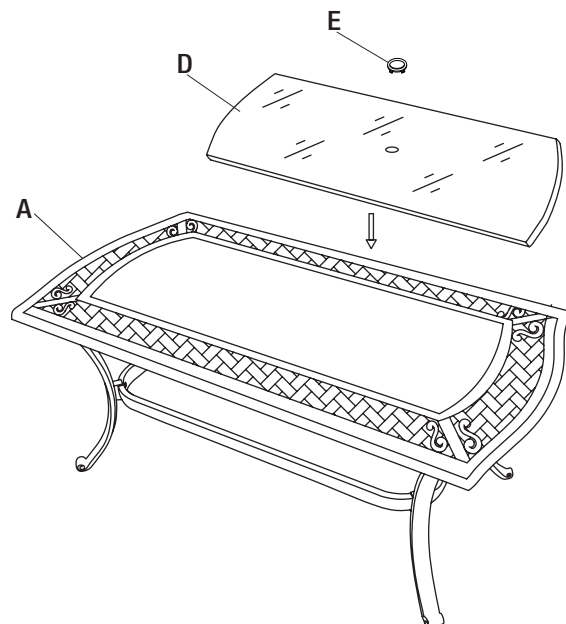

Care and Cleaning

- Do not allow water to build up on the table frame. This will cause corrosion and possible freezing damage in cold climates.
- Use a mild soap and water for normal cleaning. Do not use janitorial or alcohol based cleaners as the ingredients in some cleaners may cause discoloration or have an adverse reaction on your finish.
- Rinse with clean water and dry with a soft, absorbent cloth towel.
- Treat the frame with a liquid wax for maximum protection against UV rays and/or salty, damp air.



Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday
9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

Retain this manual for future use.