

TEEN TECH

SMART WATCH



Operation Manual
HY-CAMW

Thank you for purchasing the Hype Smart Watch. Please read all instructions carefully before using and retain this manual for future use and reference.

PACKAGE CONTENTS

- Smart Watch with Built-in Camera
- USB Charging Cable
- Operation Manual

KEY FEATURES

- 0.08MP Built-in Camera
- Play music wirelessly
- Media shortcut controls
- Rechargeable lithium-ion battery
- Built-in microphone and speaker

SAFETY INSTRUCTIONS

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.

Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.

Do not use the unit if it has been dropped or damaged in any way.

Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.

Do not puncture or harm the exterior surface of the product in any way.

Keep the unit free from dust, lint, etc.

Do not use this unit for anything other than its intended use or purpose. Doing so may damage the device.

This product is not a toy. Keep out of reach of children.

Do not expose batteries, battery pack, or batteries to be installed to excessive heat, such as direct sunlight, or open flame.

SMART WATCH FEATURES



PRODUCT FEATURES

1. Touch Screen
2. Power / End Call
3. Adjustable Silicone Wrist Strap
4. Speaker
5. Micro USB Charging Port
6. Microphone
7. Return / Home Button

HOME SCREEN

Once your smart watch turns on, it will show you the below home screen.



1. Bluetooth Symbol - Indicates watch is paired to a device.
2. Battery - Indicates remaining battery life on the Smart Watch.
3. Time - Shows current time
4. Date - Shows today's date
5. Menu - Navigates to the Main Menu
6. Volume - Volume Adjustment for Speaker
7. Bluetooth - Setup Screen for Bluetooth Pairing

STANDBY MODE



Press the Power Button once to put your Smart Watch in standby mode. The screen will go dark.

Press the Power Button a second time to display your watch and the time.

Press and hold the screen of your watch when the analog clock is showing to unlock your Smart Watch and return to your Home Screen.

COMPATIBILITY

Please note, some features of your smart watch are only available to specific devices.

At the top of each section of the manual, compatibility is shown using the two icons below.



Only available for Android devices.



Available for Android and Apple devices.

 


Only available for Apple devices.

BLUETOOTH PAIRING



Make sure your Smart Watch is turned on and fully charged.
Make sure Bluetooth is enabled on your smart phone or tablet and your device is discoverable.

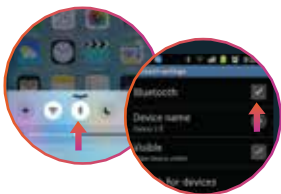


NOTE: Android users should download and run the "Fundo Companion" App prior to pairing with Bluetooth. See "Settings / QR Code" for installation details before pairing.




Press the Bluetooth Icon on your home screen to enter Bluetooth settings screen.

On

 Press the word "Power" on your touch screen and ensure the green icon on the right reads "On."

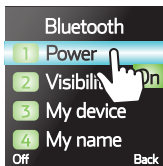

 This will turn on your watch's Bluetooth.

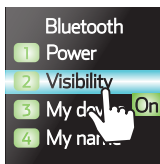

On

Press the word "Visibility" on your touch screen and ensure the green icon on the right reads "On."

This will let your smart phone or tablet find your watch..



HY

 
 
Press the phrase "My Name" on your touch screen to see the first few letters of your watch's pairing name.

In the Bluetooth settings for your smart phone or tablet, search for nearby devices and find your watch.



It should appear as "HY-CAMW"
Select it to begin pairing.



On your smart watch, press "My device," "Search new devices" and select your device on the next screen.

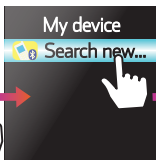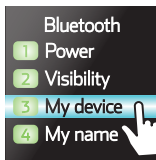

  Your smart watch will send a pairing code to your phone. Make sure the codes match on your smart watch and on your device screen.

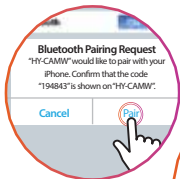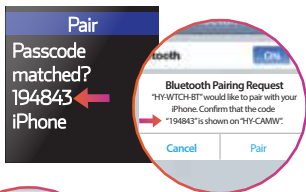

Press "Pair" from your smart phone or tablet.

Press "Yes" on your screen on the lower left to complete pairing.



NOTE: For Android users, after pairing with Bluetooth, your smart watch will ask you to sync date and time.



Press "Yes" on your screen on the lower left to complete pairing.

Your watch should confirm with "Success"

Pairing is now complete. If you are unsuccessful, press the "Return" key on the frame of your smart watch to repeat the pairing process.

To restart the pairing process, you will first need to turn off "Visibility" and turn off Bluetooth "Power" first. Then turn Bluetooth off on your device and begin from the first step of this section.

To switch to another smart phone or tablet, return to the "My device" page and select your tablet or smart phone from that page. You may need to disconnect previously paired devices before attempting to switch between paired devices.

BT NOTICE



Press the BT notice icon on your home screen to set and customize your notifications.

BT notice
"Please
install "BT
Notice" app
in remote device

This App can only be used on smart watches paired with Android devices.

Before using, please download the "Fundo Companion" App. See "Settings / QR Code" for installation details

Push notifications set on your phone will appear as a short preview on your smart watch. An incoming message is shown as an example below.

MESSAGES



Press the Messages Icon on your home screen to view sent and received messages.

BT notice
"Please
Install "BT
Notice" app
in remote device

This App can only be used on smart watches paired with Android devices.

Before using, please download the "Fundo Companion" App. See "Settings / QR Code" for installation details

Your smart watch will sync with SMS Messaging on our phone to show your Inbox and Sent Messages.

VOLUME



Press the Volume Icon on your home screen to adjust alarm and music volume.

MENU LIST



Press the Menu Icon on your home screen to see your available smart watch Apps.

Your smart watch will begin displaying available Apps.

If you are looking for a specific App but do not see it on your screen, swipe left or right on your touch screen to see additional Apps.

SETTINGS

 


Press the Settings Icon on your home screen to adjust settings on your smart watch.

SETTINGS QR code



"Quick Response Code" will display the Setup QR code.

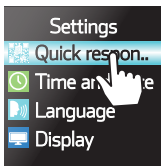

Please note, this QR code is to be used for quick setup and pairing of your smart watch with your smart phone or tablet.

 
 
This feature is only available for Android devices.

Using your Android smart phone, scan the QR code from your smart watch, open and install the "Fundo Companion" App in order to quick sync your messages, push notifications, and date and time.


Install the downloaded App and have it ready and running on your Android device before Bluetooth pairing.




"Time and date" will allow you to set the time and date and home city.

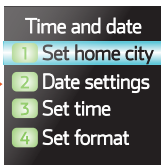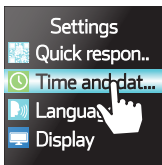

 Select "Date settings" to put in the current date.

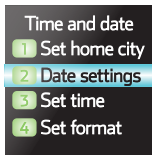

 Select "Set format" to set your digital clock to show time in the standard 12-hour format, or the 24-hour military format.

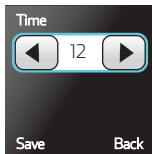



Select "Language" to choose the language shown on your smart watch. The default setting is "English."

Scroll through this list by swiping your finger upwards on your watch touch screen. Find your desired language, and press its name on the touch screen of your watch.

In the example below, "English" is chosen.

 
 


SETTINGS

Common Settings



"Common settings" will allow you to choose your unlock screen clock type, enable the motion sensor features and change the LCD backlight settings.

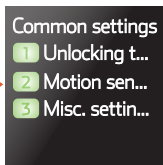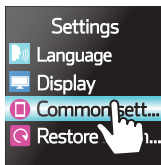

SETTINGS

Display

 


Select "Display" to adjust your preferences for wallpaper and automatic Standby mode.





"Restore settings" will allow you to reset all settings on your phone and clear all Bluetooth devices and personal information. It is best to use this feature if you no longer want your smart watch.

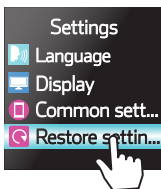

Press the "Yes" button on your watch to begin the restore process.

Your watch should confirm with "Restore processing."

The smart watch will restart and the settings will be restored to the default settings. It will leave you at the home screen.

POWER SAVE



Press the Power Save Icon on your home screen to set or turn off Power Save mode.

Power Save mode will attempt to put your watch on standby as much as possible to conserve battery life.

RINGTONES



Press the Ringtones Icon on your home screen to set your ring, or alarm notifications.

Select a ringtone preset to customize how your watch should act when alerting you of notifications.
Select activate to set the selected preset.

CALENDAR



Press the Calendar Icon on your home screen to access your calendar.



The Calendar will immediately bring you to today's date, highlighted in light blue.

Use the left and right arrows on the top of the calendar to scroll to the previous or the following months.

PEDOMETER



Press the Pedometer Icon on your home screen to access your pedometer.



Your Pedometer has a built-in timer and step counter.

Press "Start" to start the timer and the step counter.

Swipe right on your screen to check your summary page on the second screen. The red dot on the bottom of your Pedometer App will show you which screen you are on.

Your summary page will show the below information:

 
 


Step: Total number of steps
Time: Duration of timer
Fat: Grams of fat burned
Heat: Heat index advisor (°F)
Speed: Walking speed
Mileage: Total traveled distance

STOPWATCH



Press the Stopwatch Icon on your home screen to access your stopwatch.

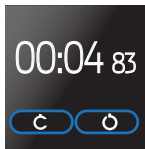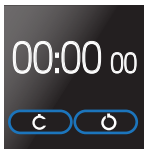

Press the left button to start your stopwatch.



Press it again to click your stopwatch. The stopwatch will keep going, but the time will freeze for you to read it.

Press the right button to reset your stopwatch.



CALLS



Press the Calls Icon on your home screen to access your call history.

ALARM



Press the Alarm Icon on your home screen to set an alarm. Your smart watch can set up to 5 customizable alarms.

BT MUSIC



Press the BT music Icon on your home screen to play music from your smart watch.

Your smart watch will connect to your smart phone or tablet that is playing music. Once it is connected, you can control media from the screen below.



1. Track Name
2. Elapsed Time
3. Remaining Time
4. Lower Volume
5. Increase Volume
6. Previous Track
7. Play/Pause
8. Next Track

CALCULATOR



Press the Calculator Icon on your home screen to access your calculator.

A numeric keypad will appear.
Enter in your desired calculation and press the "=" button to calculate the result.



Press "Clear" to clear your entry.

You can press "Back" to return to your App menu screen.

SLEEP MONITOR



Press the Sleep Monitor Icon on your home screen to monitor your sleep.

A timer will appear. Press "Start" when you are ready to sleep.



If you want to reset the sleep timer, press the "Reset" button.



Each time you wake, the "Results" section will note if your sleep habits are good and uninterrupted or bad and constantly interrupted.

PHONE BOOK



Press the Phonebook Icon on your home screen to access your contacts list.

Please note, you will need to disconnect from "BT music" before your smart watch can access your contacts list. If your smart watch asks you to disconnect, press the Confirm button on the watch frame before proceeding.



Your Phonebook will connect to your phone and show you your contacts list.

The first number is your number. Press it to view details.

Your smart phone will indicate it has begun dialing the selected contact.

Below is a helpful diagram of available buttons and functions to use during a call.



NOTE: The numeric keypad and settings are not available until after a call has been connected.

After the call is connected, you can access a numeric keypad. This is useful if you are on a call that requires you to make numeric selections.

Press the "Numeric Keypad" button and a keypad will appear. Press your desired selection or enter information.

DIALER



Press the Dialer Icon on your home screen to dial numbers from a phone keypad.

A numeric dial-pad will appear.

Enter the number you wish to dial including 1 + area code.

Press the "Delete" button on the bottom right of your watch to delete any mis-entered numbers.



Press the "Call" button on the bottom left of your watch to call the number entered.

BT CAMERA



Press the BT camera icon on your home screen to access the remote shutter button.

BT notice
"Please
install "BT
Notice" app
in remote device

This App can only be used on smart watches paired with Android devices.

Before using, please download the "Fundo Companion" App. See "Settings / QR Code" for installation details.

The BT camera will connect to your Android device's built-in camera and work as a remote shutter button.



You can see a low-resolution preview of your phone's camera.

NOTE: BT camera only accesses the outward facing camera of your Android device. It will not allow you to flip your camera to face yourself to take selfies.

CAMERA



Press the Camera Icon on your home screen to access the built-in 0.08 MP camera.

Press "Options" to view and set your photo options.

ANTI-LOST



Press the Anti-Lost Icon on your home screen to use the watch and phone tracking feature.

 
Some features of this App can only be used on smart watches paired with Android devices. Please see each sub-section for compatibility before proceeding.

ANTI-LOST Looking Phone



Before using this first feature, please download the "Fundo Companion" App. See "Settings / QR Code" for installation details.

Press on "Looking Phone."
Your smart watch will remind you to install "BT Notice" on your Android.

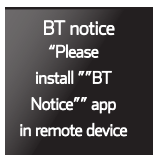

Use "Looking phone" if you want your Smart Watch to locate your Android device.

It will send a push notification using the "Fundo Companion" App on your Android to have your phone ring.



Once your Android is located, you can press the "Return" button on your smart watch frame to return to the previous screen.

On your Android device, you can open the "Fundo Companion" App and have the App locate your smart watch.



Press the 3 lines next to "Home" in the top left corner for the side bar menu to display.

Press "Looking for device" to have your Android locate your smart watch. Your smart watch will ring for you to locate it.

 


Your Fundo Companion App on your phone will ask you if you found your smart watch.

Press "OK" once you have found your smart watch.



Press on "Anti-lost" to set a notification for when your Smart Watch is out of range of your Apple or Android smart phone or tablet.

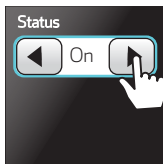

You have the option to turn this alert On or Off.

Use the left and right arrows to set this alert.

SEDENTARY REMINDER



Press the Sedentary Reminder icon on your home screen to set a reminder not to stay seated for too long.

DRINK WATER REMINDER



Press the Drink Water Reminder icon on your home screen to set a reminder to drink water consistently throughout the day.



Once the app is open and the water drop icon shows, use your finger to swipe from right to left on the screen to access the reminder presets.

BATTERY CARE

The lithium-ion battery is built into the device. Do not disassemble the device to remove the battery or attempt to separate it from the device.

- When charging the device, please use the enclosed USB charging cable or otherwise ensure that the battery charging conditions are met.
- Do not connect or attach the device or the battery to a power supply plug or directly to a car's cigarette lighter.
- Do not place the device or batteries near a fire, or into direct sunlight. Heating the device and/or the battery can cause additional heating, breaking, or ignition of the battery inside the device.
- Do not continue charging the battery if it does not recharge within the specified charging time. Doing so may cause the battery to become hot, rupture, or ignite.

To preserve natural resources, please recycle or dispose of batteries properly. This product contains lithium-ion batteries. Local, state, or federal laws may prohibit disposal of lithium-ion batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options.

- Do not attempt to modify, change, or replace your battery.
- Do not use your device if the battery begins to emit odor, overheats, or begins to leak.
- Do not touch any leaking materials or breathe fumes emitted.
- Do not allow children and animals to touch an exposed battery.
- The battery contains dangerous substances, do not open the battery, or insert anything into an exposed battery.

- Please only use the charger provided by Hype®.
- Do not attempt to charge the device if the battery has discharge or emits any substances. In that case, immediately distance yourself from the battery in case of fire or explosion.
- Lithium-ion batteries are considered to be hazardous materials. Please follow all local, state and federal laws in regards to recycling, handling and disposing of Lithium-ion batteries.

SPECIFICATIONS

Bluetooth:	Version 3.0
Display:	1.44 Inch LCD touch screen (3.65 cm)
Resolution:	128 x 128pixels
Charge Time:	Up to 1.5 Hour
Battery:	Built-in 180 mAh Lithium-ion Battery
Talk Time:	Up to 45 Minutes
Standby Time:	Up to 120 Hours
Charging Interface:	Micro USB
Weight:	0.081 lbs. / 0.037 kg.

FCC ID: 2AEW6HYCAMW

BT ID: D022611