

# INSTANT HOT WATER FAUCET\* & HEATING TANK

 

Cat. No.  
I7231  
I7235



## INSTALLATION INSTRUCTIONS



I7235

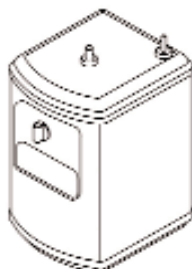

I7231

### REFER TO PARTS LIST ON SHEET 2

- \* **DISPENSER WILL DRIP DURING INITIAL HEAT UP AND DURING USE WHEN TANK IS HEATING MORE WATER. THIS IS NORMAL**
- \* **DO NOT KINK FLEXIBLE SS HOSES**
- \* **MAKE SURE THE TANK OUTLET SUPPLY TUBE HAS NO LOOPS OR LOW AREAS**
- \* **NEVER DISPENSE BOTH HOT AND COLD WATER AT THE SAME TIME**
- \* **NEVER SET TANK TEMPERATURE DIAL TO MAX OR WATER MAY BOIL OUT**

1. MAKE SURE COUNTER HAS A 1 1/4" TO 1 3/8" MINIMUM HOLE AND COUNTER. MAXIMUM 2 1/4" THICK.
2. MAKE SURE ORING ORNB30005 IS IN THE BOTTOM OF ESCUTCHEON. SLIDE THE MOUNTING HOSES THROUGH THE COUNTER.
3. PLACE THE LARGE C WASHER ON THE MOUNTING NIPPLE AND THREAD ON LOCK NUT. MAKE SURE DISPENSER IS ALIGNED PROPERLY AND THE HOT HANDLE IS ON THE LEFT. TIGHTEN THE LOCK NUT.
4. MAKE SURE THE HEATING TANK IS LOCATED SO THAT THE WCD2002 HW TANK HOSE CAN BE CONNECTED DIRECTLY TO THE HEATER WITHOUT ANY EXTENSIONS.

### **INSTALL THE HEATING TANK PER THE INSTRUCTIONS SUPPLIED WITH THE HEATING TANK.**

6. CONNECT WCD2001 SUPPLY HOSE TO AN INLET STOP OR SUPPLY VALVE. DO NOT CONNECT DIRECTLY TO A WATER SUPPLY WITHOUT A SHUTOFF VALVE. **FLUSH** ALL LINES BEFORE CONNECTING.
7. CONNECT THE WCD2002 1/4" COMPRESSION HOSE TO THE TANK INLET LOCATED IN THE RIGHT HAND BACK CORNER ON THE TOP OF THE TANK. SEE FIG 1.
8. INSTALL 550-9100 3/8" COMPRESSION TUBE ASSY ON TANK OUTLET TUBE. DO NOT OVER TIGHTEN.
9. SLIDE CLAMP 5700149 ON THE TANK OUTLET SUPPLY TUBE AND PUSH TUBE ALL THE WAY UP ON THE MOUNTING NIPPLE BARB.
10. CHECK THE CORRECT POSITION AND LENGTH OF THE HOSE SO THAT THERE ARE NO LOOPS OR LOW AREAS WHEN INSTALLED ON THE TANK. CUT THE HOSE IF REQUIRED, SLIP ON CLAMP 5700149 THEN PUSH HOSE ON BARB END OF COMPRESSION TUBE ASSY. THEN SQUEEZE THE CLAMPS TO SECURE. DO NOT OVER TIGHTEN. VERIFY ALL CONNECTIONS ARE TIGHT.
11. **DO NOT PLUG IN HEATING TANK YET!** TURN ON WATER, OPEN HOT SIDE TO FILL TANK. TANK IS FULL WHEN WATER FLOWS FROM DISPENSER. CHECK FOR LEAKS.
12. SET TANK TEMPERATURE DIAL TO 4 O'CLOCK SETTING THEN WAIT 15 MINUTES FOR TANK TO HEAT. ADJUST TO THE TEMPERATURE DESIRED. NEVER SET DIAL TO MAXIMUM TEMPERATURE.

## FINISH CARE & MAINTENANCE

NEVER USE ANY HARSH ALKALI, ACID BASED DETERGENTS OR CLEANERS SUCH AS SOFT SCRUB<sup>®</sup>, SCRUBBING BUBBLES<sup>®</sup> OR COMET<sup>®</sup> TO CLEAN. DO NOT USE BRILLO<sup>®</sup> OR SCOTCH BRITE<sup>®</sup> PADS. THESE WILL ALL HARM THE FINISH. TO CLEAN, USE ONLY A DAMP SOFT CLOTH AND WIPE USING A SOFT CLOTH. STANDARD WINDEX<sup>®</sup> CAN ALSO BE USED SPARINGLY. IT IS NOT NECESSARY TO WIPE HARD TO REMOVE SPOTS. TO MAINTAIN THE FINISH, WIPE WITH A SOFT DRY CLOTH AFTER USE. AN OCCASIONAL COAT OF PURE CARNUBA WAX WITHOUT CLEANERS WILL HELP PROTECT THE FINISH.

## WARRANTY

CONTACT BARCLAY FOR WARRANTY INFORMATION. CLAIMS REQUIRE PROOF OF PURCHASE.

\* LESS THAN 0.25% LEAD

# INSTANT HOT WATER FAUCET & HEATING TANK PARTS LIST

Cat. No.  
17231  
17235

