




## Upholstered Dining Chair CF6022

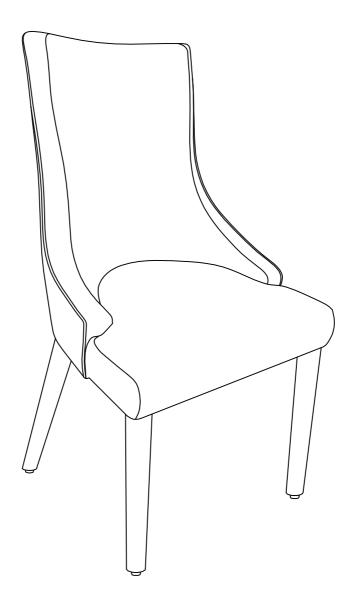

## **PART LIST**

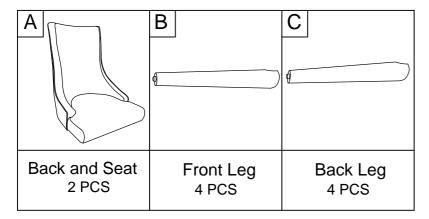


## HARDWARE LIST

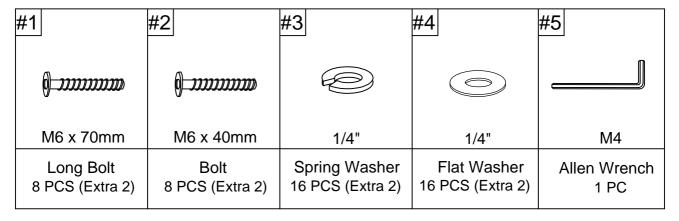

Step 1. Attach front legs (part B) to back and seat (part A) using long bolts (part #1), spring washers (part #3), flat washers (part #4) and allen wrench (part #5).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

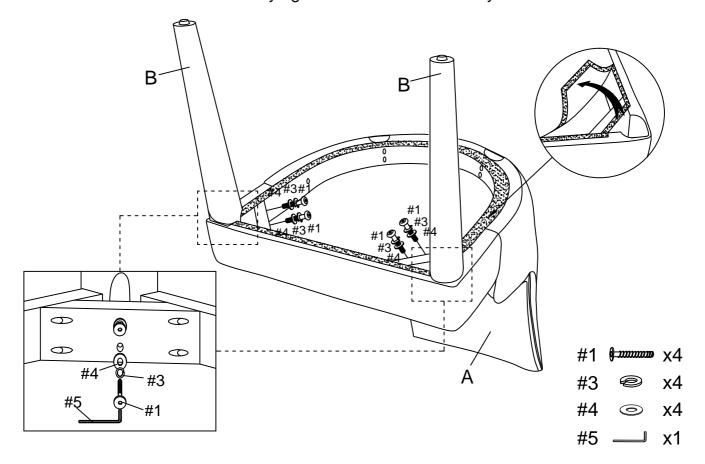

Step 2. Attach back legs (part C) to back and seat (part A) using bolts (part #2), spring washers (part #3), flat washers (part #4) and allen wrench (part #5).

NOTE: Please fully tighten all bolts at this time.

