



Thank you for choosing Sunnydaze Decor. If you have any questions, comments or concerns please feel free to contact us by phone at: **888-881-4668**, by email: customerservice@serenityhealth.com, or you could also email us via our contact us page at: www.SerenityHealth.com/contact_us.php.

We stand behind our brand and the quality of the items we sell. We will send new parts, or replace products at our discretion within the one year warranty period. Before we can help, you will need to provide proof of purchase with the date of purchase and photos of the defective merchandise. We will use the photos to determine the cause of defect and for future quality control.

ASSEMBLY INSTRUCTIONS SHEET

Item No. EOS Easy Open Fire Pit Screen

Prior to assembly, please read these instructions carefully. We suggest you carry out assembly on a soft surface to avoid scratching the paint.

- * Do not discard any of packaging until you have checked that you have all parts.
- * Keep children away during assembly. This item contains small parts which can be swallowed by children.
- * Retain the assembly instructions for future reference.

Parts list:

NO.	Parts	Qty.
A1	Inner mesh Screen	1
A2	Outer mesh Screen	1
H	Handle	2

NO.	Hardware	Qty.
T	Bolts (1/4" x 5/8")	4
U	Washer	4
V	Nut	4
Y	Wrench	1



WARNING:

1. FOR OUTDOOR USE ONLY! NEVER LEAVE FIRE UNATTENDED!

2. Supervise children and pets when the fire pit is in use.
3. The fire pit is designed for cooking or grilling food.
4. **DO NOT** use this unit on a wood deck or on combustible surface such as dry grass, leaves, mulch, etc., and place it no closer than 6 feet from walls during use, or larger distance if required by local regulations.
5. Keep flames small and no more than 3" above the surface of the stone pit.
6. Please put a raincover cover on this screen or take it to indoor in order to extend the service life

CAUTIONS:

1. Burn only wood or charcoal in the fire pit. **DO NOT** use gasoline or kerosene to start the fire in your fire pit.
2. **Do not** touch the outside of your fire pit or screen while it is in use.
3. Use the poker to move the handle of the fire screen during use.
4. Always have a fire extinguisher handy before, during and after use.
5. **Do not** extinguish your fire pit with water. The water cause distortion, rust or flaking paint. Use fire extinguisher or allow attended fire to die out on it's own.
6. **Do not** use in inclement weather.
7. Allow handle(s) to cool before touching them.
8. When removing the screen from the fire pit, use caution to avoid swinging parts. Lift by both handles.

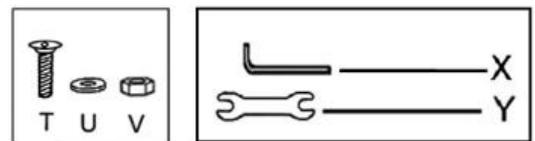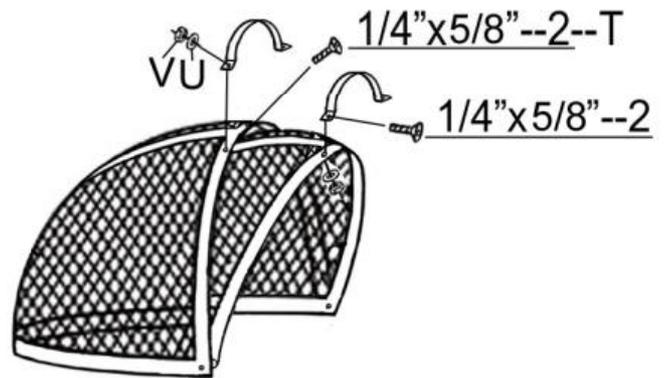

Assembly Instructions:

Tools required: Hex wrench (Y) provided in package.

Phillips head screwdriver not included.

DO NOT FULLY TIGHTEN THE BOLTS UNTIL STEP 3 BELOW IS COMPLETE.

1. Attach the handle (H) to Outer mesh screen (A1) using 2 bolts (T), 2 Washers (U) and two nuts (V).
2. Attach the handle (H) to Inner mesh screen (A2) using 2 bolts (T), 2 Washers (U) and two nuts (V).

Care And Maintenance:

1. To maintain the finish, clean the surface by using a soft cloth. Do not use a metal brush.
2. If metal is scratched, the mesh screen may need touch up painting. Ask your local paint store representative which paint is best for your type of fire pit. To prevent rusting, coat the exposed surface immediately.
3. **Please use a raincover to cover the screen after screen chill-down, do not make the screen touch the rain.**