



All products are trademarks of Nostalgia Products Group, LLC.
Worldwide design & utility patented or patents pending.
© 2011 Nostalgia Products Group, LLC.

www.nostalgiaelectrics.com

(rev. 04/25/11)



SCC200

Vintage Collection™ Old Fashioned Snow Cone Cart

Instructions and Recipes



CONTENTS

IMPORTANT PRECAUTIONS	3
IMPORTANT SAFEGUARDS	3
INTRODUCTION	4
PARTS & ASSEMBLY	5
HOW TO OPERATE	10
HELPFUL TIPS	11
CLEANING & MAINTENANCE	11
RECIPES	13
RETURNS & WARRANTY	15

SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications:

120 Volts, 60 Hz

100 Watts, ETL Approved

IMPORTANT PRECAUTIONS

1. NEVER immerse in water.
2. NEVER use near water.
3. NEVER use an abrasive sponge or cloth.
4. NEVER use a scouring pad on the appliance.
5. NEVER leave appliance unattended while in use.
6. NEVER try to force the cover in the locking mechanism.
7. Unplug unit from outlet when not in use and during cleaning.
8. DO NOT operate this appliance with a damaged cord or plug, or if the appliance ever malfunctions.
9. DO NOT clean any parts of this appliance in a dishwasher.
10. Keep out of reach of children.
11. This appliance is NOT A TOY.
12. Unsupervised young children and cognitively challenged individuals should never operate this appliance.
13. Young children should be supervised while in proximity of the appliance to ensure that they do not play with it.

IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using electrical appliances, including the following:

1. Read all instructions before operating this appliance.
2. Keep hands away from blade mechanism. Use handles or knobs.
3. Avoid contact with moving parts. NEVER put fingers or utensils into feed or discharge areas.
4. To protect against electrical shock do not immerse cord, plug or any part of this appliance in water or other liquids.
5. Close supervision is necessary when any appliance is used near children.
6. Unplug from outlet when not in use, before removing parts and before cleaning.
7. DO NOT operate any appliance with a damaged cord or plug, or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination or repair.
8. Do not attempt to service this appliance yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
9. The manufacturer does not recommend the use of accessory attachments. Use of accessory attachments may cause injuries.
10. DO NOT use outdoors.
11. Position the appliance as close to the outlet as possible

to prevent injury due to tripping over cord.

12. Extreme caution must be used when moving this appliance.
13. DO NOT use the appliance for other than its intended use.
14. An appliance that is plugged into an outlet should not be left unattended while in operation.
15. Check Ice Hopper for presence of foreign objects prior to use.
16. Blades are extremely sharp. Use with extreme caution.
17. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
18. Longer detachable power supply cords can be used if care is exercised in their use.
19. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance.
20. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SAVE THESE INSTRUCTIONS!

INTRODUCTION

The OLD FASHIONED SNOW CONE CART marries the best of both worlds: vintage appeal with the convenience of a modern appliance. Use ice cubes from your own freezer to shave and craft refreshing snow cones for any occasion. The handy storage compartment is ideal for storing syrups, extra cones and other supplies. Standing 53" tall, this snow cone cart is perfect for large groups, parties and events such as fundraisers.

With endless flavor varieties, snow cones have always been incredibly fun to eat. Use the machine to create mounds of shaved ice for smoothies, fruit-flavored slushies, other dessert treats, or to chill beverages. See the recipe section of this manual for more fun ideas on how to enjoy your OLD FASHIONED SNOW CONE CART.

 
Features include:

- Tempered Windows
- Wheels and Cart Handle for easy portability
- Storage Compartment
- Cone Dispenser
- Cone Holder

PARTS & ASSEMBLY

Please ensure that you have removed all of the hardware and parts listed before discarding packaging. In our efforts to reduce packaging, we maximize the packing material to protect your new purchase. As a result, small parts may not be readily visible.

Hardware



#1 Screw (8mm)
Qty. 4



#2 Screw (8mm)
Qty. 6



 
#3 Bolt (25mm)
Qty. 4



#4 Bolt (60mm)
Qty. 4



#5 Flat Washer
Qty. 6

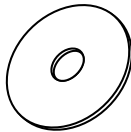


#6 Flat Washer
Qty. 4




#7 Nut Cap
Qty. 6

 Parts

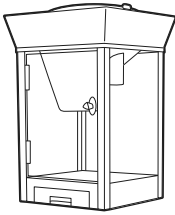

 (A) Main Unit

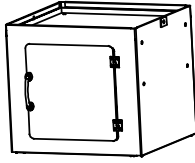


(B) Storage
Compartment




(C) Disassembly
Tool



 
(D) Ice Shovel

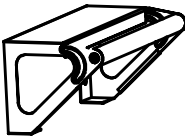

 
(E) Push Handle

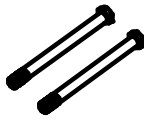

 
(F) Axle Bolts

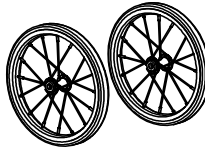

 
(G) Wheels



 
(H) Wrenches

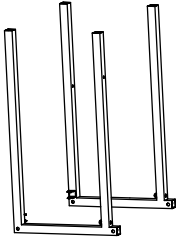

 
(I) Base Support



 (J) Bottom Plate



 
(K) Cross Bar

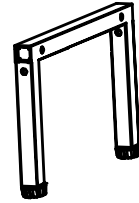

(L) Leg Assembly



 
(M) Cone Dispenser




(N) Cone Holder

Assembly of Base Support

 
1. Attach Push Handle (E) from inside Storage Compartment (B) using supplied #1 Screws.

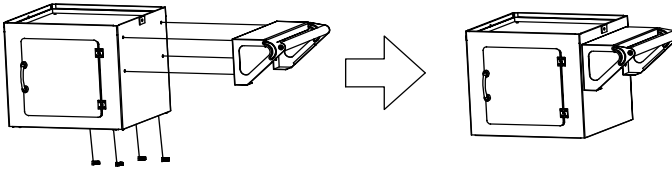

 2. Insert Cross Bar (K) into the square inserts on the inside of Base Support (I) and secure from below with two #2 Screws. Insert the Leg Assembly (L) over the protruding ends of the Base Support (I) and fasten from the inside of Base Support (I) using four #4 Bolts, four #5 Flat Washers, and four #6 Nut Caps.

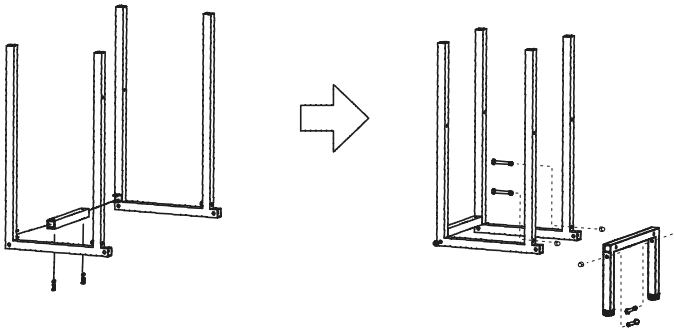


 3. Secure Bottom Plate (J) to Base Support (I) using four #2 Screws.
4. Assemble Base Support (I) into the bottom of the Storage Compartment (B) and secure with four #3 Bolts.

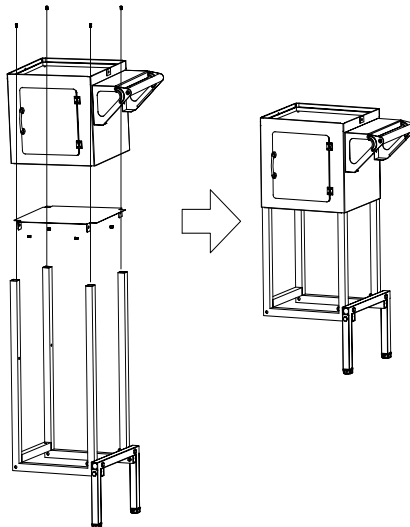


Assembly of Wheels

 1. Slide one #4 Flat Washer onto Axle Bolt (F) and insert Axle Bolt (F) into Wheel (G).
2. Put on one #5 Flat Washer. Insert Axle Bolt (F) with Wheel (G) into Base Support (I).
3. Add a second #5 Flat Washer and #6 Nut Cap. Use Wrench (H) to tighten the #6 Nut Cap.
4. Repeat steps to attach second Wheel (G) onto the other side of the Base Support (I).

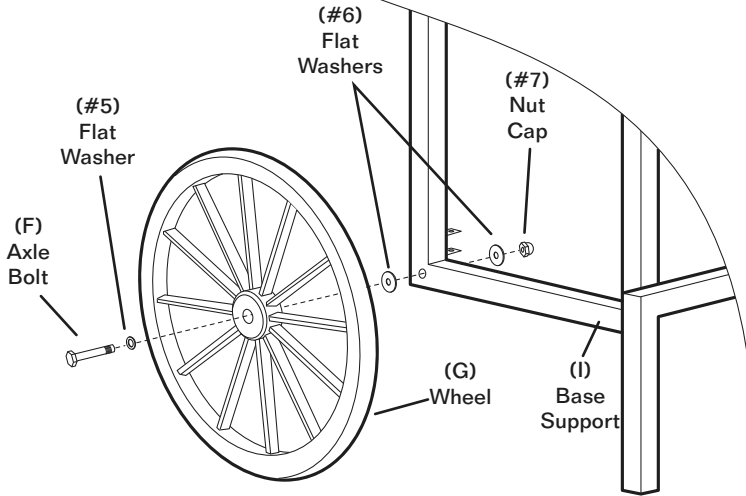

Locking Main Unit to Storage Compartment

 Place the Main Unit (A) onto the Storage Compartment (B) so that the two side holes match up. Lock by tightening the Lock Screws as shown below:

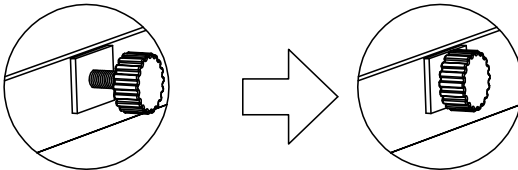

Attaching Cone Holder

Attach Cone Holder (N) to opposite side of Cart Handle or opposite side of Base Door.



Attaching Cone Dispenser

1. Screws have already been screwed into pre-drilled holes on the side of Main Unit (A).



 
2. Line up the two holes of Cone Dispenser (M) with the two screws and hang Cone Dispenser (M). Slide Cone Dispenser (M) down so that screws fit snugly in slots on Cone Dispenser (M).



3. Tighten screws, but do not overtighten.



HOW TO OPERATE

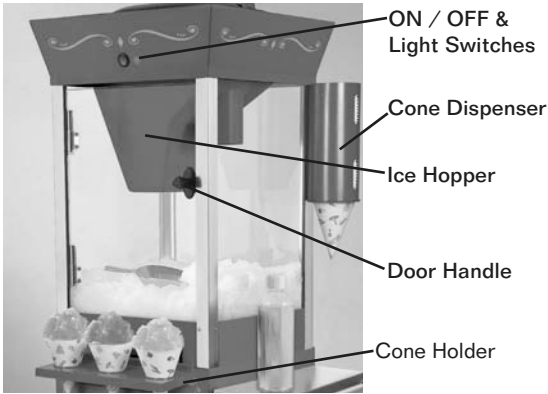

Before first use, clean the inside of the unit by wiping with a moist, non-abrasive sponge, towel or cloth and then wipe with a non-abrasive dry towel.

1. First, find a flat surface near an electrical outlet before starting. Make sure your cord is away from any water source. It is acceptable to use an extension cord if needed.
2. Before plugging in the unit, add ice cubes by removing the clear lid from the Main Unit of your OLD FASHIONED SNOW CONE CART. To remove the lid, simply push the release button on the lid, lift and remove.
3. Plug in the appliance while switch is flipped to OFF position.
4. When ice cubes are ready, place cubes in the shaving unit while allowing enough room for the lid to be placed back on the unit easily. Never force it shut.
5. Return the clear lid to the unit and turn the power button to the ON position. This will activate the unit to begin shaving. Please note that the ice will not shave unless the lid is properly secured.
6. Repeat steps 2 and 3 until you have shaved the amount of ice desired. Turn unit OFF and then unplug when you are finished.
7. Once you have the desired amount of ice, open the housing door on the Main Unit to retrieve your ice and create your favorite snow-based treats!

HELPFUL TIPS

Ice

 
For optimal ice shaving results, ice cubes should sit out of the freezer, in a bowl, for about 10 minutes before putting them into the shaving unit. If ice is frosty in appearance, it is too hard to shave. When ice is clear and wet to the touch, then it is ready to shave.

CLEANING & MAINTENANCE

1. Make sure appliance is turned off and unplugged before cleaning.
2. Open the housing door to clean and dry the inside of the unit using a slightly damp, non-abrasive cloth or sponge.
3. Wipe the outside of the unit using a slightly damp, non-abrasive cloth or sponge, then dry with a non-abrasive towel.
4. The shaving unit and clear lid are dishwasher safe. To take out the shaving unit, refer to steps on page 11.

Replacing the Blade

When your OLD FASHIONED SNOW CONE CART blade becomes dull after a long period of normal use, replace it with the included Replacement Blade and Tool. Should you need additional blades, you can order them directly from the manufacturer.

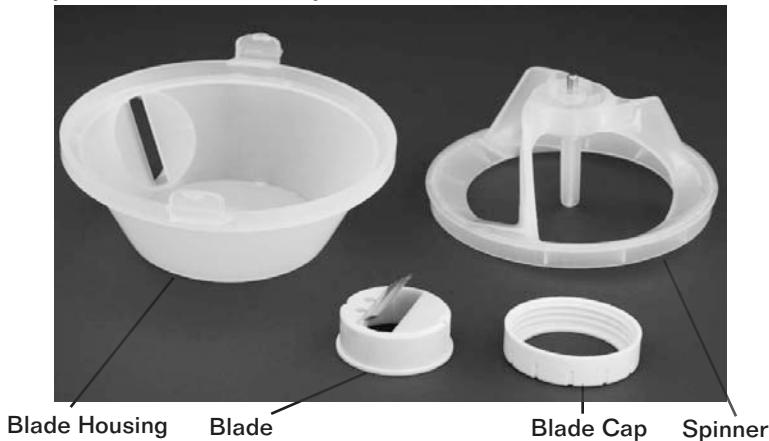


⚠ The blade is VERY sharp. Use EXTREME CAUTION when handling.


Steps to replace the blade are on the next page.

Steps to Replace the Blade

 
1. Remove the Ice Tray and insert the Disassembly Tool (C) over the three arms of the Spinner.

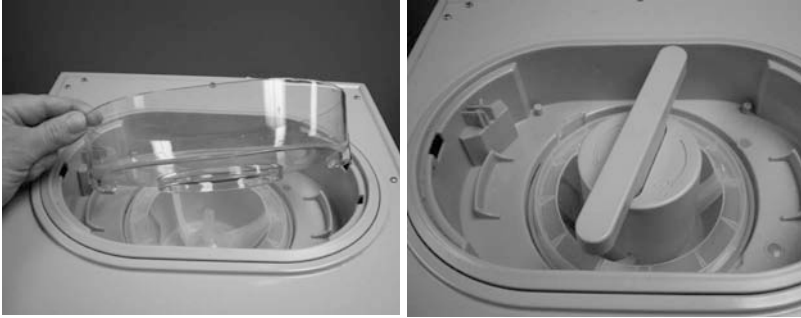

 2. Once the Disassembly Tool (C) is properly inserted, twist counter-clockwise (as the arrow shows) and lift the Spinner out.

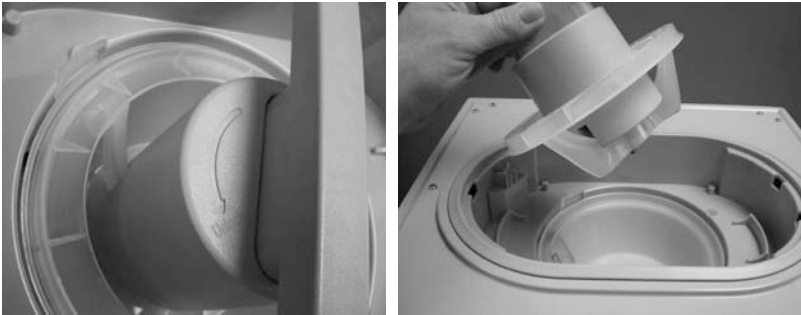

 3. Carefully press the tabs of the Blade Housing inward and lift up to release.

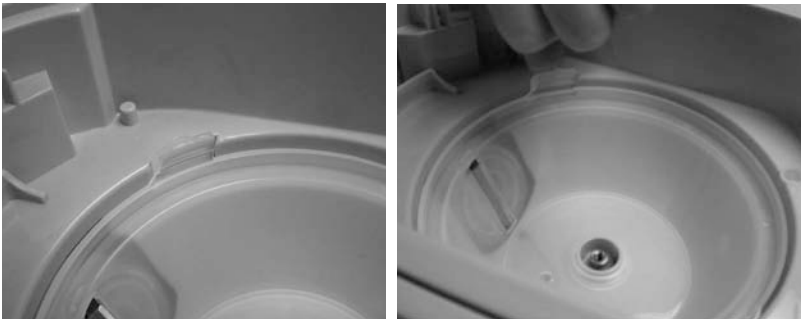

4. Twist off the Blade Cap and, using extreme caution, remove the Blade Cartridge. Insert the replacement Blade Cartridge, and reverse the above steps to reassemble. **USE EXTREME CAUTION. BLADE IS VERY SHARP.**
5. When replacing the Spinner, reverse all steps and make sure to lock Spinner using the Disassembly Tool.

RECIPES

The OLD FASHIONED SNOW CART makes light, fluffy mounds of ice. Use your imagination with different fruits, syrups, sodas, teas, and juices to create any number of refreshing, icy, low-fat treats, drinks and desserts. Enjoy your shaved ice in a variety of ways.

BOTTLED SYRUP CONCENTRATE

- 19 Ounces of Warm Water
 - 2¾ Cups Sugar
 - 1-Quart Empty Bottle
 - 1 Ounce of Food Coloring
- Put 19 ounces of warm water into a one quart, or larger, bottle.
- Using a funnel, add 2 ¾ cups of sugar to the water. (equals 1¼ pounds of sugar)
- Screw cap on tightly. Shake bottle until sugar dissolves.
- Add 1 ounce of food coloring. Shake until mixed.
- Now you can add your favorite flavor to syrup.
- *To make sugar free concentrate, substitute sugar for your choice of powdered sugar substitute.

SOUR SYRUP

- 1 Quart Simple Syrup
 - 1 Ounce Liquid Citric Acid
 - 1 Ounce Flavor Concentrate
 - 1 Ounce Food Coloring
- Put 1 ounce of liquid citric acid and 1 ounce of flavor concentrate (grape, cherry, strawberry, watermelon, apple or lemon work well) into a one quart, or larger, bottle.
- Fill the rest of the bottle with simple syrup (you can use the recipe above for bottled syrup concentrate).
- Add one ounce of food coloring.
- Screw cap on tightly. Shake bottle until well mixed.

CHOCOLATE SYRUP

- 15 Ounces Simple Syrup
 - 15 Ounces Chocolate Syrup
- Pour ingredients into a 1 quart or larger bottle.
- Screw cap on tightly. Shake bottle until well mixed.

CREAM SYRUP

- Simple Syrup
 - 4 Ounces Evaporated Milk
 - 1 Ounce Flavored Syrup
- Pour 4 ounces of evaporated milk into 1 quart bottle.
- Top off with simple syrup.
- Add 1 ounce of flavoring.
- Screw on cap and shake until well mixed. Keep refrigerated.

PEACH SPRITZER

- 2 Cups Peach Seltzer
 - 2 Tbsps. Freshly Squeezed Orange Juice
 - 1 Packet of Sugar Substitute
- Fill a cup halfway with freshly shaved ice.
 Pour peach seltzer and orange juice over ice.
 Empty packet of sugar substitute into cup.
 Stir until well blended.
 Add additional ice if desired, until cup is full.
 Serves one.

VANILLA SNOW

- 3 Scoops of Vanilla Ice Cream
 - Shaved Ice
 - Vanilla Flavored Syrup
- Put scoops of ice cream in a bowl.
 Shovel shaved ice over ice cream to create a mound.
 Squirt vanilla flavored syrup over shaved ice and serve.
 Try this recipe with other ice cream and syrup flavors for fun.

ROOTBEER FLOAT SLUSH

- Shaved Ice
 - Rootbeer
 - 2 Scoops Vanilla Ice Cream
 - Chilled Beer Mug
- Freeze a beer mug until it is cold and frosty.
 Put 2 round scoops of vanilla ice cream into beer mug.
 Scoop shaved ice into mug, leaving three fingers of space at the top.
 Pour root beer into mug until full.
 Serves one.

FROZEN MARGARITA

- 1 Cup Shaved Ice
 - 3 Ounces Tequila
 - 1 Ounce Triple Sec
 - 2 Ounces Lime Juice
 - 1 Lime Wedge
 - 2 Teaspoons Coarse Salt
- Put salt in a saucer. Rub rim of margarita glass with a lime wedge and dip glass into salt, coating rim thoroughly. Set lime aside.
 Fill margarita glass with shaved ice.
 Pour tequila, triple sec and lime juice into glass.
 Stir well and garnish with lime wedge.
 Serves one.

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IS DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

OLD FASHIONED SNOW CONE CART / SCC200

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products Group LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685
Customer Service
Phone: (920) 347-9122
Web: www.nostalgiaelectrics.com

Customer Service Inquiry

To submit a Customer Service inquiry, go to www.nostalgiaelectrics.com and fill out the Customer Service Inquiry form and click the Submit button.

A representative will contact you as soon as possible.

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. In order to obtain service under this warranty, please contact Nostalgia Products Group, LLC at the telephone number listed above or by filling out the Customer Service Inquiry Form located at www.nostalgiaelectrics.com.

This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.

