

READ AND FOLLOW ALL SAFETY STATEMENTS, WARNINGS,
ASSEMBLY INSTRUCTIONS AND USE & CARE DIRECTIONS BEFORE
ASSEMBLING OR USING THIS PRODUCT.



WARNING



- OUTDOOR USE ONLY. NEVER USE IN ENCLOSED AREA. USE IN UNVENTILATED AREAS WILL ENDANGER YOUR LIFE.
- DO NOT USE THIS UNIT ON OR NEAR COMBUSTIBLE SURFACES OR STRUCTURES SUCH AS WOOD OR COMPOSITE DECKS, DRY LEAVES OR GRASS, MULCH OR VINYL OR WOOD SIDING, ETC.
- USE ON LEVEL, NON-COMBUSTIBLE SURFACE ONLY.
- KEEP AWAY FROM ALL COMBUSTIBLE MATERIALS INCLUDING GASOLINE AND OTHER FLAMMABLE LIQUIDS AND VAPORS.
- NEVER USE FLAMMABLE ACCELERANTS, SUCH AS: GASOLINE, ALCOHOL, PAINT THINNERS, KEROSENE, ETC. TO START A FIRE. SERIOUS INJURY OR PROPERTY DAMAGE COULD RESULT.
- SCREEN WILL BECOME HOT WHEN IN USE! FAILURE TO WEAR PROTECTIVE GLOVES MAY LEAD TO INJURY.
- KEEP AWAY FROM HOUSE, GARAGE, BALCONIES, OR OVERHANGS.
- AVOID USING DURING DRY OR WINDY CONDITIONS.
- KEEP OUT OF REACH OF CHILDREN.
- DO NOT OVERFILL OR USE TO BURN LEAVES OR TRASH.
- EXERCISE THE SAME CARE YOU WOULD WITH AN OPEN FIRE.
- NEVER LEAVE UNIT UNATTENDED WHILE HOT OR IN USE.
- DO NOT ATTEMPT TO MOVE FIRE PIT WHILE HOT OR IN USE.
- COMPLETELY EXTINGUISH FIRE BEFORE LEAVING.
- ASHES CAN REMAIN HOT FOR A LONG TIME AFTER FIRE IS EXTINGUISHED. DISPOSE OF COLD ASHES PROPERLY.
- ANY MODIFICATION OF THE UNIT WILL VOID PRODUCT WARRANTY.



WARNING



- NOT FOR USE BY CHILDREN
- DO NOT TOUCH OR ALLOW CHILDREN NEAR FIRE BOWL
- BOWL AND SCREEN ARE HOT DURING AND AFTER USE
- DO NOT USE INDOORS OR ON DECKING
- NEVER LEAVE FIRE UNATTENDED
- NEVER USE GASOLINE, KEROSENE OR ANY OTHER EXPLOSIVE FUEL
- DO NOT USE THIS UNIT ON WOOD OR COMPOSITE DECKING OR ON ANY OTHER COMBUSTIBLE SURFACES SUCH AS ASPHALT, DRY GRASS, LEAVES, MULCH, ETC.
- DO NOT USE THIS UNIT NEAR HEAT SENSITIVE OR COMBUSTIBLE STRUCTURES OR MATERIALS SUCH AS VINYL, OR WOOD SIDING
- CONTACT YOUR LOCAL AUTHORITIES REGARDING POSSIBLE BURN RESTRICTIONS BEFORE USING THIS PRODUCT
- ONLY APPROVED FOR BURNING: WOOD, FIRE LOGS, PAPER, CHARCOAL



IMPORTANT



- WIPE OFF RESIDUAL MANUFACTURING OILS ON BOWL BEFORE FIRST USE.
- COPPER, STAINLESS STEEL, AND PAINTED BOWL SURFACES WILL DISCOLOR AFTER USE. THIS IS NORMAL AND EXPECTED.
- REMOVE COOLED ASHES FROM BOTTOM OF BOWL AFTER EACH USE.
- STEEL PARTS ARE PAINTED WITH A DURABLE HI-TEMP FINISH, BUT RUSTING WILL OCCUR OVER TIME DUE TO HEAT AND MOISTURE EXPOSURE.
- AS WITH ANY OUTDOOR GRILL, SEASONAL MAINTENANCE IS REQUIRED TO RETURN PAINTED STEEL SURFACES TO ORIGINAL APPEARANCE. REMOVE ANY SURFACE RUST WITH SANDPAPER OR STEEL BRUSH AND REPAINT WITH GRILL PAINT SUITABLE FOR HIGH-TEMPERATURE SURFACES.
- SURFACE RUST, CORROSION OR PAINT CHIPPING ON STEEL PARTS IS NOT CONSIDERED A MANUFACTURING DEFECT.
- STORE IN DRY LOCATION WHEN NOT IN USE FOR LONG PERIODS OF TIME.