




INSTRUCTION MANUAL

1 Light Mini Pendant in Brushed Nickel / Polished Nickel Finish

Home Depot SKU xxx-xxx (UPC xxxxxxxxxxxxx)
(Brushed Nickel /Polished Nickel Fixture)

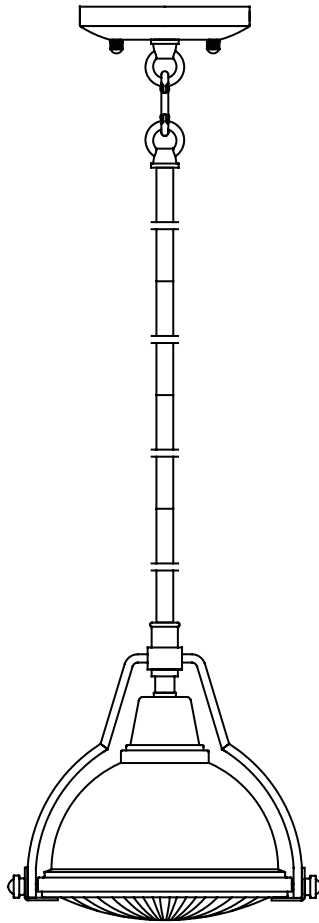

Thank you for purchasing this Hampton Bay interior light fixture. This product has been manufactured with the highest standards of safety and quality.

FEATURES:

1. Traditional 1 Light Mini Pendant in Brushed Nickel/Polished Nickel Finish.
2. Timeless Elegant Design.
3. Easy to assemble and install.

QUESTIONS, PROBLEMS, MISSING PARTS:

Before returning to your local Home Depot, please call our Customer Service Team at 855-HD-Hampton or visit www.homedepot.com. Please reference your SKU (xxx-xxx Brushed Nickel Finish) or UPC (xxxxxxxxxxxxx Brushed Nickel fixture).

CAUTION:

1. Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.
2. **CONSULT A QUALIFIED ELECTRICIAN IF YOU HAVE ANY ELECTRICAL QUESTIONS.**
3. If you have any non-electrical questions about this fixture, please contact our Customer Service Team at 855-HD-Hampton or visit www.homedepot.com. Please reference your SKU (xxx-xxx Brushed Nickel fixture) or UPC (xxxxxxxxxxxxx Brushed Nickel fixture).
4. Keep your receipt and these Instructions for Proof of purchase.

TOOLS REQUIRED FOR ASSEMBLY & INSTALLATION (not included):




Safety Goggles




Electrical Tape




Wire Strippers

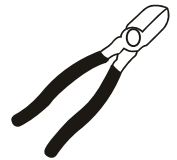

Wire Cutters

 

Flathead
Screwdriver

 

Phillips
Screwdriver



Step Ladder

PARTS INCLUDED FOR ASSEMBLY (parts are not to scale):



2 Loop (#3)



1 Quick Link (#4)



4 Bar (#5)



 
1 Glass (#7)



1 Glass Holder (#8)



2 L Clip (#9)




2 Stud Screw (#10)

ASSEMBLY INSTRUCTIONS:

1. Shut off power at the fuse box or circuit breaker box, if necessary remove old fixture and all mounting hardware from outlet box.
2. Carefully unpack your new fixture and lay out all the parts on a clear area, take care not to lose any small parts necessary for installation.
3. Determine length desired and thread Bar (#5) to Loop (#3) and Fixture Body (#6) to the desired length.
4. Unscrew the Stud Screw (#10) from Fixture Body (#6) and unpack Glass Holder (#8) and L Clip (#9) from Fixture Body (#6).
5. Install a Light bulb (not provided) in accordance with the fixture's specifications (**DO NOT EXCEED THE MAXIMUM WATTAGE RATING**).
6. Refer to the **ASSEMBLY** diagram, with the help of another person to hold the weight of lighting fixture, carefully place the Glass (#7) into the Glass Holder (#8), aligning with the mounting holes of the L Clip (#9), Fixture Body (#6), Glass Holder (#8) and secure with the Stud Screw (#10).
7. Attach the loop (#3) on the top of Bar (#5) to the Quick link (#4).

ASSEMBLY:

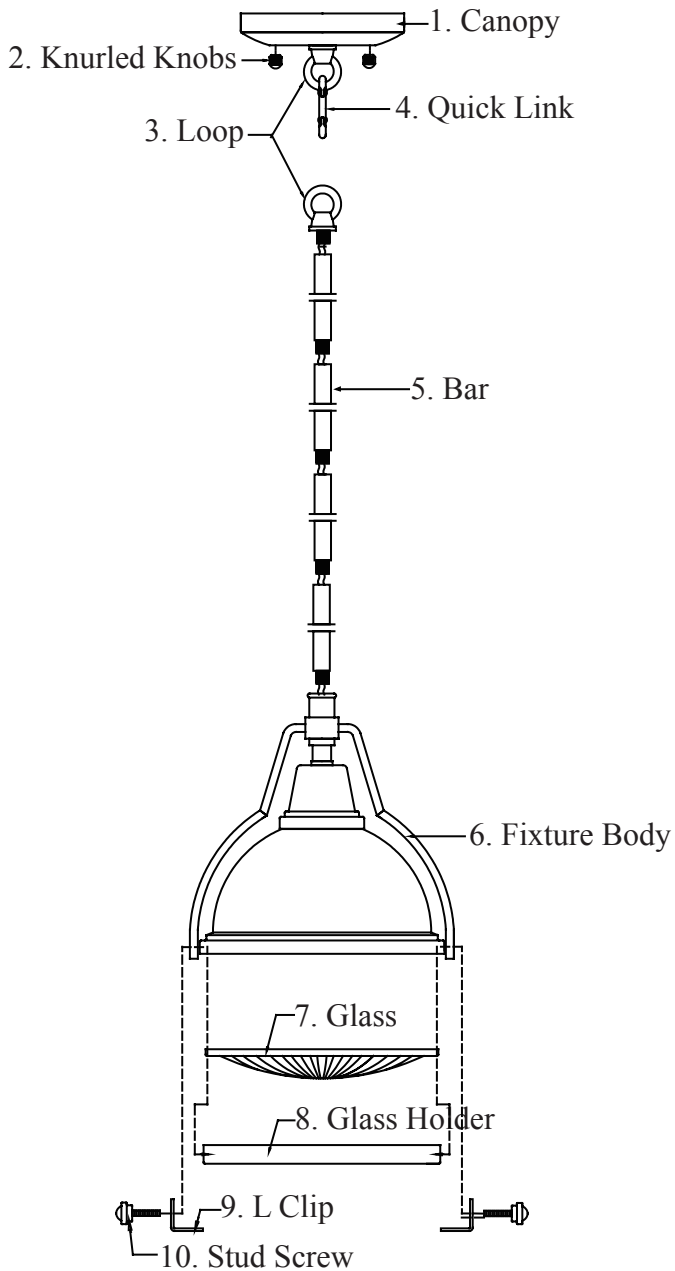

PARTS INCLUDED FOR INSTALATION (parts are not to scale):



1 Ground Screw (#16)



2 Mounting Screws (#11)



2 Outlet Box Screws (#12)



3 Wire Connectors (#14)



1 Crossbar (#15)




2 Knurled Knobs (#2)

INSTALATION INSTRUCTIONS:

1. Attach the Crossbar (#15) to the Outlet box using Outlet Box Screws (#12) from the outlet box. The side of the Crossbar with “GND” marked on it and two convex points must face out.
2. Secure Canopy (#1) by threading Mounting Screw (#11) 1/4” into the pre-drilled holes in the Crossbar (#15) spaced at the same distances apart as the holes in the Canopy (#1).
3. While holding the Canopy (#1) toward the ceiling, connect the ribbed wire from the fixture to the Neutral wire from the Outlet Box (#13) and the smooth wire from the fixture to the hot wire from the Outlet Box (#13). Cover the two wire connections using the two provided Wire Connectors (#14). Wrap the two wire connections with electrical tape for a more secure connection. If your outlet box has a ground wire (green or bare copper), connect fixture’s ground wire to it using the wire connector (#14). Otherwise connect the copper ground from the fixture to Ground Screw (#11) on the Crossbar (#15). **Note: If you have electrical questions, consult your local electrical code for approved grounding methods.**
4. Mount the Canopy (#1) on the ceiling by aligning the protruding Mounting Screws (#11) all the way through the holes on the Canopy (#1). Be careful not to pinch any of the wires between the fixture and the Outlet Box (#13). Tighten the fixture to the ceiling by screwing the two Knurled Knobs (#2) onto the two protruding Mounting Screws (#11).
5. Installation is completed. Turn on the power at the circuit breaker or fuse box. Turn the light switch on to activate the fixture.

INSTALATION:

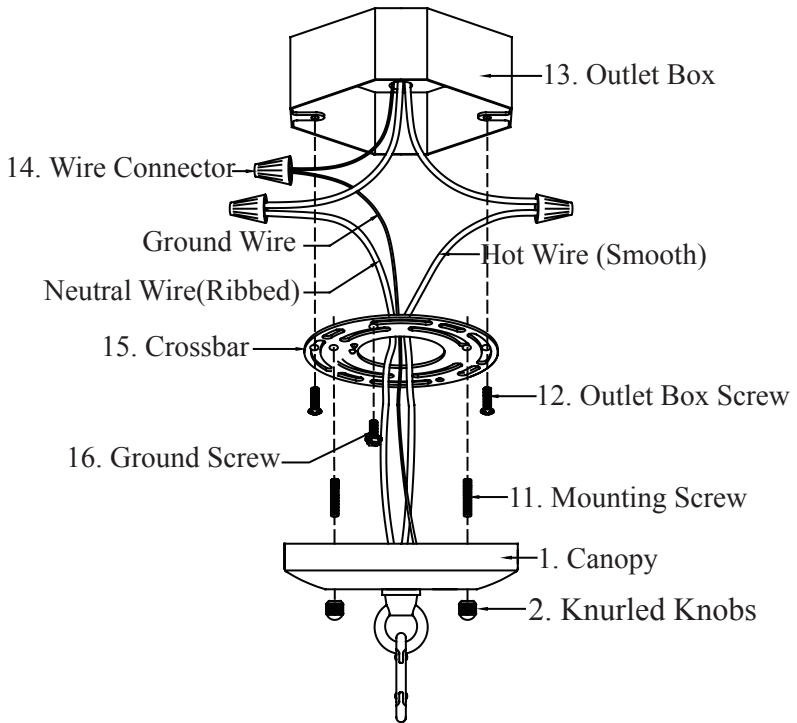

TROUBLESHOOTING:

	Possible Cause	Corrective Action
Bulb will not light.	1. Bulb is burned out.	1. Replace light bulb.
	2. Power is off.	2. Make sure power supply is on.
	3. Faulty wire connection.	3. Check wiring.
	4. Faulty switch.	4. Test or replace switch.
Fuse blows or circuit breaker trips when light is turned on.	Crossed wires or power wire is grounding out.	Check wire connections.

PRODUCT MAINTENANCE:

1. To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the glass and surface of the fixture.
2. To clean the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the inside glass and interior surface of the fixture.
3. Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.

LIMITED WARRANTY

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear.

The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor / expense costs involved in the replacement or repair of said product.