MODERN FORMS SMART FANS

WYND 42" & 52" FR-W1801-42L; FR-W1801-52L

INSTALLATION INSTRUCTIONS







 












All Modern Forms Smart Fans are:



Durably finished and Rated for interior and exterior use



SMART

Able to coordinate with smart devices for voice-activated and thermostat control



Wet location-listed to the strictest ETL/cETL safety regulations



Quiet, reliable, and up to 70% more efficient than AC fans



Wi-Fi and RF enabled for unlimited control

APP INSTRUCTIONS AND SMART HOME DEVICE INTEGRATION modernforms.com/mfappins



FREE APP DOWNLOAD

Sync with our exclusive Modern Forms app to control fan speed, use smart features like Adaptive Learning, create groups and reduce energy costs







RF WALL CONTROL F-WC-WT Included with each fan 6 Fan speeds Dims light to 1% ON/OFF



WIFI TOUCH PANEL WALL CONTROL F-TS-BK Black F-TS-WT White Sold separately Full app control

TABLE OF CONTENTS

| 1 SAFETY RULES | 4. |
|--|-----|
| 2 FTC ENERGY GUIDE & SPECIFICATIONS | 5. |
| 3 TOOLS AND MATERIALS REQUIRED | 5. |
| 4 PACKAGE CONTENTS | 6. |
| 5 MOUNTING OPTIONS | 7. |
| 6 HANGING THE FAN | 8. |
| 7 MAKING THE ELECTRICAL CONNECTIONS | 11. |
| 8 INSTALLING THE WALL CONTROL | 13. |
| 9 FINISHING THE INSTALLATION | 15 |
| 10 ATTACHING THE FAN BLADES | 16 |
| 11 INSTALLING THE ADAPTER PLATE | 16 |
| 12 INSTALLING THE LED LUMINAIRE MODULE | 17 |
| 13 WALL CONTROL OPERATING INSTRUCTIONS | |
| 14 APPLICATION | 21. |
| 15 TROUBLESHOOTING | |
| 16 ACCESSORIES | 23 |

1. SAFETY RULES

For operation, maintenance, and troubleshooting information, visit modernforms.com/help.

- To reduce the risk of electric shock, ensure electricity has been turned off at the circuit breaker or fuse box before beginning.
- All wiring must be in accordance with the National Electrical Code "ANSI/NFPA 70" and local electrical codes. Electrical installation should be performed by a qualified licensed and insured electrician.
- The outlet box and support structure must be securely mounted and capable of reliably supporting a minimum of 35 lbs (15.9 kg). Use only UL-listed outlet boxes marked "FOR FAN SUPPORT."
- 4. The fan must be mounted with a minimum of 7 ft. (2.1m) clearance from the trailing edge of the blades to the floor.
- 5. Avoid placing objects in the path of the blades.
- 6. To avoid personal injury or damage to the fan and other items, be cautious when working around or cleaning the fan.
- Do not use chemicals when cleaning the fan or fan blades.
 A dry dust cloth or lightly dampened cloth will be suitable for most cleaning.
- After making electrical connections, spliced conductors should be turned upward and pushed carefully up into the outlet box. The wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet

box and ungrounded conductor on the other side of the outlet box.

9. All set screws must be checked and re-tightened where necessary before installation.

WARNING: To reduce the risk of electric shock, this fan must be installed with the supplied wall control, or controlled from the Modern Forms app or wall panel.

WARNING: To reduce the risk of personal injury, do not bend the blade arms (also referred to as flanges), when installing the brackets, balancing the blades or cleaning the fan.

WARNING: Do not insert foreign objects between rotating fan blades.

WARNING: To reduce the risk of fire, electric shock or personal injury, mount the fan to the outlet box marked acceptable for fan support with the screws provided with the outlet box.

NOTE: For use only with light kits marked "Suitable for use in wet locations." Maximum of 12 fans can operate on a circuit through an on/off switch or breaker when utilizing the app for the fan control (without the wall control in the circuit).

NOTE: Maximum of 2 fans can operate on a circuit through the wall control.

2. FTC ENERGY GUIDE & SPECIFICATIONS


| FAN | FAN SIZE | VOLTS | N.W (lbs) | G.W (lbs) | STANDARD | ELECTRICITY | AIR FLOW | ENERGY COSTS* | FAN EFFICACY | | | | | | |
|--------|----------|-------|--------------|--------------|------------------|-------------|----------|---------------|--------------|-------|------------|-----|----------|--------|-----------|
| Wvnd | 42" | 120 | 15 22 | 15 22 | 15.32 | 15 22 | 15 22 | 15 22 | 15 22 | 19.62 | High Speed | 29W | 4888 CFM | \$8/yr | 170 CFM/W |
| vvyriu | 42 | 120 | 13.32 | 19.02 | Weighted Average | 23W | 2968 CFM | \$6/yr | 129 CFM/W | | | | | | |

| FAN | FAN SIZE | VOLTS | N.W (lbs) | G.W (lbs) | STANDARD | ELECTRICITY | AIR FLOW | ENERGY COSTS* | FAN EFFICACY |
|--------|----------|-------|--------------|--------------|------------------|-------------|----------|---------------|--------------|
| Wvnd | 52" | 120 | 17.57 2 | 20.77 | High Speed | 45W | 6804 CFM | \$13/yr | 151 CFM/W |
| vvyriu | 32 | 120 | 17.57 | 20.77 | Weighted Average | 32W | 4306 CFM | \$9/yr | 135 CFM/W |

NOTE: These are approximate measures. They do not include amps and wattage used by the light kit.

3. TOOLS AND MATERIALS REQUIRED

 - Phillips screwdriver
- Step ladder
- Wire cutters
- Electrical tape



4. PACKAGE CONTENTS

Unpack your fan and check the contents. You should have the following items:

| REF. | DESCRIPTION | PART NO. | | | |
|------|---|--------------------|--|----------|--|
| Α | Blade Set of 5 (42") | RPL-F1801-42-BD-** | | E | |
| | Blade Set of 5 (52") | RPL-F1801-52-BD-** | | | |
| В | Hanger Assembly | DDI LICO ACAA ++ | │ | | |
| | W/ Mounting Bracket | RPL-HGR-ASM-** | | <u>L</u> | |
| С | Canopy & Canopy screw cover | RPL-CAN-CYL-** |] | | |
|) | Coupling Cover | RPL-COU-CVR-** | | | |
| E | Motor Assembly | | 7 \ | | |
| F | Adapter Plate | | 7 \ | F | |
| 3 | LED Module | F4IN-120V-R1-30 | | | |
| 1 | Acrylic Shade | RPL-F1801-GLA | | no. | |
| ı | Luminaire Cover | | 1 🔾 | G | |
| J | Control Receiver W/Hardware (42") | RPL-F1801-42-REC | B | | |
| J | Control Receiver W/Hardware (52") | RPL-F1801-52-REC | | | |
| K | Wall Control W/Hardware | F-WC-WT | | H | |
| L | Hardware Bag | | | | |
| | W/ Blade Attachment Hardware | | | | |
| | wood screws (2), screws (2), | | | | |
| | 5/32" lock washers (2), flat washers (2), | RPL-WYND-PARTS | | | |
| | 5.4mm lock washers (2), wire nuts (3) | | c | | |
| | W/ Blade Attachment Hardware | | | | |
| | screws with rubber washers (16) | 7 | | | |

5. MOUNTING OPTIONS

If there isn't an existing UL/cUL listed mounting box, then read the following instructions. Disconnect the power by removing fuses or turning off circuit breakers.

Secure the outlet box directly to the building structure. Use appropriate fasteners and building materials. The outlet box and its support must be able to fully support the moving weight of the fan (at least 35 lbs). Do not use plastic outlet boxes.

Figures 1, 2 and 3 are examples of different ways to mount the outlet box.

NOTE: You may need a longer downrod to maintain proper blade clearance when installing on a steep, sloped ceiling. (Fig. 3)

To hang your fan where there is an existing fixture but no ceiling joist, you may need an installation hanger bar as shown in (Fig. 4)



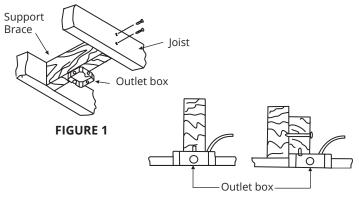


FIGURE 2

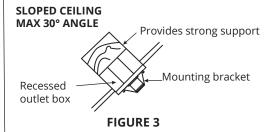

 

6. HANGING THE FAN

REMEMBER to turn off power at the breaker. Follow the steps below to hang your fan properly:

- 1. Disconnect power at the breaker to the fan location. A licensed electrician must install the fan. (Fig. 5)
- 2. Remove 1 of 2 screws from the bottom of mounting bracket and save for use in section 9. Loosen the other screw. (Fig. 6)
- 3. Pass the 120-volt supply wires through the center hole in the ceiling mounting bracket as shown in (Fig. 7)
- 4. Secure the mounting bracket to the ceiling outlet box with the screws and washers provided with your outlet box. (Fig. 7)



FIGURE 5


 


FIGURE 6

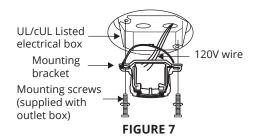

6. HANGING THE FAN (cont.)

- Take out the set screw located in the hanger ball, lower the hanger ball and remove the cross pin. Remove the hanger ball from the hanger ball/downrod assembly. (Fig. 8)
- 2. Remove the clevis pin and cotter pin, and loosen the two collar screws from the motor collar. (Fig. 9)
- Carefully feed the motor wires and safety cable up through the downrod. Thread the downrod into the collar.
- 4. Align the holes of downrod and collar and insert the cotter pin and clevis pin. Tighten the two collar screws. (Fig. 9)

WARNING: Failure to properly install the cotter pin and/or tighten the screws could result in the fan loosening and possibly falling.



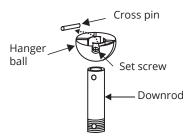


FIGURE 8

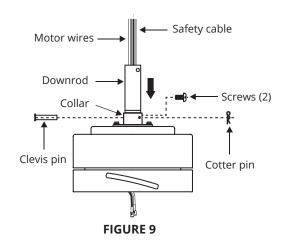


6. HANGING THE FAN (cont.)

- Slip the coupling cover, canopy screw cover (painted side face down), and canopy (opened side up) onto the downrod. (Fig. 10). Coupling cover goes all the way to the bottom.
- Carefully reinstall the hanger ball onto the downrod, being sure that the cross pin is in the correct position, the setscrew is tightened and wires are not twisted. (Fig. 10)
- 3. Carefully lift the fan motor assembly up to the mounting bracket and seat the hanger ball in the mounting bracket socket. Make sure the tab on the mounting bracket socket is properly seated in the groove in the hanger ball. (Fig. 11) Rotate the socket assembly until the ball drops and locks into the hanger bracket screw.
- Secure the safety cable to the building structure using a wood screw (not included). (Fig. 11)

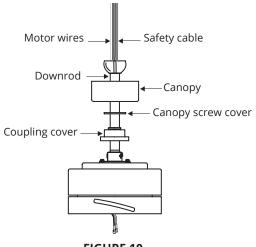



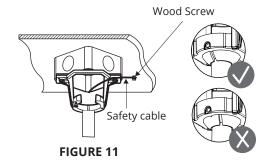

7. MAKING THE ELECTRICAL CONNECTIONS

WARNING: To avoid possible electrical shock, be sure electricity is turned off at the main fuse box before wiring.

WARNING: Installation of this fan requires that a three-conductor cable (including ground wire) which should run between ceiling and wall outlet box.

WARNING: Check to see that all connections are tight, including ground, and that no bare wire is visible at the wire nuts, except for the ground wire.

Insert the receiver into the mounting bracket with the flat side of the receiver facing the ceiling. (Fig. 12)

Follow the steps below to connect the fan to your household wiring. Use the plastic wire nuts with your fan. Secure the plastic wire nuts with electrical tape. Make sure there are no loose strands or connections.

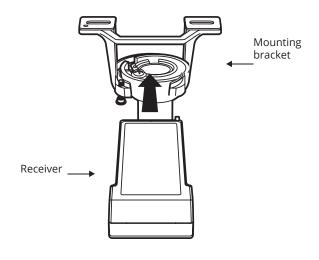


FIGURE 12


7. MAKING THE ELECTRICAL CONNECTIONS (cont.)

Motor to receiver electrical connections: (Fig. 13)

- Connect the hanger ball/downrod assembly ground wire, mounting bracket ground wire and receiver ground wire to the ground wire in outlet box.
 - **WARNING**: Failure to connect ground wires could result in poor fan control functionality.
- Connect the red wire from the fan to the red wire marked "TO MOTOR" from the receiver.
- Connect the gray wire from the fan to the gray wire marked "TO MOTOR" from the receiver.
- Connect the yellow wire from the fan to the yellow wire marked "TO MOTOR" from the receiver.
- 5. Connect the white wire from the fan to the white wire marked "For Light" from the receiver.
- 6. Connect the blue wire from the fan to the blue wire marked "For Light" from the receiver.

Receiver to house supply wires electrical connections: (Fig. 13)

- 1. Connect the black (hot) wire from the ceiling to the black wire marked "AC in L" from the receiver.
- Connect the white (neutral) from the ceiling to the white wire marked "AC in N" from the receiver.

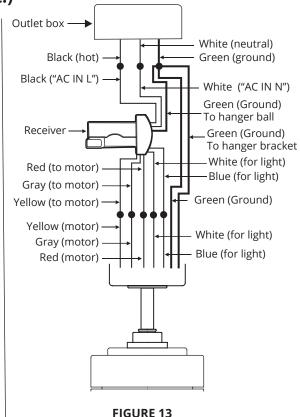


8. INSTALLING THE WALL CONTROL

Wall control to wall outlet box electrical connections: (Fig. 14)

WARNING: Remember to shut the power off at the circuit breaker or fuse box.

- 1. Connect ground wires Important for proper control function.
- 2. Connect the black wire marked "LINE IN" from the control to the black LINE VOLTAGE wire from the outlet box that feeds back to the breaker.
- 3. Connect the red wire from the control to the black wire from the wall outlet box that feeds up to the fan.
- 4. Connect the white wire from the control to the white (neutral) wire from the wall outlet box.

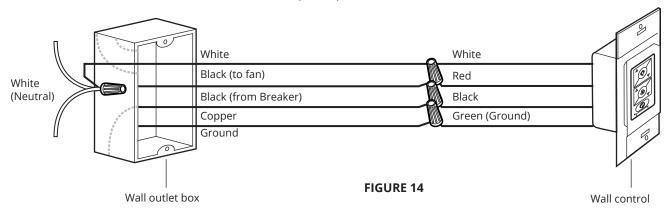

8. INSTALLING THE WALL CONTROL (cont.)

- Carefully tuck the wire connections inside the junction box.
 Secure the wall control with the two wall control mounting screws provided. (Fig. 15)
- 2. Attach the wall mounting plate over the wall control and secure with the two wall mounting plate screws provided.
- 3. Fasten the wall plate to the wall mounting plate.

NOTE: Maximum of 2 fans can operate on a circuit through the wall control.

Maximum of 12 fans can operate on a circuit through an on/off switch or breaker when utilizing the app for the fan control (without the wall control in the circuit).

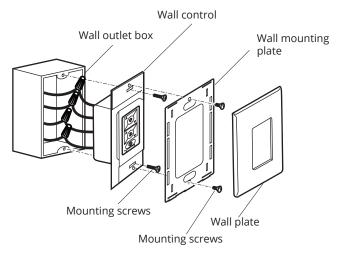


FIGURE 15

9. FINISHING THE INSTALLATION

- 1. Secure all wire connections with supplied wire ties to assist in canopy installation.
- 2. Tuck connections neatly into ceiling outlet box.
- Slide the canopy up to hanger bracket and place the key hole on the canopy over the screw on the hanger bracket. Turn canopy until it locks in place at the narrow section of the key holes. (Fig. 16)
- 4. Align the circular hole on canopy with the remaining hole on the hanger bracket. Secure by tightening the one screw previously loosened and the one previously removed.
- 5. Adjust the canopy screws as necessary until the canopy and canopy cover are snug.

WARNING: Make sure tab at bottom of hanger bracket is properly seated in groove of hanger ball before attaching canopy to bracket. Failure to properly seat tab in groove could cause damage to electrical wiring.

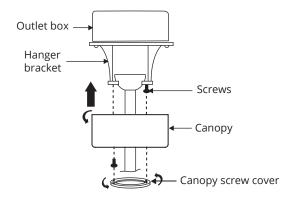


FIGURE 16



10. ATTACHING THE FAN BLADES

- 1. Insert the blade through the slot in the housing. Align the holes in the blade with the fan motor assembly holes and secure with a blade attachment screw with rubber washers. (Fig. 17)
- 2. Repeat this procedure with the remaining blades.

11. INSTALLING THE ADAPTER PLATE

- Remove one of the three mounting plate screws from the mounting ring and loosen the other two screws. (Do not remove.)
- Place the key holes in the mounting plate over the two screws previously loosened from the mounting ring. Turn the mounting plate until the adapter plate locks in place at the narrow section of the key holes. (Fig. 18)
- Tighten the two mounting ring screws previously loosened and the one previously removed to secure adapter plate.


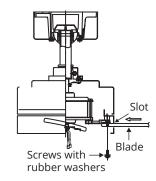


FIGURE 17

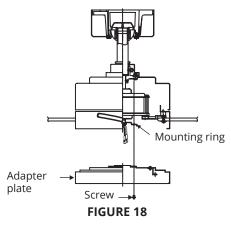

12. INSTALLING THE LED LUMINAIRE MODULE

WARNING: Before starting installation, disconnect the power by turning off the circuit breaker or removing the fuse at fuse box. Turning power off using the fan switch is not sufficient to prevent electric shock.

NOTE: If you do not plan to install the luminaire module with your fan at this time, skip to step 5.

- Remove 1 of the 3 screws from the outer perimeter of the adapter plate and keep it for future use. Loosen the other 2 screws (Do not remove)
- Raise and hold the LED luminaire module close to the mounting plate and proceed to secure the wire connections. Connect the white wire connectors from the luminaire module to the white wire of the fan. Follow the same procedure with the black wire connectors. (Fig. 19)
- 3. Tuck connections neatly into mounting plate, Place the luminaire module key holes over the 2 screws previously loosened from the mounting ring, turn luminaire module until it locks in place at the narrow section of the key holes. Secure by tightening the 2 screws previously loosened and the one previously removed. (Fig. 19)
- 4. Raise acrylic shade up against the luminaire module, and secure it to fan by turning glass clockwise until snug. Do not over-tighten.

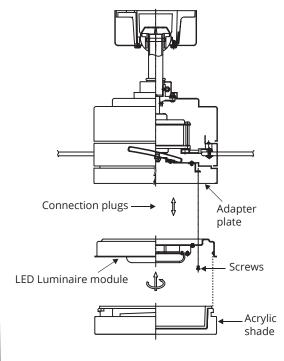


FIGURE 19

12. INSTALLING THE LED LUMINAIRE MODULE (cont.)

5. If installing the optional metal light cover, make sure it is securely tightened. (Fig. 20)

NOTE: Add metal light cover if you do not need lighting function or prefer a different aesthetic. (Fig. 20)

NOTE: Do not connect the LED connector wires if you are using the metal light cover.

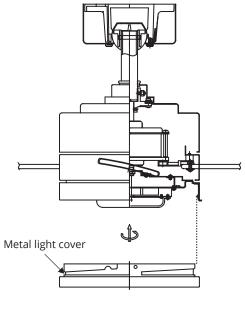


FIGURE 20

13. WALL CONTROL OPERATING INSTRUCTIONS

Your DC brushless motor is equipped with an intuitive wall control.

Restore power to ceiling fan and test the wall control as below for proper operation.

Pairing the Wall Control to Your Fan

Your fan is pre-paired at the factory, NO pairing is necessary.

Wall Control Button Definitions

These seven buttons are used to set the fan speed as follows:



Button: turn the light ON or OFF

Press/Hold \triangle to increase the desired light level.



Button: turn the fan ON or OFF

Press/Hold the \triangle button to increase the fan speed through the speed settings.

the speed settings.



Button: Switch between summer mode and winter mode.

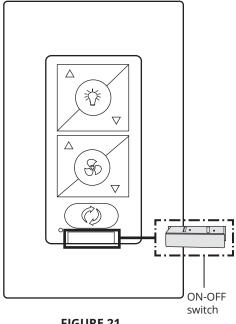


FIGURE 21

ON-OFF Switch: Pull switch tab to power off in case of emergency. Not necessary for normal fan operation.

13. WALL CONTROL OPERATING INSTRUCTIONS (cont.)

NOTE: Maximum of 2 fans can operate on a circuit through the wall transmitter.


Maximum of 12 fans can operate on a circuit through an on/off switch or breaker when utilizing the app for the fan control (without the wall transmitter in the circuit).


Summer mode - (Counter-clockwise) A downward airflow creates a cooling effect as shown in Fig. 22. This allows you to set your air conditioner on a warmer setting without affecting your comfort.

Winter mode - (Clockwise) An upward airflow moves warm air off the ceiling area and redistributes the warm air that hovers around the ceiling to the living space as shown in Fig. 23. This should allow for savings on heating costs.

NOTE: To operate the reverse function on this fan, press the reverse button while the fan is running.

NOTE: Fans do not change the temperature in the room, they change the comfort level allowing you to save energy.

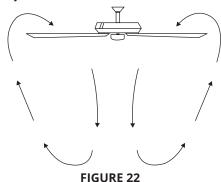

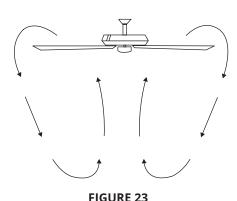

14. APPLICATION

In addition to the included wall control, you can control the fan through the Modern Forms app.

- To use the app, download it for free from the App Store or Google Play.
- Open the app to create your account. You can also log in with your Facebook or Google account.
- Next, set up a WiFi connection. You'll need the SSID and WiFi password for the network you want to connect to.
- You'll receive a prompt to name your fan device and upload a picture of it if you choose.
- The app will walk you through the main screen and show you how to create schedules, change fan speeds, dim the light, switch between Summer/Winter mode, invite users, create groups and much more. Refer to app instructions for more details.

NOTE: Maximum of 2 fans can operate on a circuit through the wall control.

Maximum of 12 fans can operate on a circuit through an on/off switch or breaker when utilizing the app for the fan control (without the wall control in the circuit).

FIGURE 24







APP INSTRUCTIONS AND SMART HOME DEVICE INTEGRATION modernforms.com/mfappins

15. TROUBLESHOOTING

| Problem | Sol | lution |
|---------------------|-----|---|
| Fan will not start. | 1. | Check circuit fuses or breakers. |
| | 2. | Check wall control LED indicator light. If LED is not illuminated when pushing a button, it is not transmitting a signal. Please check power to wall control and all electrical connections. |
| | 3. | Assure that there are no more than 2 fans operating on a circuit through the wall control. Assure that there are no more than 12 fans operating on a circuit through an on/off wall switch or a breaker (not through a wall control). |
| | 4. | Assure that the fan is within range of the Wifi (150 ft.) or wall control (30 ft.). |
| Fan sounds noisy. | 1. | Allow a 24-hour "breaking-in" period. Most noise associated with a new fan will disappear during this time. |
| | 2. | Make sure all motor housing screws are securely fastened. |
| | 3. | Make sure the screws that attach the fan blade to the fan are tight. |
| | 4. | Make sure your ceiling box is secure and rubber isolator pads are used between the mounting bracket and outlet box. |
| Fan wobbles. | 1. | Check that all blade and blade arm screws are secure. |
| | 2. | If the blade wobble is still noticeable, interchanging two adjacent (side by side) blades can redistribute the weight and possibly result in smoother operation. |

16. ACCESSORIES

| PRODUCT | MODEL | DESCRIPTION | FINISH |
|-------------------------------|--------|--|--|
| WIFI TOUCH PANEL WALL CONTROL | F-TS | Full app control Wi-Fi range: Up to 150ft from router Sold Separately | вк, wт |
| RF WALL CONTROL | F-WC | Included with each fan 6 Fan speeds Dims light to 1% ON/OFF Wall control range: Up to 30ft from fan Works in conjunction with Modern Forms Fan receiver (Not included) | WT |
| COUPLER | XF-I | Connects two downrods | AS, BZ, CFI, DW, GB, GH, GW, LN, MB, MW, OB, SS, TT |
| SLOPE CEILING KIT | XF-SCK | Designed to accommodate buildings with steeper sloped ceilings up to 45° or 12/12 pitch | AS, CFI, LN, SS BZ, DW, GB, GH, GW, – MB, MW, OB, TT |

| PRODUCT | MODE | L | DESCRIPTION | FINISH |
|---------|-------|---------------|--|--|
| DOWNROD | XF-12 | 12 in downrod | | AS, CFI, LN, SS BZ, DW, GB, GH, GW, MB, MW, OB, TT |
| | XF-18 | 18 in downrod | | AS, CFI, LN, SS BZ, DW, GB, GH, GW, MB, MW, OB, TT |
| | XF-24 | 24 in downrod | | AS, CFI, LN, SS BZ, DW, GB, GH, GW, MB, MW, OB, TT |
| | XF-36 | 36 in downrod | All our downrods are ¾" I.D. and are threaded on the motor end to create an extra layer of security to allow for adjustments in the field. | AS, CFI, LN, SS BZ, DW, GB, GH, GW, MB, MW, OB, TT |
| | XF-48 | 48 in downrod | | AS, LN, SS BZ, DW, GB, GH, GW, MB, MW, OB, TT |
| | XF-60 | 60 in downrod | | AS, LN, SS BZ, DW, GB, GH, GW, MB, MW, OB, TT |
| | XF-72 | 72 in downrod | | AS, LN, SS BZ, DW, GB, GH, GW, MB, MW, OB, TT |

Español

For instructions in Spanish please visit the link below. Para obtener instrucciones en español, visite el siguiente enlace.

www.modernforms.com/fan-instructions-espanol

Français

 
For instructions in French please visit the link below. Pour obtenir des instructions en français, veuillez visiter le lien ci-dessous.

www.modernforms.com/fan-instructions-français

MODERN FORMS LUMINAIRES + SMART FANS

 
Get Smart

The Modern Forms app synchronizes seamlessly with smart home devices you already own. To learn more go to **modernforms.com/mfappins**











Free App Download

Sync with our exclusive Modern Forms App to control fan speed, use smart features like Adaptive Learning, create groups and reduce energy costs.







modernforms.com/mfappins

MODERN FORMS SMART FANS

FR-W1801-42L; FR-W1801-52L