




**Step 4:** With the uprights now in place, tighten the bolts that connect the legs (Part J) to the center braces (Part K) using the included wrenches (Part I) as shown in Figure 8.

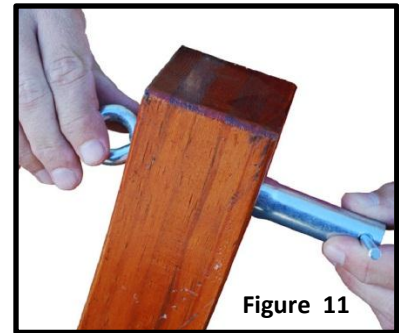

**Step 5:** Locate the eye-bolts (Part G) and place through the hole on the top of the upright (Part L) with the eye facing the inside of the stand as in Figure 9. Place a washer (Part D) then a lock-nut (Part E) onto the threaded end of the eye-bolt as in Figure 10. Tighten bolt with the included wrenches (Part I) as in Figure 11.

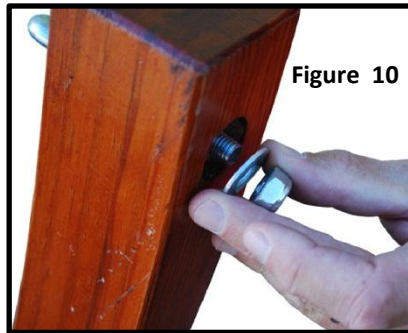

**Step 6:** Locate the 2 Carabiner Clips. Attach the carabiner clip to the end link on both ends of the chain lengths that are attached to the hammock, then clip one end through the eye of the eye-bolt on each of the uprights as shown in Figure 12 and Figure 13.

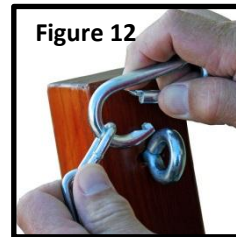

**Step 7:** Adjust the height of the hammock by moving the clip to an alternative link in the chain length. If desired, the pillow can be attached to the hammock by tying the pillow straps to the wood spreader bar.

**Please Note:** When using your stand for the first time you'll notice creaking noises as the pieces settle in place. Once the stand has been used a few times the creaking noise will subside.

**Caution:** Care should always be taken when using your hammock and stand but especially when using them for the very first time. Please always use extreme caution when getting into and out of your hammock. Never exceed the weight capacity of the hammock or the hammock stand. Never allow young children to use the hammock or stand unaccompanied by an adult. Always inspect your hammock and stand before each use to assure all parts are appropriately attached and tightened.

**Care and Storage:** The Wooden Arc Stand is finished with a protective outdoor finish. To prolong the life of the wooden stand try to store in a dry location especially through the winter months. To prolong the life and color of the hammock and pillow, please store in a cool dry place when not in use. Excessive exposure to sunlight or moisture will cause fabric fading or discoloration. Remove dirt or spots using a mild soap and water solution. Allow to thoroughly dry before storing.