


Item # 1002 555 517 1002 555 211 Model # FRA60647VW-2PK FRA60647SW-2PK

## **USE AND CARE GUIDE**

#### **CAMDEN 2-PACK PORCH CHAIRS**

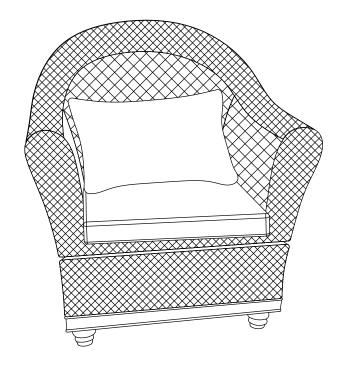

Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service.

8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-986-3460

### HOMEDEPOT.COM/HOMEDECORATORS

#### THANK YOU

### Table of Contents

| Table of Contents   | 2 |
|---------------------|---|
| Safety Information  |   |
| Product Caution     |   |
| Safety Warnings     | 2 |
| Warranty            | 2 |
| What is Covered     | 2 |
| What is Not Covered | 2 |

| Pre-Assembly      | 3 |
|-------------------|---|
| Planning Assembly |   |
| Hardware Included |   |
| Package Contents  | 4 |
| Assembly          | 5 |
| Care and Cleaning | 7 |

## **Safety Information**

#### PRODUCT CAUTION

This chair was made for the explicit purpose of providing outdoor functions and is not to be used as a toy. This product is intended for normal outdoor use; however, the manufacturer recommends storing and / or covering this chair when any formidable / severe weather is approaching. Do not locate this product near open flames. Do not use this product as a support. Do not shake, lean or climb on the product. Children under the age of 10, near the product, should be supervised by a competent adult at all times. This product is NOT intended for commercial use and will void the warranty.

#### **SAFETY WARNINGS**



**WARNING:** Please keep children out of the assembly area before assembly.



WARNING: Weight limit for the chaise is 250 lbs (113.39 kg).



**WARNING:** This chair unit is heavy, and may require two adults for safe assembly.



**CAUTION:** Do not locate the product near any heat source.

## Warranty

### **5 YEAR FRAME, FABRIC AND WEAVE LIMITED WARRANTY**

### WHAT IS COVERED

We warrant the frame, fabric and weave to be free of manufacturing defects to the original purchaser for five years.

#### WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Contact the Customer Service Team at 1-800-986-3460 or visit www.homedepot.com/homedecorators.

# **Pre-Assembly**

### **PLANNING ASSEMBLY**

Read all instructions before assembly.

To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.



**NOTE:** More than one person may be required to assemble this product.

### **HARDWARE INCLUDED**




**NOTE:** Hardware not shown to actual size.



| Part | Description            | Quantity |
|------|------------------------|----------|
| AA   | M6x25 combination bolt | 12+1     |
| BB   | Hex wrench             | 1        |

# **Pre-Assembly (continued)**

## **PACKAGE CONTENTS**

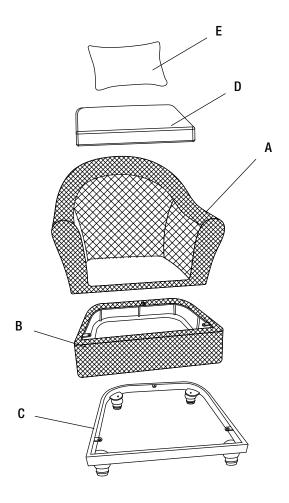


| Part | Description   | Quantity |
|------|---------------|----------|
| Α    | Seat          | 2        |
| В    | Under apron   | 2        |
| С    | Base          | 2        |
| D    | Seat cushion  | 2        |
| E    | Accent pillow | 2        |

# **Assembly**

# 1 CONNECTING THE UNDER APRON TO THE SEAT


- □ Place the seat (A) upside down on a soft surface.
- □ Attach the under apron (B) to the seat (A) using M6x25 combination bolts (AA).
- Do not fully tighten all the bolts at this step.

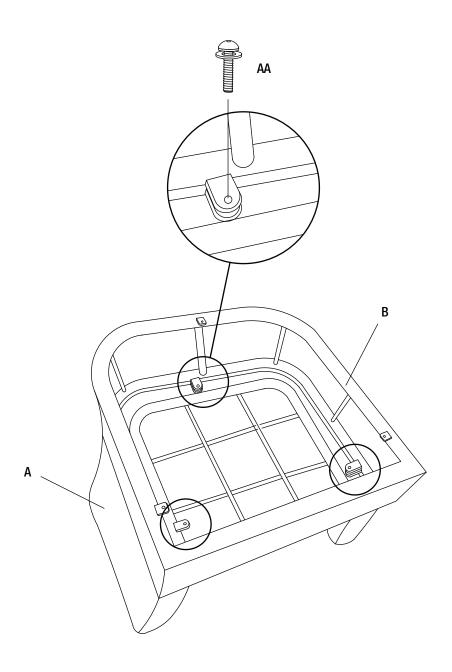

# **Assembly (continued)**

# 2 CONNECTING THE BASE TO THE UNDER APRON


- □ Attach the base (C) to the under apron (B) using M6x25 combination bolts (AA).
- Once all of the bolts are in place, fully tighten the bolts using the hex wrench (BB).

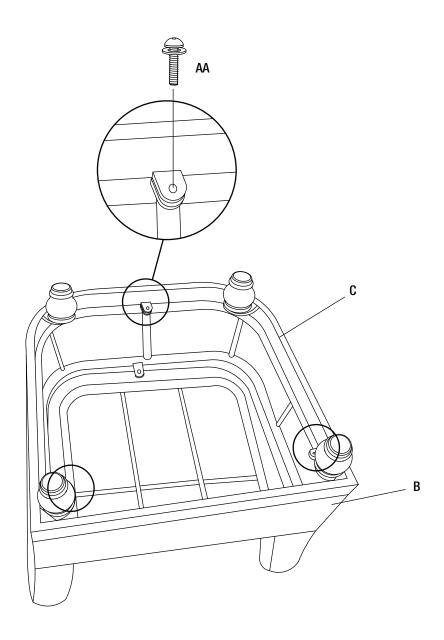

## **Assembly (continued)**

# 3 CHECKING THE CHAIR

- Turn the chair right side up.
- Place the seat cushion and the accent pillow (D & E) to finish the assembly of the chair.
- Ensure all connections are secure before use.

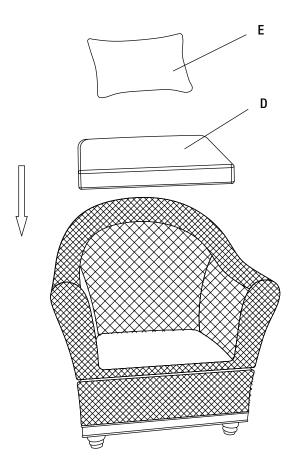

## **Care and Cleaning**

- For best results, clean the chair with a damp cloth and dry thoroughly. This will help prevent mildew by removing dirt particles that may accumulate.
- Do not clean with abrasive materials, bleach, or solvents.
- Store the chair in a dry, sheltered place when not in use.
- □ Keep the chair away from fire, extreme heat, freezing conditions, and inclement weather such as rain, hail, sleet, snow, or wind.



Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service.

8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-986-3460

### HOMEDEPOT.COM/HOMEDECORATORS

Retain this manual for future use.