



Sound Machine Owner's Manual

Model # BRRC107

LOCATION OF CONTROLS:

1. 6 high quality sounds
2. Power button
3. Timer
4. Volume
5. Speaker
6. Adaptor plug hole
7. Battery compartment
8. Adaptor

FIG. 1

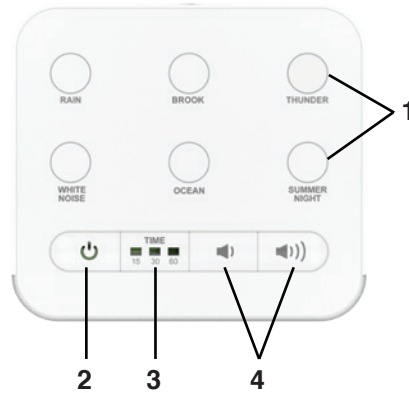 


FIG. 2

 
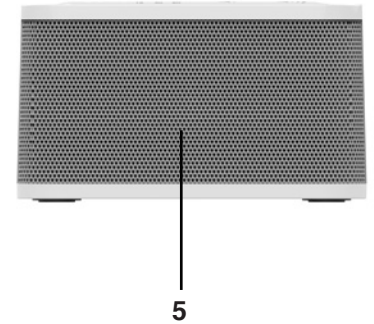 


FIG. 3



FIG. 4

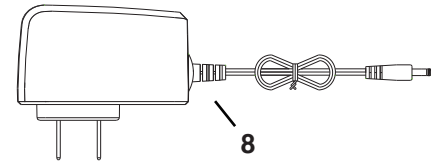

Big Red Rooster® Sound Machine:

The Big Red Rooster® sound machine is designed to help create an ideal sleeping environment. The 6 natural sounds mask nighttime noises.

- Fall Asleep Easier
- Sleep Better
- Wake-Up Refreshed
- Get A Good Nights Rest

Key Features:

- 6 high quality natural sounds including: Rain, Brook, Thunder, White Noise, Ocean, Summer Night
- 15, 30 & 60 minute optional sleep timer
- Powered by an AC adaptor (included) or 3 AA batteries
- Great for travel

Big Red Rooster® Sound Machine:

Power Button: Press the power button to turn the unit ON. A green light will illuminate when ON. Press the power button a second time to turn the unit OFF. The green light will be OFF when the unit is OFF.

Sounds: Press one of the six (6) sound buttons. To change the sound press a different sound button. Unit will default to the last sound used.

Volume: Press the volume down or volume up button to reach desired volume level. Unit will default to the last volume setting.

Timer: The sound machine can be set to automatically turn OFF in 15, 30 or 60 minutes. When the sound machine is ON press the timer button once for 15 minutes, a second time for 30 minutes, a third time for 60 minutes and a fourth time to turn the timer OFF. A green light will show the timer setting. If the green light is OFF the timer is OFF.

POWER CORD:

Plug the adaptor (Fig. 4) into the adaptor plug on the back of the sound machine (Fig. 3). Plug the adaptor into your household electrical outlet. Only use the adaptor provided with this sound machine. Using any other adaptor will void the warranty. The sound machine will draw power from the adaptor prior to drawing power from the batteries.

BATTERIES:

INSERTING / REPLACING THE BATTERIES

1. Remove battery compartment cover.
2. Remove old batteries (if replacing batteries).
3. Insert three (3) new AA batteries (not included)
4. Make sure to follow the battery polarity guide when installing new batteries (Fig. 5).
5. Replace battery compartment cover.

CARE/MAINTENANCE:

1. Store unit in a cool, dry place.
2. Before cleaning, unplug sound machine from outlet (if using adaptor) or remove batteries.
3. Clean sound machine with a soft, slightly damp cloth. Never use liquids or abrasive cleaners. Do not immerse in any liquid to clean.

WARNING:

1. Do not place speaker close to ears. May cause hearing damage.
2. Do not place or store this product where it can fall or be pulled into a tub or sink. Do not reach for an appliance that has fallen into water. Unplug it immediately.
3. Do not place or drop in water or any other liquid. Do not use on a wet surface.
4. This product is not a toy and is not intended for use or play by child. Do not place unit or cord within your child's reach. For adult use only.
5. Do not leave product unattended when in use.
6. Do not attempt to repair or modify the sound machine.
7. Do not cover product when in use. Excessive heating can occur and cause fire, electric shock, or injury to persons.
8. Discontinue use if product or power cord is damaged.
9. Use this product only for its intended use as described in this manual.
10. Keep unit and cord away from heated surfaces.
11. Never drop or insert any object into any opening.
12. The product is designed for indoor use only.
13. Do not lift, carry, hang or pull the product by the power cord.

READ MANUAL BEFORE USE. SAVE THESE INSTRUCTIONS.

BATTERY PRECAUTIONS:

1. Use only the size and type of batteries specified.
2. Always purchase the correct size and grade of battery most suitable for the intended use.
3. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
4. Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nickel Cadmium) batteries.
5. Replace all batteries of a set at the same time. Do not mix old and new batteries.
6. Clean the battery contacts and also those of the device prior to battery installation.
7. Do not dispose of batteries in fire.
8. Remove batteries if consumed or if product is to be left unused for an extended period of time.

FCC STATEMENT: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ONE-YEAR LIMITED WARRANTY:

This product is warranted to the original purchaser that the product will be free from defects in materials and workmanship for a period of one year from the date of purchase. Additional details are available at www.bigredroosterproducts.com.

FIG. 5

