

TROUBLESHOOTING

Issue	Cause	Solution
Appliance doesn't turn on.	<ul style="list-style-type: none"> The plug is positioned incorrectly in the wall outlet. The dehydrator switch is not in the ON position. 	<ul style="list-style-type: none"> Remove from outlet and plug in again. Flip the switch to the ON position.
Heater is working but the fan is not working.	<ul style="list-style-type: none"> Check for any foreign objects stuck in the fan. 	<ul style="list-style-type: none"> Turn appliance off and remove foreign object. If fan still does not work, contact customer service.
Fan is working but there is not heat.	<ul style="list-style-type: none"> Heater Malfunction 	<ul style="list-style-type: none"> Turn the appliance off and contact customer service.
Over heating or little heating.	<ul style="list-style-type: none"> Temperature control system control not working properly. 	<ul style="list-style-type: none"> Turn the appliance off and contact customer service.
Not dehydrating.	<ul style="list-style-type: none"> Too much food on the tray. Food is overlapping on the tray. 	<ul style="list-style-type: none"> Reduce the food quantity. Evenly space food on the tray.
Foods are not evenly dehydrated.	<ul style="list-style-type: none"> The thickness of the food is not even. Too much food on the tray. 	<ul style="list-style-type: none"> Evenly slice and space the food. Reduce the food on the tray.
Moisture on the door.	<ul style="list-style-type: none"> Too much food on the tray. Food contains too much water. 	<ul style="list-style-type: none"> Reduce the food quantity. Reduce the food quantity and increase dehydrating time.
Unusual sound from fan.	<ul style="list-style-type: none"> Screen cover in front of fan is rubbing the fan blade. 	<ul style="list-style-type: none"> Turn OFF the appliance and unplug from the wall outlet. Carefully pull the screen away from the fan blades by using needle nose pliers.

DISPOSAL OF THIS DEVICE




PROTECTION OF THE ENVIRONMENT

At the end of the life of your product, it should go to a special waste-recycling center.



ENVIRONMENT PROTECTION FIRST



- The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to a special waste-recycling center for the recycling of electrical and electronic equipment.
- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.