


eLIGHT

eLIGHT

Surface Mount Light

Model 6106

 INSTALLATION MANUAL

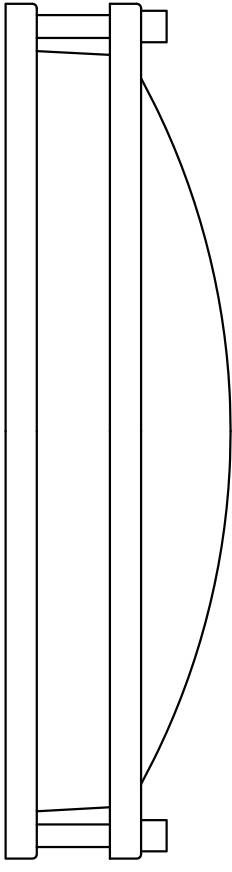



Thank you for purchasing this eLIGHT Ceiling Flush Mount Light Fixture. This product has been manufactured with the highest standards of safety and quality.


FEATURES:

- 1. Easy to install.
- 2. Metal frame and frosted glass.
- 3. For energy savings this fixture has been engineered to safely use a Self Ballasted Compact Fluorescent Lamp in place of an incandescent lamp.

CAUTION:

 
 




 **DANGER:** Before installation, turn off the main power at the circuit breaker.

 **WARNING:** Installation must be performed by a qualified licensed electrician.

 **CAUTION:** To prevent electric shock, do not insert any objects through openings or attempt to open the adapter.

TOOLS REQUIRED FOR INSTALLATION AND ASSEMBLY

(not included):

			
Phillips screwdriver	Flathead screwdriver	Wire cutters	Wire strippers
			
Safety goggles	Electrical tape		

 
PRODUCT MAINTENANCE:

- 1. To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.
- 2. To clean the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the interior surface of the fixture.
- 3. Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust and wipe carefully.

LIMITED WARRANTY


The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of two (2) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specially disclaims any warranty, whether expressed or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor/expense costs involved in the replacement or repair of said product.

KEEP your receipt and these Instructions for Proof of Purchase.

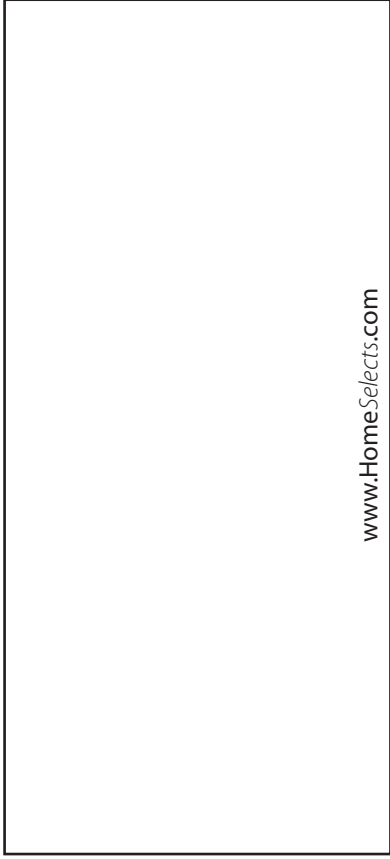




www.HomeSelects.com

 ASSEMBLY

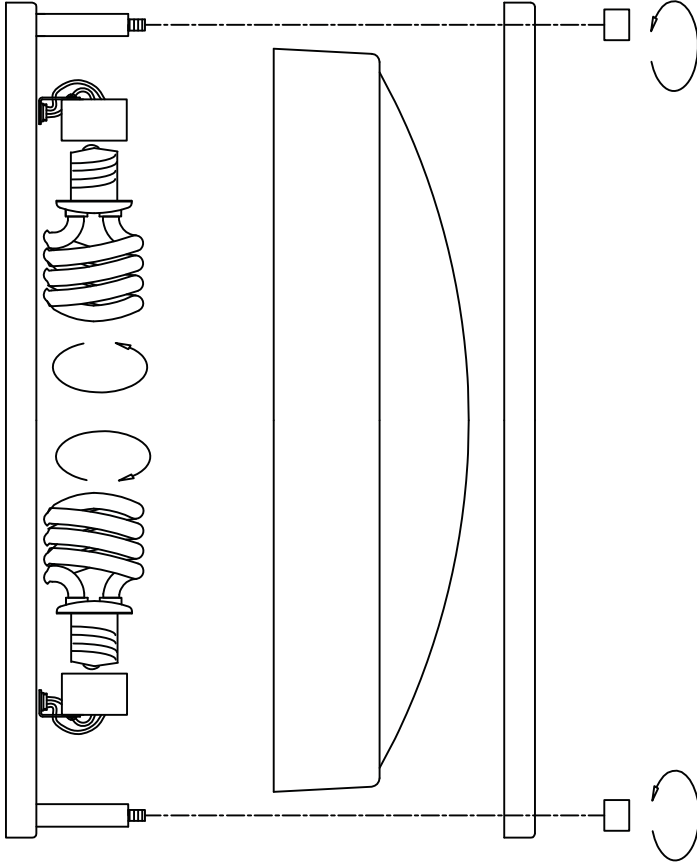

PARTS INCLUDED FOR INSTALLATION

   (parts are not to scale):

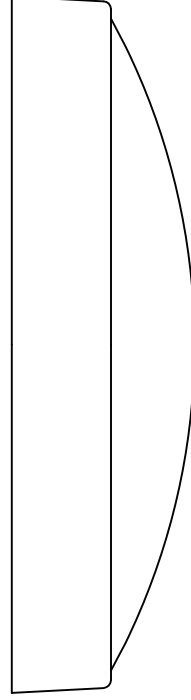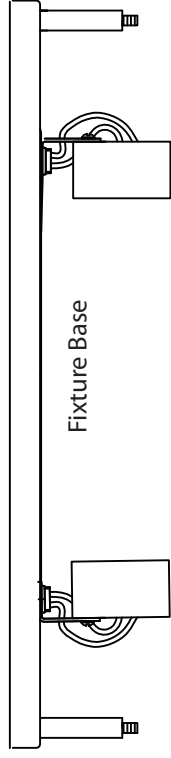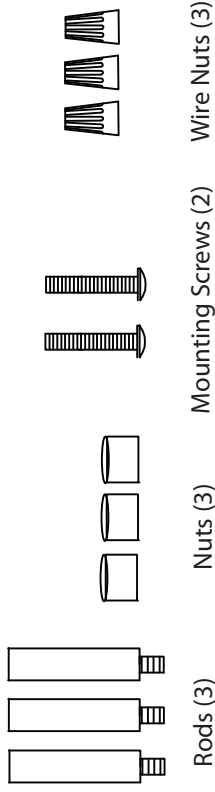

Glass Globe



Decorative Ring

TROUBLESHOOTING:

Possible Cause	Corrective Action
Light will not turn on.	<ol style="list-style-type: none"> 1. Make sure power supply is on. 2. Test or replace switch. 3. Check wiring.
Fuse blows or circuit breaker trips when light is turned on.	<ol style="list-style-type: none"> 1. Crossed wires or power wire is grounding out. 1. Check wire connections.

INSTALLATION:

INSTALLATION INSTRUCTIONS:

1. Thread the Fixture Mounting Screws (#8) into the ceiling box, as shown. (Fig. 2)
2. Pull the power supply wires out from the Outlet Box (#6). Attach the Black Supply Wire (#14) to the Black Fixture Wire (#15) and the White Supply Wire (#9) to the White Fixture Wire (#11) using Wire Nuts (#10). Connect the Fixture Ground Wire (#12) and the Supply Ground Wire (#13) together using a Wire Nut (#10). (Fig. 3) Wrap all wire connections with electrical tape for a more secure connection. Note: If you have electrical questions, consult your local electrical code for approved grounding methods.

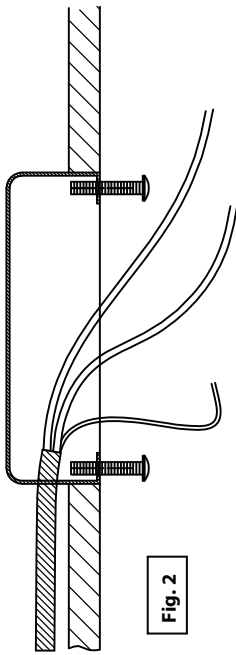 


Fig. 2

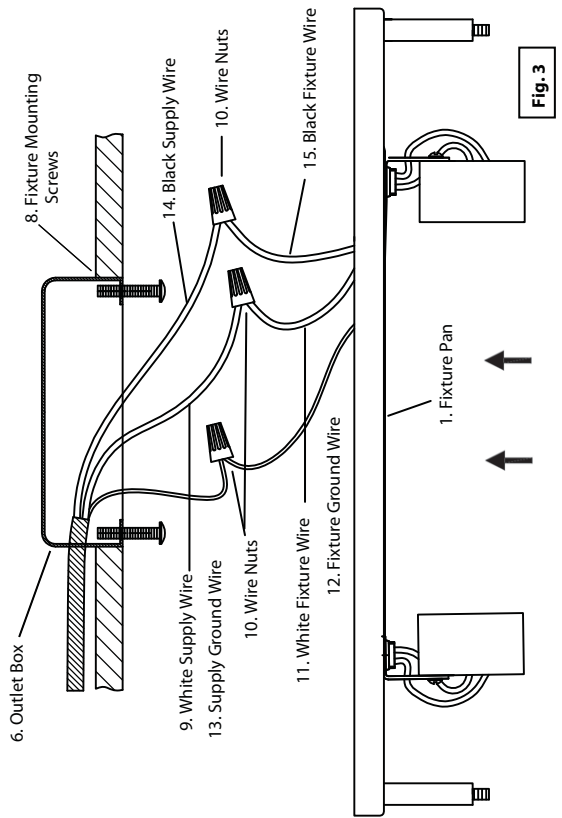 


Fig. 3

INSTALLATION INSTRUCTIONS: (Continued)

3. Carefully, tuck all the wires and wire connections into the Outlet Box (#6). Place the Fixture Pan (#1) over the Outlet Box (#6) and onto the Fixture Mounting Screws (#8), making sure they feed through the Keyhole Slots (#16). (Fig. 4)
4. Twist the Fixture Pan (#1) clockwise, so that the Fixture Mounting Screws (#8) slide into the narrow ends of the Keyhole Slots (#16). Tighten the Fixture Mounting Screws (#8) so that the Fixture Pan (#1) is secured flush against the Ceiling (#7). (Fig. 4 and 4-1)
5. Installation is complete. Turn on power at the circuit breaker or fuse box. Turn the light switch on to activate the fixture.

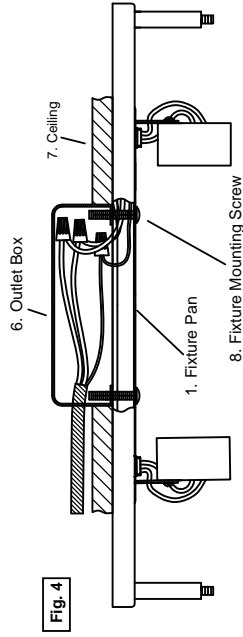 


Fig. 4

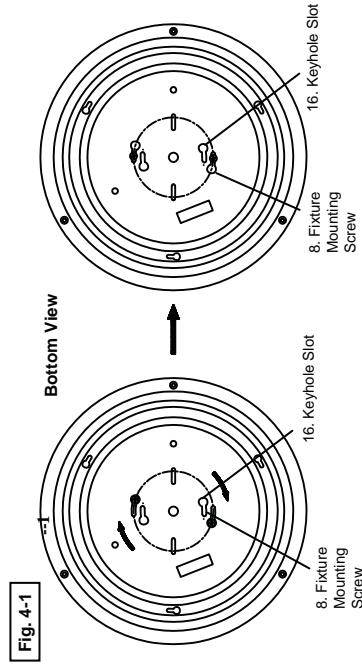 


Fig. 4-1