



SKU # 1004 193 789
OMS THD SKU # 1004 161 217
Model # TY200-1924-1

ASSEMBLY INSTRUCTIONS

30in 100 LED Lighted TINSEL "BOO" with BAT

USE AND CARE GUIDE

PLANNING ASSEMBLY

Carefully remove all the parts from the box then place them on a flat surface. Many of the parts are connected by the lighting string that runs throughout the item. Use caution not to pull excessively or force parts loose as this could damage the item and the lighting string. Read the entire manual prior to assembly to identify all the parts included in the package against the parts list. If any parts are missing or damaged do not attempt assembly. Contact our customer service center.

***Assembly of this product may take more than one person.**

Pre-Operation

CAUTION: Grasp the plug to insert or remove from the power source. Do not unplug by pulling on cord.

CAUTION: The lighting string on this product is rated at 7.2 Watts (0.06 Amps). Do not overload. Do not connect to another lighting string, decorative outfit or other electrical products. Before you use or re-use this product inspect it carefully. Discard or return to place of purchase with purchase receipt if the product has cuts, damage, frayed wire insulation on cords, cracks in the socket enclosures, loose connections, exposed copper wire or other obvious damage.

Care and Cleaning

- a. Carefully remove the product from wherever it is placed. Avoid any undue strain or stress on the product connections, wires and structure. If the product is placed somewhere other than the ground it should be well secured, flat and stable.
- b. Carefully disassemble the unit taking caution not to cut any electrical wires.
- c. Wipe the unit with a damp cloth and allow the unit to dry before storing.
- d. Store the product neatly in a cool, dry location protected from sunlight.

Guarantee


What is Covered

The product is intended for residential seasonal use for 90 days per year. This product is covered by a 90 days limited guarantee due to defects in material and workmanship. Return the product with purchase receipts to the location of purchase for refund within 90 days of purchase.

What is Not Covered

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDs, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse, accidents or display models. Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday

Diagram of Parts

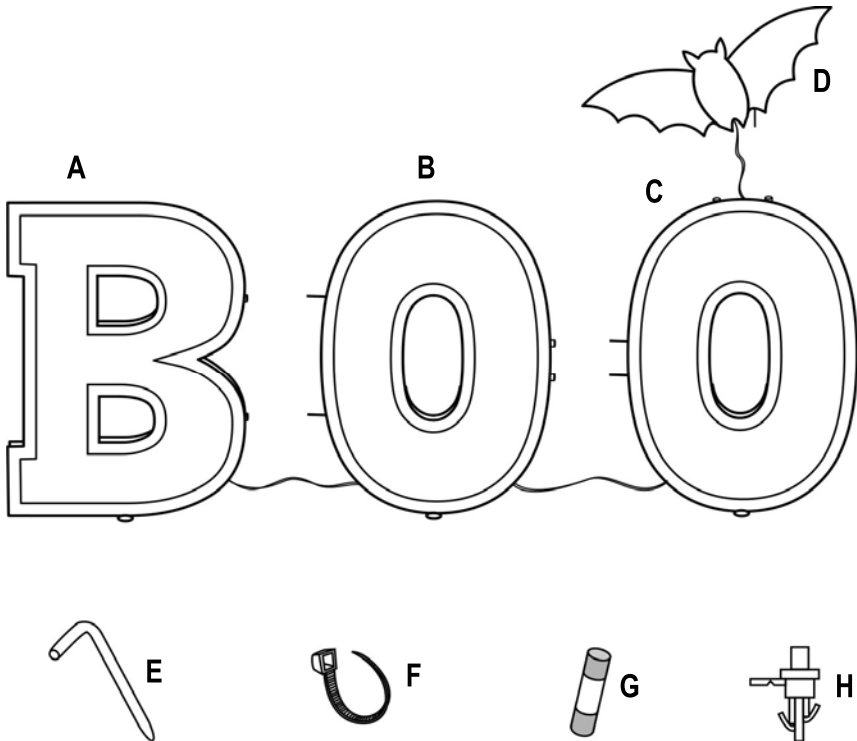

Thank you!

We appreciate the trust and confidence you have placed in Home Accents through the purchase of this 30in 100 LED Lighted TINSEL "BOO" with BAT. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home decoration needs. Thank you for choosing Home Accents!

1-877-527-0313
HOMEACCENTSHOLIDAY.COM


Parts List		
Locater	Name	Qty.
A	Letter "B"	1
B	Letter "O"	1
C	Letter "O"	1
D	Bat	1

Hardware List		
Locater	Name	Qty.
E	Ground Stake	5
F	Plastic Tie	15
G	Spare Fuse	2
H	Spare Bulb	3

ASSEMBLY


1 Assembling the Letters together

 Insert the connecting rods on the left side of Letter "O" (B) into the connecting holes on the right side of Letter "B" (A). Insert the connecting rods on the left side of Letter "O" (C) into the connecting holes on the right side of Letter "O" (B).

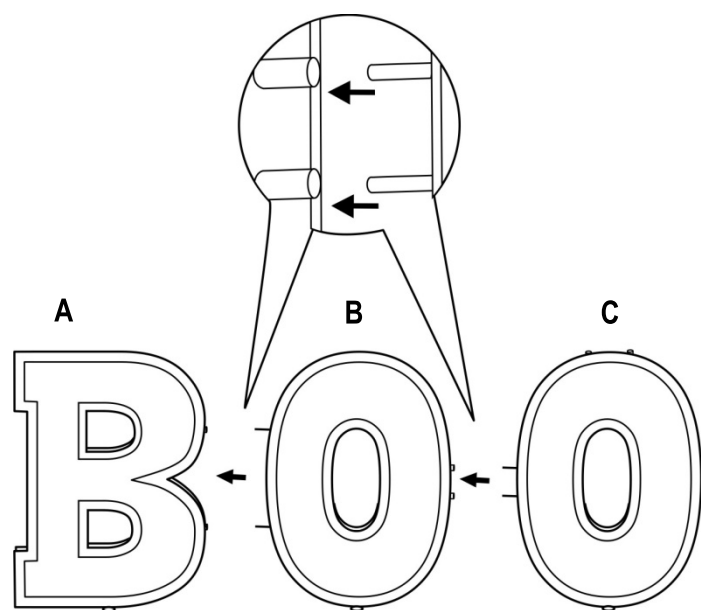


2 Securing the "BOO" and the support brace

Turn over the assembled Boo Sign; Secure the 3 letters "BOO" together at the connecting loops, as shown in the diagram below, with the Plastic Ties (F). On the backside of the letter "O" (B) is where the support bar and stand are attached to help stabilize the item. Insert the hooked end of the metal bar into the metal nut on the backside of the Letter "O" (B). Place the stand away from the item while connected.

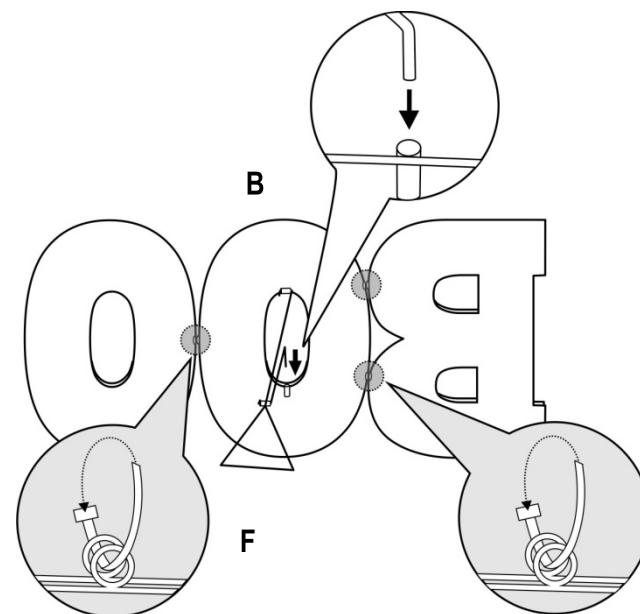

3 Assembling the Bat to the "BOO"

Insert the connecting rods on the bottom side of the Bat (D) into the connecting holes on the top side of the Letter "O" (C). Note: The Bat should be facing out with the letters "BOO" facing out.

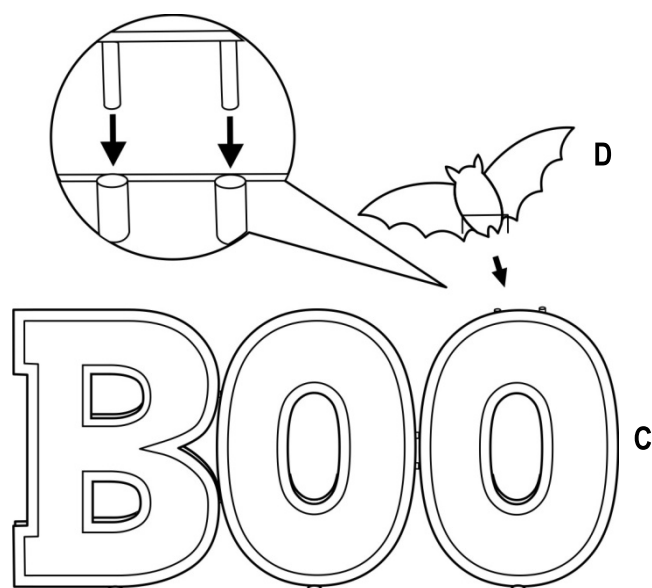

4 Securing "BOO" with the Ground Stakes

Insert the hooked end of the Ground Stakes (E) over the metal ground securing loops located at the bottom of each letter then press firmly into the ground for a secure hold.

