

Assembly Instruction

Model No. D-BS864SAL



IMPORTANT: Please read instructions thoroughly before assembling. Familiarize yourself with the inventory of parts and the accompanying illustrations to assure safe and proper assembly.

Table of Contents	2
Important Safety Instructions	2
Parts List	3
Assembly	4-7
Technical Data	8
Care & Maintenance	8
Warranty	8

**WARNING:**

Repeated assembly can weaken the locking ability of the washers. Please periodically check all bolted connections on your bistro to ensure they are tight and secure.

DO NOT over-tighten any screws or nuts.

DO NOT operate if any part is damaged or broken

 
NOT FOR USE BY CHILDREN.

A

Back - 2

**B**

Seat - 2

**C**

Leg - 8

 
**D**

Table top - 1

**E**

 
Leg - 3

**F**

Support frame - 1

**AA**

Threaded rod M8 x 25 - 20

**BB**

Spring washer M8 - 23

**CC**

Flat washer M8 - 23

**DD**

Wrench M6/M8 - 1

**EE**

 
Plastic foot pad (preassembled on part # C) - 4

**FF**

 
M8 nut - 23

**GG**

 
Bolt M6 x 25 - 6

**HH**

Threaded rod M8*15 - 3

**II**

Spring washer M6 - 6


**JJ**

Flat washer M6 - 6

**KK**

Plastic foot pad (preassembled on E) - 3



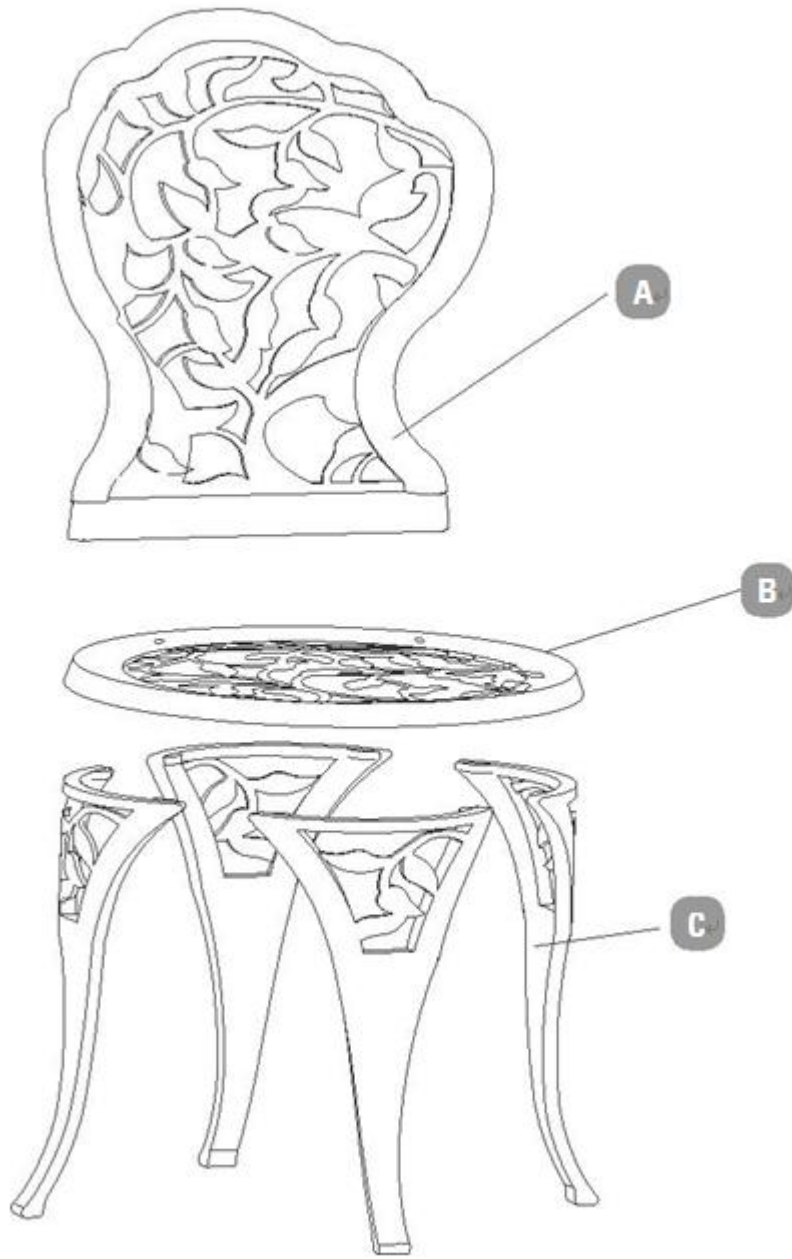

Step 1:

Insert threaded rod (AA) into each hole in bottom of back (A), then connect seat (B) to back (A) with flat washers (CC), spring washers (BB) and nuts (FF), as shown in Fig. 1. Do not tighten at this step.

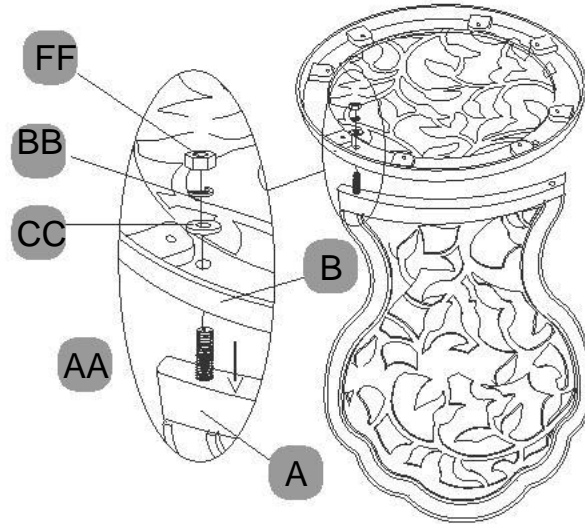


Fig. 1

Step 2:

Insert threaded rod (AA) into each leg-hole in seat (B), then connect legs (C) to seat (B) with flat washers (CC), spring washers (BB) and nuts (FF), as shown in Fig. 2. Tighten all the nuts using wrench (DD).


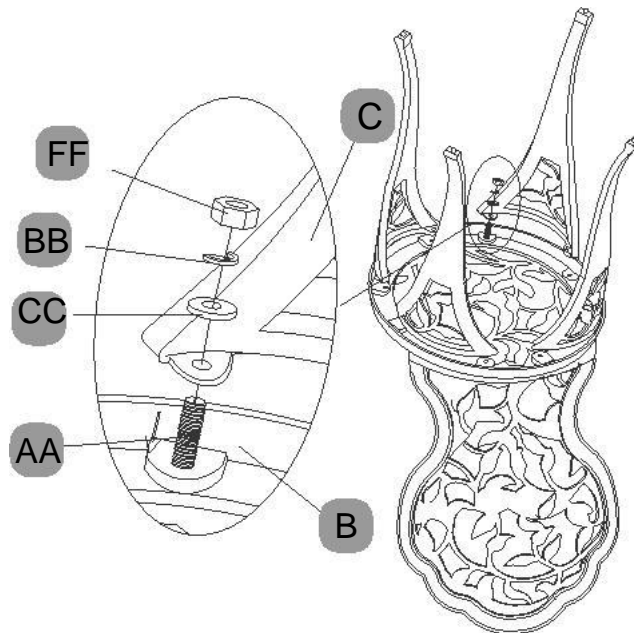


Fig. 2

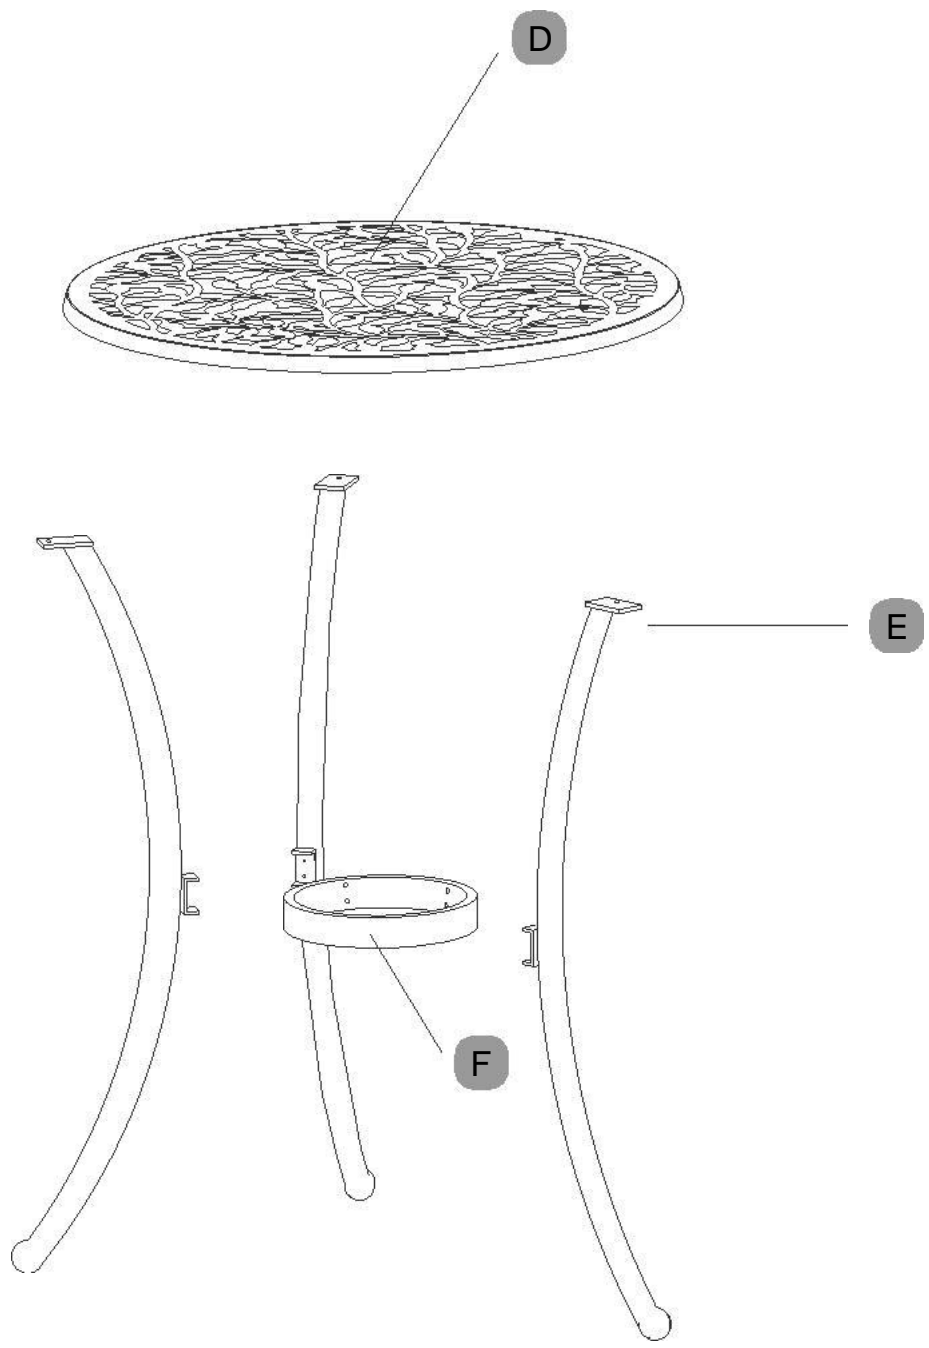

Step 3:

Connect support frame (F) to legs (E) with flat washers (JJ), spring washers (II) and bolt (GG), as shown in Fig. 3. Do not tighten at this step.

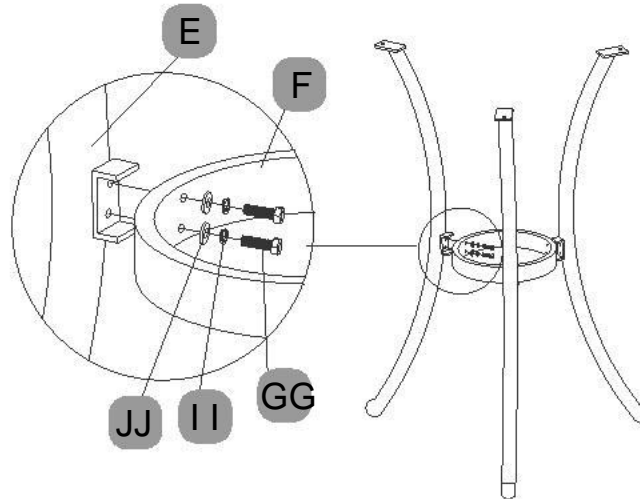


Fig. 3

Step 4:

Insert threaded rod (HH) into each leg-hole in table-top, then connect table top (D) to legs (E) with flat washers (CC), spring washers (BB) and nuts (FF), as shown in Fig. 4. Tighten all the nuts using wrench (DD).

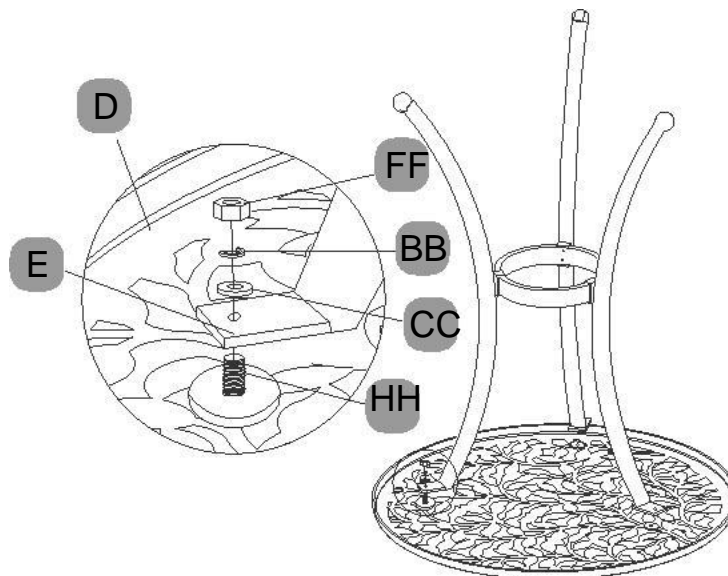


Fig. 4

- Before using, clean the bistro set completely with a soft dry towel.
- Do not place your bistro set in wet conditions where there is a risk of rust developing.
- When not in use, wipe off any dirt or loose objects, wash with water, rinse thoroughly and dry completely.
- Do not use strong detergent or abrasive cleaners.
- When not in use, store in a cool, dry location away from sunlight.

Dimensions	Table: 24" Diameter x 28 1/2" H	Chair: 18"L x 16 1/2" W x 33 5/8" H
	61 x 72 cm	45 x 41.5 x 85.5 cm
Product weight	13 kg	
	28 lb 10 oz	

This product carries a one (1) year warranty against defects in workmanship and materials.

Important: For technical assistance on assembly or replacement parts. In the continental U.S., you can call us toll-free at 1-866-578-6569 from 8 a.m. to 5 p.m. CST Monday – Friday. In the continental Canada, you can call us toll-free at 1-844-SUNJOY1 (1-844-786-5691) from 8 a.m. to 5 p.m. CST Monday – Friday. You can fax the replacement part form which is in the box to (740)-283-3549. You can also send us an email to customer.care@sunjoydirect.com. The manufacturer reserves the right to repair or replace the defective product, at its discretion.