

Continuity Tester Model CT6101

IMPORTANT: RECEIVING INSTRUCTIONS Visually inspect all components for shipping damage. If you find damage, notify the carrier at once.

Shipping damage is NOT covered by warranty. The carrier is responsible for all repair or replacement costs resulting from damage in shipment.



Figure 1

BEFORE USE:

READ ALL OPERATING INSTRUCTIONS BEFORE USE. Use extreme caution when checking electrical circuits to avoid injury due to electrical shock. Sperry Instruments assumes basic knowledge of electricity on the part of the user and is not responsible for any injury or damages due to improper use of this tester.

OBSERVE and follow all standard industry safety rules and localelectrical codes. When necessary call a qualified electrician to troubleshoot and repair the defective electrical circuit.

SPECIFICATIONS:

Operating Range: Use only on non-energized (“dead”) circuits.

Indicators: Visual Only

Operating Environment: 32° - 104° F (0 - 32° C)
80% RH max., 50% RH above 30° C

Altitude up to 2000 meters. Indoor use.

Pollution degree 2. Accordance with IED-664.

Cleaning: Remove grease and grime with clean, dry cloth.

Bulb Replacement Information: Type - TL3, Base - Mini-screw, Wattage - (0.25watts), Voltage - (2.33volts)

OPERATION:


WARNING

Only use on non-energized (“dead”) circuits.

1. Before using and to assure the batteries are good, test the tester by touching the metal tip and the alligator clip to each other. If the unit is operating properly the lamp inside the tester will glow. If the lamp does not glow then replace the batteries.
2. To test for continuity, attach the alligator clip to one end of the circuit or component to be tested and then touch the other end with the metal probe tip. If the circuit is continuous (shorted) then the lamp in the tester will glow. If the lamp does not glow then the circuit is “open” or intermittent.

BATTERY INSTALLATION:

Refer to Figure 2: Turn #1 counter clockwise to access battery compartment.

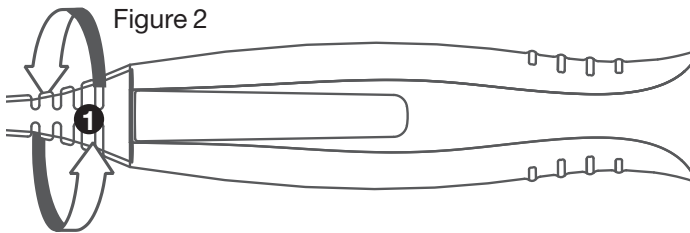

SPERRY INSTRUMENTS LIMITED LIFETIME WARRANTY

Subject to the exclusions and limitations detailed below, Sperry Instruments provides a limited lifetime warranty on products of its manufacture will be free from defects in materials and workmanship under normal use and service.

Limited

Limited means that Sperry Instruments warrants to the original purchasers of products from Sperry Instruments authorized distributors at the time of shipment such products shall be free of defects in material and workmanship while the tool is used under normal working conditions. Standard wear and tear, dulling over time, overloading, misuse, and acts of God are not covered under warranty. This warranty does not cover batteries, fuses, or test leads.

When a warranty claim arises, the purchaser must contact Sperry Instruments. If the defect comes under the terms of this limited warranty, Sperry Instruments will arrange, at its sole discretion, one of the following options:

- Product will be replaced

The purchaser is solely responsible for determining the suitability of Sperry products for the purchaser's use or resale, or for incorporating them into articles or using them in the purchaser's applications. The distributor is authorized to extend the foregoing limited warranty to its original purchasers in connection with the sales of Sperry products, provided that such products shall not have been altered by the distributor. The distributor shall be fully responsible for any warranties the distributor makes to its purchasers which are broader or more extensive than Sperry's limited warranty.

Lifetime Warranty

Warranty Limitation: The foregoing warranties are exclusive and are in lieu of all other express and implied warranties whatsoever, including but not limited to implied warranties of merchantability and fitness for a particular purpose. The foregoing warranties do not cover ordinary wear and tear, abuse, misuse, overloading, alterations, products which have not been installed, operated or maintained in accordance with Sperry's written instructions. Test leads, fuses, batteries and calibration are not covered under any implied warranty. "Lifetime" of products that are no longer offered by Sperry will be either repaired or replaced with an item of Sperry Instruments choice of similar value. Lifetime is defined as 5 years after Sperry discontinued manufacturing the product, but the warranty period shall be at least ten years from date of purchase. Original proof of purchase is required to establish original ownership of product.

No warranty will be honored unless an invoice or other proof of purchase date is provided to Sperry Instruments. Hand written receipts or invoices will not be honored.

©2016 Product Power, LLC All rights reserved.

- See more at: <http://www.sperryinstruments.com/en/resources/warranty-page#sthash.4sNKZu3b.dpuf>

SPERRY[®]
INSTRUMENTS

Sperry Instruments
800-645-5398
Menomonee Falls, WI 53051
sperryinstruments.com

SPR_TL_063_0516_CT6101