



Digital Timer

Model No.: EKT-200



Questions or Concerns?



(855) 686-3835

support@etekcity.com



Buttons & Functions

	Function	Operation
1	LCD display	Display time left/counting
2	Minutes button	Set minutes amount
3	Seconds button	Set seconds amount
4	Start / Stop button	Start / Stop timer
5	Pull-Out Stand	Pull out for table-top placement
6	Magnet	Attach to magnetic surfaces
7	Battery compartment	Insert / Replace batteries
8	Volume Switch	Adjust volume

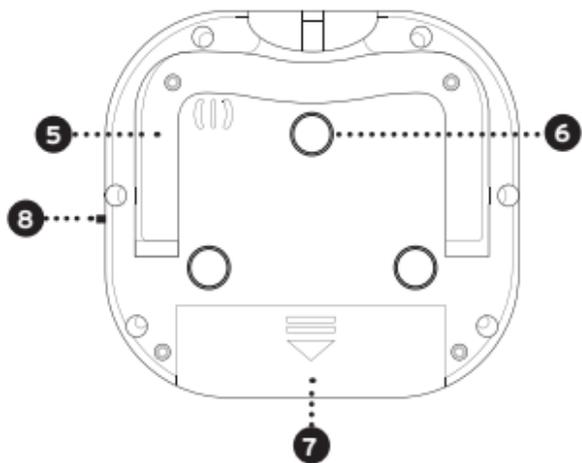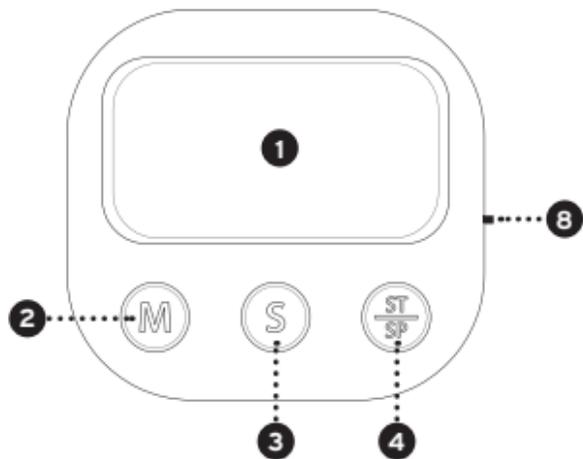

Set-Up

1. Remove the battery compartment cover by sliding it downward.
2. Insert the included AAA 1.5V battery under the correct polarity as indicated within the battery compartment.
3. Slide back in the battery compartment cover to reseal the compartment.
4. Press any button to turn on the device.

NOTE: The timer can be placed on a refrigerator or any other magnetic surface. The timer also includes a pull-out stand to allow table-top placement.



Operation

Countdown Function

1. Press any button to turn on the device.
2. Set the desired time by pressing the minutes (M) and seconds (S) buttons.
3. Alternatively, press and hold the minutes (M) or seconds (S) button for fast setting.
4. Press the Start / Stop button to start the timer countdown. The displayed time will be flashing.
5. When the set time has elapsed, the timer will sound a beeping alarm. Press any button to silence the alarm.

NOTE:

- If not silenced, the alarm will continue to sound for 1 minute before self-silencing.
- You can also adjust the volume to your liking by using the switch on the right side of the device.
- The timer will automatically turn off after 10 minutes of inactivity.
- To clear the display at any time simultaneously press the minutes (M) and seconds (S) buttons.

Timer Function

1. Press any button to turn the device on.
2. Press the minutes (M) and seconds (S) button together at the same time.
3. The LCD screen will display '00.00'.
4. Press the Start / Stop button to start the timer. The displayed time will be flashing.
5. Press the Start / Stop button once again to stop the timer at any time.

Pause Function

While in countdown or timer mode, press any button once to pause. To resume, press the Start / Stop button.

NOTE: When paused, press the minutes (M) and/ or seconds (S) button to adjust the time. To resume the function, press the Start / Stop button.

Clear Display

Press the minutes (M) and seconds (S) button together at the same time.

Stop Alarm

Press the Start / Stop button.

Battery Replacement

1. Open the battery compartment cover by sliding the cover downward.
2. Remove the used battery and dispose of it properly.
3. Install a new AAA 1.5 V battery, taking note of the correct polarity displayed in the battery compartment.
4. Reseal the battery compartment.

Package Contents

- 2 x Digital Kitchen Timer
- 1 x User Manual
- 4 x AAA 1.5Vbattery



Customer Support

Should you encounter any issues or have any questions regarding your new product, feel free to contact our helpful Customer Support Team. Your satisfaction is ours!

Etekcitey Corporation
1202 N Miller St. Suite A
Anaheim, CA 92806

Toll-Free: (855) 686-3835
Fax: (657) 202-1693
Local: (657) 500-1872
Email: support@etekcity.com

SUPPORT HOURS

Monday - Friday: 9:00 am - 5:00 pm PST



ETEKCITY®

Building on better living.



Scan here and join the community!
<http://www.etekcity.com>