

1-LIGHT PENDANT MODEL : 31849-COS

CARE & USE INSTRUCTIONS Important, Retain For Future Reference: READ CAREFULLY.





33 WEST BEAVER CREEK ROAD RICHMOND HILL, ONTARIO, CANADA L4B 1L8 Eurofase Customer Service: 1-800-660-5391, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

MODEL : 31849-COS 🖲



# FOR YOUR SAFETY



#### Here are some basic guidelines for working with electricity:

Before working on a circuit, go to the main service panel and remove the fuse or trip the breaker that controls that circuit. Tape a sign to the panel warning others to leave the circuit alone while you work.


Before touching any wires, use a voltage tester to make sure they are not live.

Whenever you check for voltage in a receptacle, check both outlets - each may be controlled by a separate wiring circuit. When replacing fuses, turn off the main power first. Make sure your hands and feet are dry, and place one hand behind your back to prevent electricity from making a complete circuit through your chest. Touch a plug fuse only by its insulated rim. Remove cartridge fuses with a fuse puller.


Use tools with insulated handles and ladders made of wood or fiberglass.

To protect children, place safety cover over any unused outlets.

CAUTION: Prior to installation, refer to ELECTRICAL CONNECTIONS section. If you do not have electrical wiring experience, refer to a do-it-yourself wiring handbook or have your fixture installed by a qualified licensed electrician.

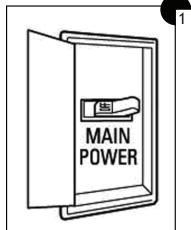

Shut off main power at the circuit breaker or fuse panel before removing old fixture.

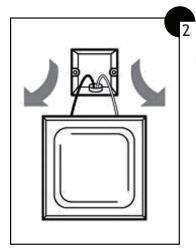

Remove old fixture. Disconnect wire.

### Safety instructions:


- Do not exceed the recommended wattage.
- □ Refer to the re-lamping label on the light socket for maximum wattage.
- □ Do not replace a bulb when electrical outlet switch is in the "ON" position.
- □ Do not immerse your lamp in water; doing so will damage the wire.
- Before you work on any electrical fixtures, you must be aware of the hazards involved with electrical circuitry and be familiar with the standard codes and practices for preventing accidents, and to reduce the risk of fire, electrical shock, or personal injury.
- Please make sure that the power outlet box in your home is properly grounded and directly supported by the building structure.
- Keep materials that burn easily away from lighted bulb.




MODEL : 31849-COS 🖲



# TOOLS NEEDED (NOT INCLUDED)

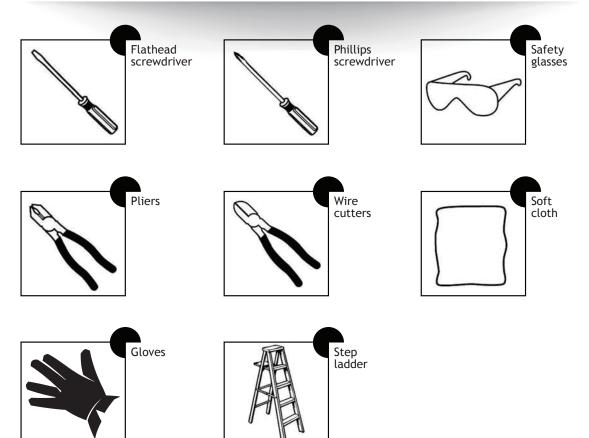

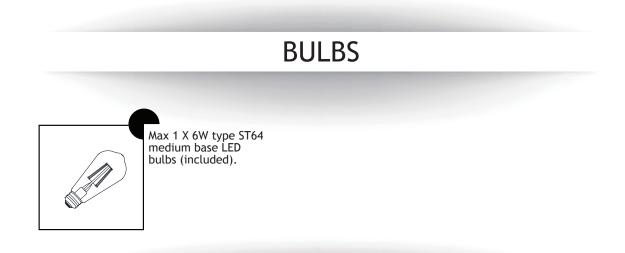





33 WEST BEAVER CREEK ROAD RICHMOND HILL, ONTARIO, CANADA L4B 1L8 Eurofase Customer Service: 1-800-660-5391, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.



## HARDWARE INCLUDED

Carefully unpack and identify each part to make sure you have everything ready for installation. Lay out each part on a clean flat area such as a table or carpet. Check to make sure you have the following: \*Parts are not to scale.

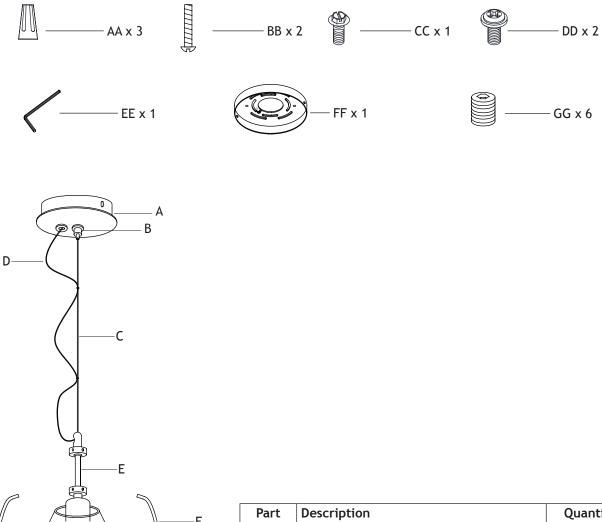

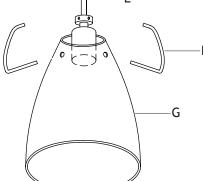


Part	Description	Quantity
A	Canopy	1
В	Wire restraint	1
C	Cable	1
D	Fixture wire	1
E	Fixture body	1
F	Glass holder	3
G	Glass shade	1




33 WEST BEAVER CREEK ROAD RICHMOND HILL, ONTARIO, CANADA L4B 1L8 Eurofase Customer Service: 1-800-660-5391, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.




# FIXTURE INSTALLATION

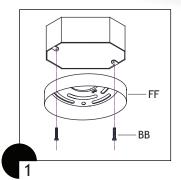


Install the crossbar (FF) to the junction box (not included) with the two outlet box screws (BB).

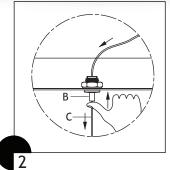


Press the wire restraint (B) to adjust the desired length of cable (C).

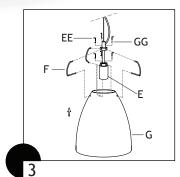


Attach the glass holder (F) over the hole on the glass shade (G) to the hole on the fixture body (E) and secure the glass holder (F) with the set screws (GG).

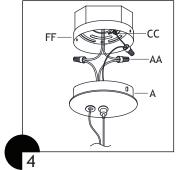


Push all slack fixture wire through the canopy (A) and into the outlet box. Trim the excess fixture wire, leaving a minimum of 6 in. hanging out of the outlet box. Connect the ground wire from the branch circuit to the ground screw (CC) on the crossbar (FF).

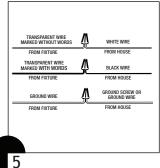

Connect the fixture wires as line drawing.

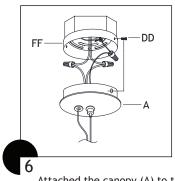

Attached the canopy (A) to the crossbar (FF) and secure it with the supplied two mounting screws (DD).

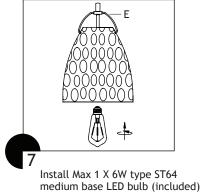

to socket of the fixture body (E).



33 WEST BEAVER CREEK ROAD RICHMOND HILL, ONTARIO, CANADA L4B 1L8 Eurofase Customer Service: 1-800-660-5391, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

MODEL : 31849-COS 🖲



## MAINTENANCE AND TROUBLESHOOTING

#### Product maintenance:

- To clean the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the exterior surface of the fixture.
- Do not use any cleaners with chemicals, harsh abrasives, or solvents. Use only a dry soft cloth to dust or wipe carefully.

#### Troubleshooting

Problem	Possible Cause	Solution
The bulb will not light.	The bulb is burned out.	<ul> <li>Replace the light bulb.</li> </ul>
	The power is off.	Ensure the power supply is turned on.
	Faulty switch.	<ul> <li>Test or replace switch.</li> </ul>
	Faulty wire connection.	□ Check wire.
The fuse blows or a circuit breaker trips when the light is turned on.		<ul> <li>Discontinue use of the lamp.</li> <li>Check wire connections.</li> <li>Contact a qualified electrician or call the Customer Care Service Team at Customer Service: 1-800-660-5391, 8 a.m 6 p.m., EST, Monday - Thursday, 8 a.m 5 p.m., EST, Friday.</li> </ul>

