

Please Read and Save this Use and Care Book.

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock do not immerse cord, plugs or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment. Or, call the appropriate toll-free number on the cover of this manual.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to OFF, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use extreme caution when removing tray or disposing of hot grease.
- Do not touch metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Oversized foods or metal utensils must not be inserted in a toaster oven, as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material including curtains, draperies, walls and the like, when in operation.
- Extreme caution should be exercised when using containers constructed of other than metal or glass.
- Do not store any material, other than manufacturer's recommended accessories, in this oven when not in use.



## COUNTERTOP OVEN HORNO PARA MOSTRADOR

### Customer Care Line:

USA 1-800-231-9786

**Accessories/Parts** (USA)  
1-800-738-0245

For **online customer service** and to **register** your product, go to **www.prodprotect.com/applca**

### Servicio para el cliente:

México 01-800 714-2503

**Accesorios/Partes** (EE.UU.)  
1-800-738-0245

Para **servicio al cliente** y para **registrar** su garantía, visite **www.prodprotect.com/applca**



MODEL/MODELO

○ TR0420

○ Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.

○ Do not cover crumb tray or any part of this oven with metal foil. This will cause overheating of the oven.

## SAVE THESE INSTRUCTIONS.

**This product is for household use only.**

### GROUNDING PLUG

As a safety feature, this product is equipped with a grounded plug, which will only fit into a three-prong outlet. Do not attempt to defeat this safety feature. Improper connection of the grounding conductor may result in the risk of electric shock. Consult a qualified electrician if you are in doubt as to whether the outlet is properly grounded.

**TAMPER-RESISTANT SCREW**  
**Warning:** This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

### ELECTRICAL CORD

a) A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. b) Longer extension cords are available and may be used if care is exercised in their use.

c) If an extension cord is used, the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance. 1) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally. 2) The appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.

**Note:** If the power-supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.



## CAUTION

**Important:**  
When using the **TIMER/TOAST** function, always turn the dial past 10 and then turn back or forward to desired setting.

**Note:** † Indicates consumer replaceable/removable parts

### 7. Rack support rails

† 6. Slide rack (Part #TR0420-04E)


† 5. Bake pan/drip tray (Part #TR0420-03E)

4. Swing-down crumb tray (under unit)

† 3. TOAST/TIMER selector with Stay On setting (Part #TR0420-02E)

† 2. Temperature selector (Part #TR0420-01E)

1. Power on indicator light

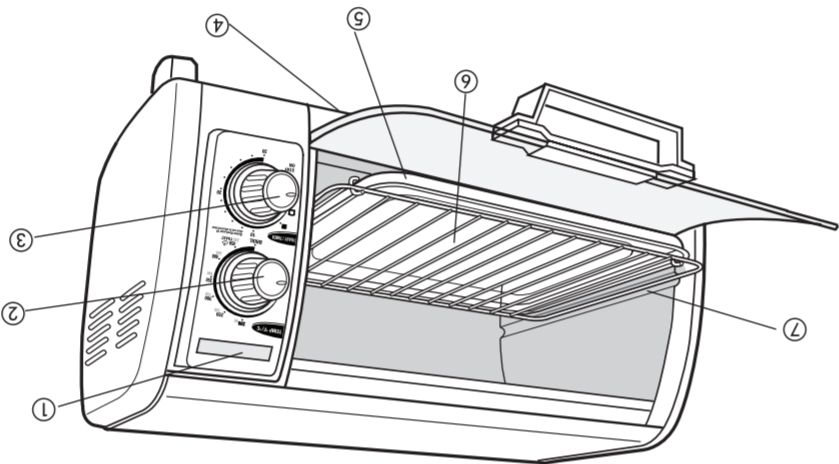

Product may vary slightly from what is illustrated.

## CARE AND CLEANING

This product contains no user-serviceable parts. Refer service to qualified service personnel.

### CLEANING YOUR OVEN

**Important: Before cleaning any part, be sure the oven is off, unplugged, and cool. Always dry parts thoroughly before using oven after cleaning.**

1. Clean the glass door with a sponge, soft cloth or nylon pad and sudsy water. Do not use a spray glass cleaner.
2. To remove the slide rack, open the door, pull the rack forward and out. Wash the slide rack in sudsy water or in a dishwasher. To remove stubborn spots, use a polyester or nylon pad.
3. Wash the bake pan in sudsy water. To minimize scratching, use a polyester or nylon pad.

### CRUMB TRAY

1. To open crumb tray, tip back oven, pull the crumb tray knob forward then down.
2. Wipe with a dampened cloth or paper towel and dry thoroughly.
3. To close, pull the crumb tray knob forward, swing the crumb tray closed, and then push knob in to lock into place before operating the oven.

### EXTERIOR SURFACES

**Important: The oven top surface gets hot, be sure the oven has cooled completely before cleaning.**

Wipe the top and exterior walls with a damp cloth or sponge. Dry thoroughly.

### COOKING CONTAINERS

Metal, ovenproof glass or ceramic bakeware without glass lids can be used in your oven. Follow manufacturer's instructions. Be sure the top edge of the container is at least 1½" (3.81 cm) away from the upper heating elements.

### BAKE FUNCTION

**Note:** For best results, when baking or cooking, always preheat the oven for at least 8 minutes at the desired temperature setting.

1. Turn the temperature selector to the desired temperature setting.
2. Set the timer to desired number of minutes including preheat time or to Stay On.
3. When using the **TIMER/TOAST** function, always turn the dial past 10 and then turn back or forward to desired setting.

**Tip:** Set the timer to the Stay On setting, if you want to control cooking time or need to cook your food longer than 30 minutes.

- The power indicator light comes on and stays on during cooking cycle.
- The heating elements cycle on and off to maintain the temperature.
- You can cook your food two ways:
  - In the bake pan placed on the slide rack, OR
  - Directly on the slide rack with the bake pan inserted on the rack support rails underneath the slide rack to catch drippings.

**Note:** Be sure the top edge of the food or container is at least 1½" (3.81 cm) away from the upper heating elements.

### TOAST FUNCTION

**Important: The oven top and side surfaces get hot.**

1. Set temperature selector to TOAST position.
2. Open oven door.
3. Insert slide rack.
4. Place the toast directly on the slide rack and close the door.
5. Turn toast shade selector past 10 and then turn back to desired toast shade. For best results, select the medium setting for your first cycle, then adjust lighter or darker.
6. Open oven door and using oven mitt or pot holder, slide out rack to remove toast.

- Remove packing materials and any stickers.
- Wash in sudsy water; rinse and dry with a cloth or paper towel.
- Replace slide rack/broil rack in oven.
- Select a location for the unit. Do not place unit under cabinets or too close to the wall to allow heat to flow without damaging counter space.
- Plug unit into electrical outlet.

### GETTING STARTED

This product is for household use only.

## HOW TO USE

4. Close oven door.
5. Cook food according to recipe or package instructions and check at minimum time to see if it is done.
6. Once cooking cycle is finished, the signal bell sounds. Turn the TOAST/TIMER selector to the Off position. The On indicator light goes off.
7. Open oven door and using oven mitt or pot holder, slide out rack to remove food.

### BROIL FUNCTION

**Note:** When broiling, preheat oven for 5 minutes.

1. Turn the temperature selector to Broil.
2. Open oven door and using the bake pan as a drip tray, insert it under the slide rack on the rack support rails.

**Important: You must set the timer or select Stay On for the oven to function.**

3. Set the timer to desired number of minutes including preheat time or to Stay On if you want to control cooking time or need to cook your food longer than 30 minutes.

**Important: When using the TIMER/TOAST function, always turn the dial past 10 and then turn back or forward to desired setting.**

4. Place food on the slide rack.

**Note:** Be sure the top edge of the food or container is at least 1½" (3.81 cm) away from the upper heating elements.

**Important: Food should not extend beyond the edges of the bake pan/drip tray to avoid drippings from falling onto the heating elements.**

5. Cook food according to recipe or package instructions and check at minimum time to see if it is done.
6. When finished broiling, the signal bell sounds. Turn the TOAST/TIMER selector to the Off position. The power indicator light goes off.
7. Using an oven mitt or pot holder, slide out broiling rack together with bake pan to remove food.

● **BLACK&DECKER** is a registered trademark of The Black & Decker Corporation, Towson, Maryland, USA

● **BLACK&DECKER** es una marca registrada de The Black & Decker Corporation, Towson, Maryland, E.U.

**Applca**  
Applca Consumer Products, Inc.

Copyright © 2011 Applca Consumer Products, Inc.

2011/5-17-118E/S

