Cycle Guide

The cycle guide below shows the options and recommended fabric types for each cycle.

= Available option

			■ = Available option										
	FABRIC TYPE	BASIC OF	ADDITIONAL OPTIONS										
CYCLE		Wash	Spin	Soil	Pre	Extra	Steam	Cold	Turbo	Fresh	Add	Delay	
		Temp.	Speed	Level	Wash	Rinse	Steam	Wash™	Wash™	Care	Garments	Wash	
Tub Clean	This cycle is designed to remove a mildewy or musty smell.						•					•	
Allergiene™	Cotton, underwear, pillow covers, bed sheets, baby wear		Extra High High★ Medium Low No Spin			•	•		•	•	•	•	
Sanitary	Heavily soiled underwear, work clothes, diapers, etc.	Extra Hot★	Extra High High★ Medium Low No Spin	Heavy ▼ Normal★ Light	•	•	•		•	•	•	•	
Bright Whites™	White Fabrics	Hot★ Warm Cold Tap Cold	Extra High High★ Medium Low No Spin	Heavy Normal★ Light	•	•	•		•	•	•	•	
Bulky/Large	Large items such as blankets and comforters	Hot Warm★ Cold Tap Cold	Medium★ Low No Spin	Heavy Normal★ Light	•	•	•	•	•	•	•	•	
Cotton/ Normal	Cotton, linen, towels, shirts, sheets, jeans, mixed loads	Extra Hot Hot Warm* Cold Tap Cold	Extra High High★ Medium Low	Heavy Normal★ Light	•	•	•	•	•	•	•	•	
Heavy Duty	Heavy soiled Cotton Fabrics	Hot Warm* Cold Tap Cold	Extra High★ High Medium Low No Spin	Heavy★ Normal Light	•	•	•	•	•	•	•	•	
Perm.Press	Dress shirts/pants, wrinkle-free clothing, poly/ cotton blend clothing, tablecloths	Hot Warm★ Cold Tap Cold	High Medium★ Low No Spin	Heavy Normal★ Light	•	•		•	•	•	•	•	
Delicates	Dress shirts/ blouses, nylons, sheer or lacy garments	Warm Cold ★ Tap Cold	Medium★ Low No Spin	Heavy Normal★ Light	•	•		•		•	•	•	
Towels	Towels	Hot Warm★ Cold Tap Cold	Extra High★ High Medium Low No Spin	Heavy Normal★ Light	•	•		•	•	•	•	•	
Speed Wash	Lightly soiled clothing and small loads	Hot★ Warm Cold Tap Cold	Extra High* High Medium Low No Spin	Heavy Normal Light★		•		•	•	•	•	•	

Cycle time depends on type and amount of load and detergent, water pressure and chosen additional options.

⁻ If the Turbo Wash™ option is on, you cannot select "No Spin" as your Spin Speed. (If the Turbo Wash™ option is off, you can select "No Spin" as your Spin Speed.)