

# MAYTAG® MICROWAVE HOOD COMBINATION

## MODEL MMV4205 AND MMV4206 QUICK REFERENCE GUIDE

### POPCORN (sensor)

Senses 3.0-3.5 oz (85-99 g) size bags:  
Place bag on turntable. Listen for popping to slow to 1 pop every 1 or 2 seconds, then stop the cycle.

### Pizza

1, 2, or 3 slices, 4 oz (113 g) each:  
Place on paper towel lined paper plate.

**MENU PROGRAMS:** Touch the menu control repeatedly to scroll through program options. Follow display prompts to select submenu items and/or amounts, and then start the program.

### REHEAT

- Beverage** – 1 or 2 cups, 8 oz (250 mL) each:  
Do not cover. The diameter of the cup's opening will affect how the liquid heats. Beverages in cups with smaller openings may heat faster.
- Casserole** – 1, 2, 3, or 4 cups (250, 500, 750 mL, or 1 L):  
Place in microwave-safe container and cover with plastic wrap. Stir and let stand 2-3 minutes after reheating.
- Soup** – Senses 1-4 cups (250 mL-1 L):  
Place in microwave-safe container and cover with plastic wrap. Stir and let stand 2-3 minutes after reheating.
- Dinner Plate** – Senses 1 plate, about 8-16 oz (227-454 g):  
Place food on microwave-safe plate, cover with plastic wrap, and vent.
- Sauce** – Senses 1-4 cups (250 mL-1 L):  
Place in microwave-safe container and cover with plastic wrap. Stir and let stand 2-3 minutes after reheating.
- Baked Goods** – 1, 2, 3, 4, 5, or 6 pieces, 2 oz (57 g) each:  
Place on paper towel. Two small rolls may be counted as 1 piece.

### DEFROST

- Meat** – 0.2 to 6.6 lbs (90 g to 3 kg):  
Remove wrap and place in microwave-safe dish. Do not cover.
- Poultry** – 0.2 to 6.6 lbs (90 g to 3 kg):  
Remove wrap and place breast side up in microwave-safe dish. Do not cover.
- Fish** – 0.2 to 4.4 lbs (90 g to 2 kg):  
Remove wrap and place in microwave-safe dish. Do not cover.
- Quick Defrost (auto)** – 1.0 lb (454 g) only:  
Remove wrap and place in microwave-safe dish. Do not cover. Turn over food at signal.

### BAKED POTATO (sensor)

Senses 1-4 potatoes, 10-13 oz (283-369 g) each, similar in size:  
Pierce each potato several times with a fork. Place on paper towel around turntable edges, at least 1" (2.5 cm) apart. Place single potato to the side of the turntable. Let stand 5 minutes after cooking.

### SOFTEN/MELT

- Soften Butter** – 0.5, 1.0, 1.5, or 2.0 sticks:  
Unwrap and place in microwave-safe dish.
- Melt Butter** – 0.5, 1.0, 1.5, or 2.0 sticks:  
Unwrap and place in microwave-safe dish.
- Soften Ice Cream** – 16, 32, or 64 oz (473, 946, or 1893 mL):  
Place ice cream container on turntable.
- Soften Cream Cheese** – 3 or 8 oz (85 or 227 g):  
Unwrap and place in microwave-safe dish.
- Soften Frozen Juice** – 12 or 16 oz (340 or 454 g):  
Remove lid from container.
- Melt Chocolate** – 4, 6, 8, or 12 oz (113, 170, 227, or 340 g):  
Place in microwave-safe dish.
- Melt Cheese** – 8 or 16 oz (227 or 454 g):  
Place in microwave-safe dish. Stir at signal.
- Melt Marshmallows** – 5 or 10 oz (142 or 283 g):  
Place in microwave-safe dish.

### AUTO COOK

- Frozen Entrée** – 10 or 20 oz (283 or 567 g) (sensor) or 40 oz (1134 g) (non-sensor):  
Remove from package. Loosen cover on 3 sides. If entrée is not in microwave-safe container, place on plate, cover with plastic wrap, and vent.
- Bacon** – 1, 2, 3, 4, 5, or 6 slices, average thickness:  
Follow directions on package.
- French Toast** – 1 or 2 pieces:  
Follow directions on package.
- Cereal** – 1, 2, 3, or 4 servings:  
Follow directions on package. Use microwave-safe bowl with high sides.
- Rice** – Senses 0.5-2.0 cups (125-500 mL) dry, white long grain:  
Follow measurements on package for ingredient amounts. Use microwave-safe dish with loose-fitting lid. Let stand 5 minutes after cooking or until liquid is absorbed. Stir.

