

FILTER CARTRIDGE REPLACEMENT

You should change your filter cartridge when the water flow is noticeably reduced or at least every 6 to 12 months.

1. Turn off water to the filter. Water must be shut off from **Valve A** (and **Valve C** if it is installed). **See Fig. 1A**, Page 2
2. Turn on the faucet nearest to the filter housing to release pressure.
3. Unscrew the filter canister and discard used cartridge. Wash the filter canister with mild soap and water. Do not use harsh cleaners or hot water.
4. Inspect the filter canister O ring. Make sure it is lightly lubricated and completely seated in the groove. It is recommended that you replace the O ring when you replace the filter.
5. Place a new filter cartridge into the canister, make sure it is centered and completely seated on the bottom seal.
6. Reinstall the canister to its cap. Hand tightening is all that is required to seal the unit. You can use a wrench to slightly give the canister an additional $1/2$ turn, but **DO NOT OVERTIGHTEN**.
7. Slowly turn on water to the filter by using the upstream shut-off valve (if there is one).
8. After installation, flush the cartridge for 5 minutes, wait one hour, then flush again for 5 minutes before using the water.

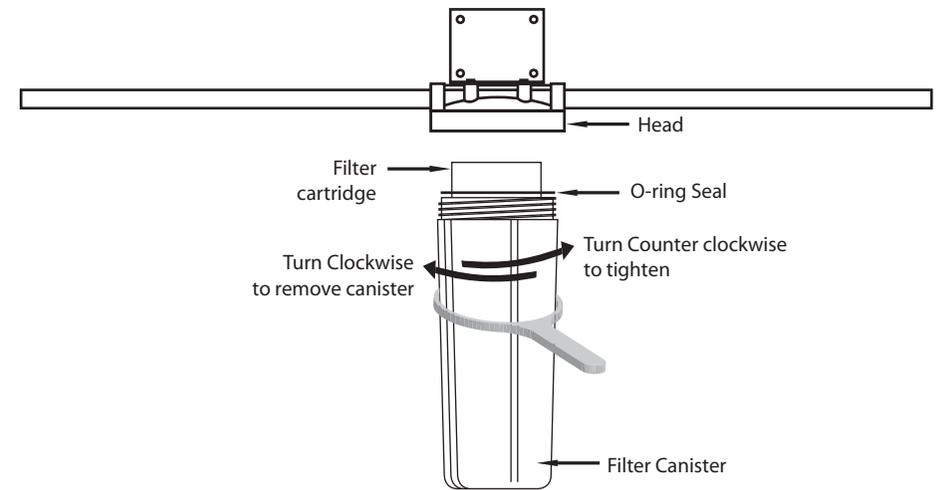


Fig 7