

# A...VR series INSTALLATION GUIDE



# **APPLICATION**

- For supply and exhaust ventilation, air conditioning and air heating.
- Mounting in drop ceiling, dry walls and more.

### **DESIGN**

- Made of high quality plastic (ABS plastic or polystyrene).
- Special aerodynamic disk valve design ensures uniform air distribution.
- Easy mounting with spacing lugs.
- The internal part has a sealing ring for more tight fit.

 
### INSTALLATION

# **TOOLS REQUIRED**






### A) TRACE THE HOLE



# C) ATTACH THE AIR DIFFUSER TO A DROP CEILING

 

## B) CUT THE HOLE



D) ADJUSTMENT



Rotate diffuser central part clockwise to reduce airflow or counterclockwise to enhance.

