 


## USE AND CARE GUIDE

---

### BECKER 4PC CHAT SET

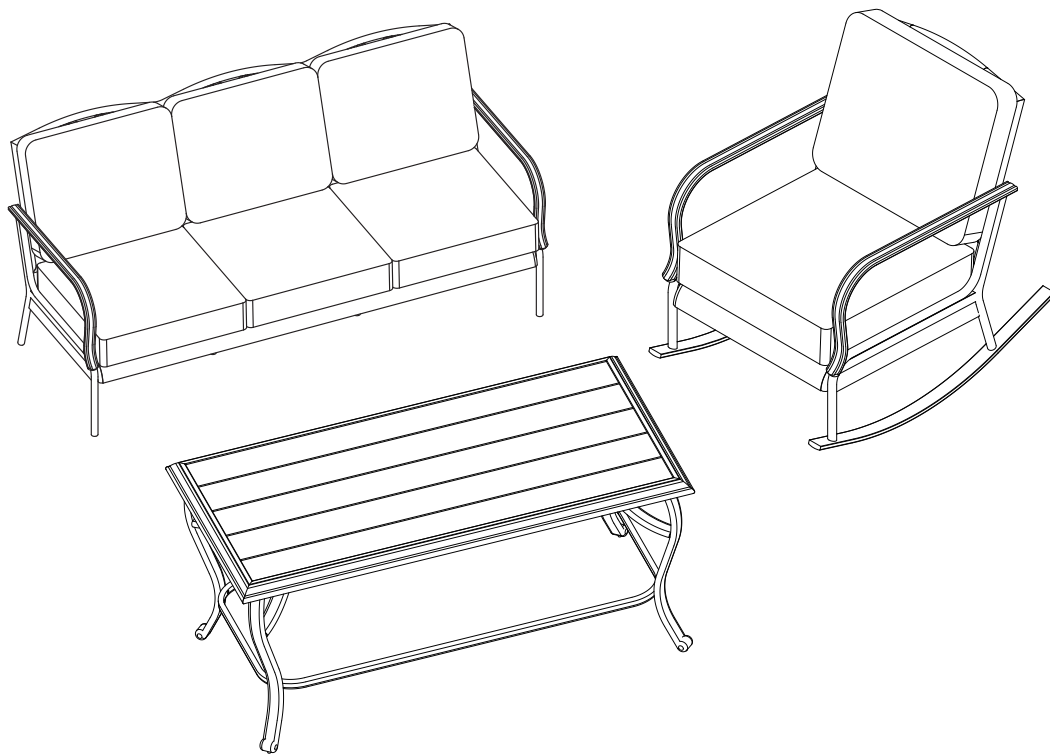

Questions, problems, missing parts? Before returning to the store,  
call Hampton Bay Customer Service  
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

**1-855-HD-HAMPTON**

**HAMPTONBAY.COM**

---

#### **THANK YOU**

*We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this chair. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!*

# Table of Contents

<b>Table of Contents</b> .....	<b>2</b>	Coffee Table Package Contents.....	5
<b>Important Safety Instruction</b> .....	<b>2</b>	Rocking Chair Package Contents.....	6
<b>Warranty</b> .....	<b>3</b>	Sofa Package Contents.....	7
What is Covered .....	3	<b>Assembly</b> .....	<b>8</b>
What is Not Covered .....	3	<b>Care and Cleaning</b> .....	<b>12</b>
<b>Pre-Assembly</b> .....	<b>4</b>		
Planning Assembly .....	4		
Hardware Included.....	4		

# Important Safety Instruction

## SAVE THESE INSTRUCTIONS READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

1. Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
2. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.



**DANGER:** Please keep children out of the assembly area at all times.



**IMPORTANT:** Please check the tightness of the bolts at least every 90 days.

# Warranty

---

**THIS IS A RESIDENTIAL WARRANTY AND DOES NOT APPLY FOR COMMERCIAL USE.**

## **2 YEAR LIMITED WARRANTY**

### **WHAT IS COVERED**

Residential use of this furniture is warranted for a two (2) year limited warranty period for the frame construction. The warranty is valid from the date of purchase and applies only to the original purchaser. If your Hampton Bay outdoor furniture fails structurally during normal use (other than damage as a result of dropping or breaking a cast part) within two (2) years of purchase, the manufacturer will repair or replace the frame at its discretion with the same or similar product if the original product is discontinued, at no charge. Cushions are warranted for a one (1) year period against seams separating or tearing. Fabric is covered under the 2 year limited warranty. The finish is warranted against peeling, cracking or blistering for a period of one (1) year provided the product has not been scratched or abraded. Scratches and chips resulting from normal wear and tear are not covered. Straps and/or wicker weave are warranted for a period of one (1) year against separation or tearing. Fading of the finish, straps and/or wicker weave resulting from exposure to elements is not covered. Stains as a result of chemical spills and certain food items are not covered.

### **WHAT IS NOT COVERED**

The following are expressly excluded from warranty coverage: failure caused by unreasonable or abusive use; furniture that was sold as clearance items, display models, or items purchased in "as is" condition; freight damage; furniture damaged by acts of nature, vandalism, fire, abuse, lack of proper care and maintenance, or improper assembly; normal fading of straps and fabric; discoloration of frame or fabric from exposure to elements, oils, spills, fluids or chemicals; table top breakage; hardware corrosion or rusting; buckling or splitting of tubing resulting from exposure to water and freezing temperatures; glass table tops; purchased or replacement parts; and plastics. Also excluded from warranty coverage is lost time of use and/or money, inconvenience, travel, packaging, or any other consequential or incidental damages. In no event shall the manufacturer's responsibility exceed the value of the replacement product. Warranty is to the original purchaser when items are purchased from one of our authorized retailers, and is not transferable. All warranty claims must be submitted with a dated register receipt within the warranty period. Should replacement of the warranted item be unavailable, the manufacturer reserves the right to substitute items of its choice similar in style, color and quality. For quality control purposes and verification, we reserve the right to request photographs of the damaged item(s). The terms of this warranty are subject to change without notice. Shipping and handling charges are at all times the responsibility of the claimant.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit [www.Hamptonbay.com](http://www.Hamptonbay.com).

 
# Pre-Assembly

## PLANNING ASSEMBLY

PLEASE READ COMPLETE INSTRUCTION MANUAL PRIOR TO ASSEMBLY!

Identify all parts packed in the carton against the parts list. Remove all protective materials and place the parts on a non-abrasive surface to avoid scratching.

## TOOLS REQUIRED




FF


## HARDWARE INCLUDED



 
NOTE: Hardware shown to actual size.

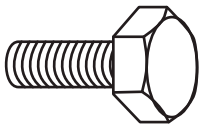

AA

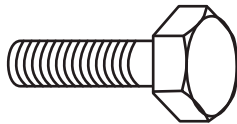 


BB

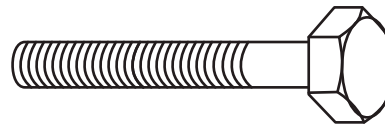 

CC



 DD


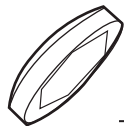


EE

Part	Description	Quantity
AA	M6*15 Hex Bolt	14+2
BB	M6*20 Hex Bolt	4+1
CC	M6*40 Hex Bolt	24+2
DD	M6 Washer	42+3
EE	M6 Hex Bolt Cap	42+3
FF	Wrench	3

# Pre-assembly (continued)




 
 
## COFFEE TABLE PACKAGE CONTENTS



Part	Description	Quantity
A	Table top	1
B	Table legs	4
C	Support ring	1

# Pre-assembly (continued)



 
 
 
 
 
## ROCKING CHAIR PACKAGE CONTENTS

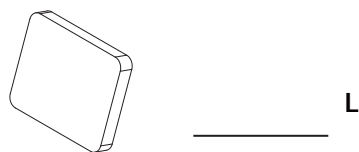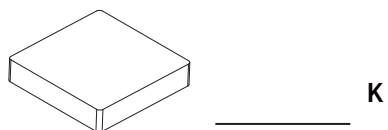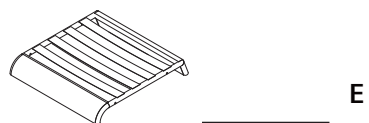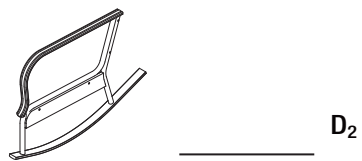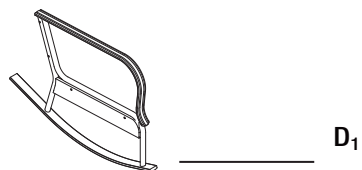

Part	Description	Quantity
D <sub>1</sub>	Left arm	2
D <sub>2</sub>	Right arm	2
E	Seat frame	2
F	Back frame	2
K	Seat cushion	2
L	Back cushion	2

# Pre-Assembly (continued)
       
## SOFA PACKAGE CONTENTS

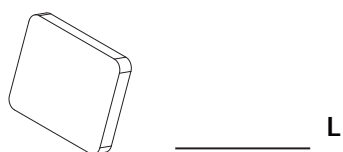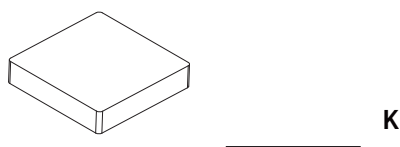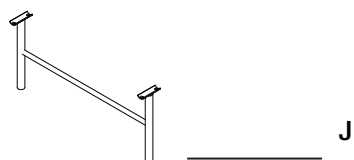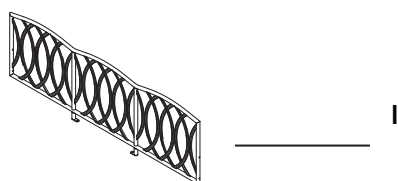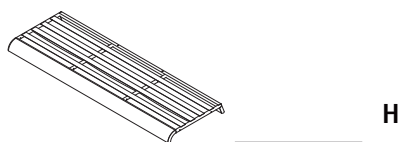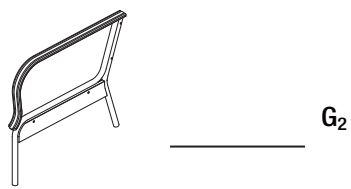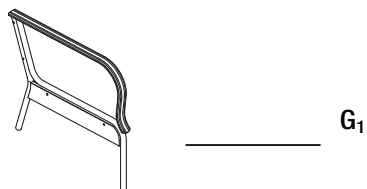


Part	Description	Quantity
G <sub>1</sub>	Left arm	1
G <sub>2</sub>	Right arm	1
H	Seat frame	1
I	Back frame	1
J	Support leg	1
K	Seat cushion	3
L	Back cushion	3

# Assembly
 
## 1 Attaching The Leg


- Place the table top (A) and table legs (B) on a soft, flat non-abrasive surface
- Attach the table legs (B) to the table top (A) using the M6\*15 Hex bolts (AA) and washers (DD).

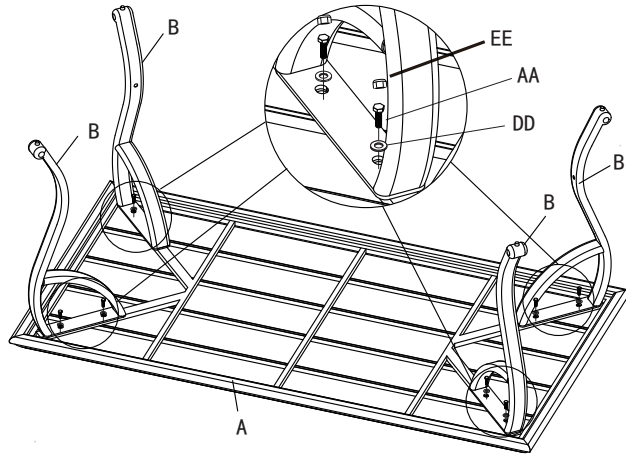

**IMPORTANT:** Do not fully tighten the bolts, only hand tighten until assembly is complete.


## 2 Attaching The Support Ring

 - Attach the support ring (C) to the legs (B) using M6\*20 Hex bolts (BB) and washers (DD).
- Please ensure all the bolts are assembled correctly. Tighten all the hex bolts (AA) and (BB) with the wrench (FF). Attach all the hex bolt caps (EE).

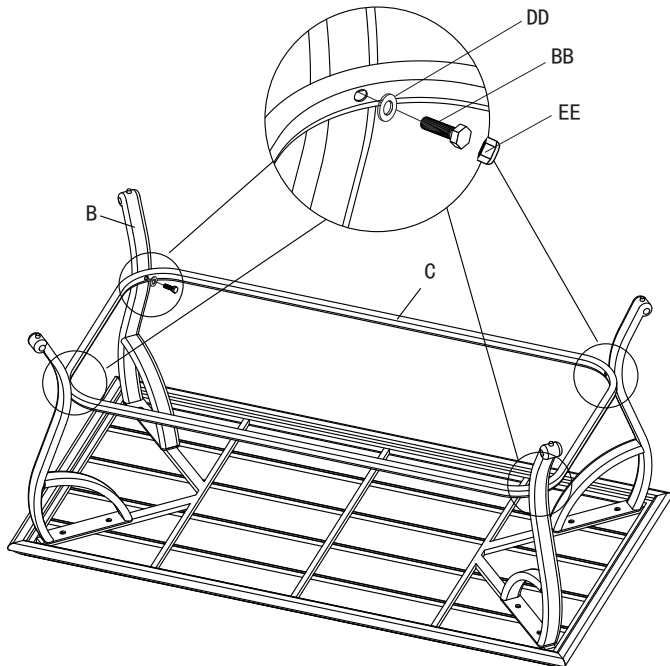

## 3 Positioning The Table

 - Turn the table over and set it down on its legs.
- The table is now ready for use.

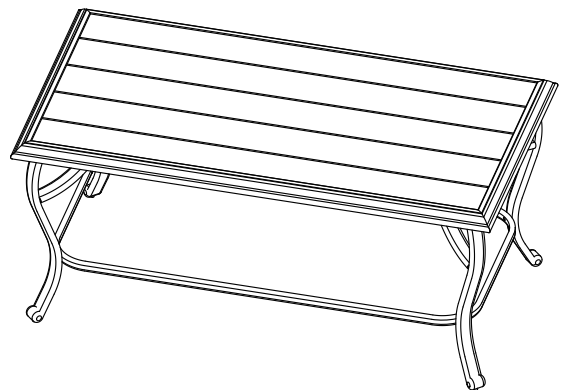




## Assembly (continued)

### 4 Attaching The Legs

- Place the seat frame (E) , left arm (D<sub>1</sub>)and right arm (D<sub>2</sub>) on a soft, flat non-abrasive surface.
- Attach the left arm (D<sub>1</sub>) and the right arm (D<sub>2</sub>) to the seat frame (E) using the M6\*40 Hex bolts (CC) and washers (DD).




 **IMPORTANT:** Do not fully tighten the bolts, only hand tighten until assembly is complete.

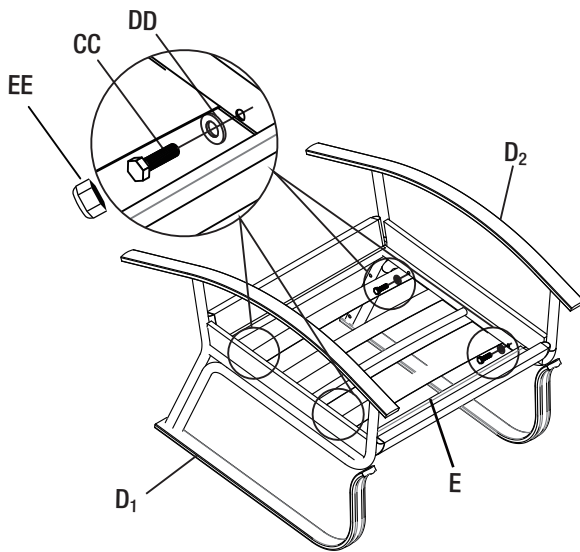


### 5 Attaching The Back

 - Attach the back frame (F) to the left arm (D<sub>1</sub>) and right arm (D<sub>2</sub>) using the M6\*40 Hex bolts (CC) and washers (DD).
- Please ensure all the bolts are assembled correctly. Tighten all the hex bolts (CC) with the wrench (FF). Attach all the hex bolt caps (EE).

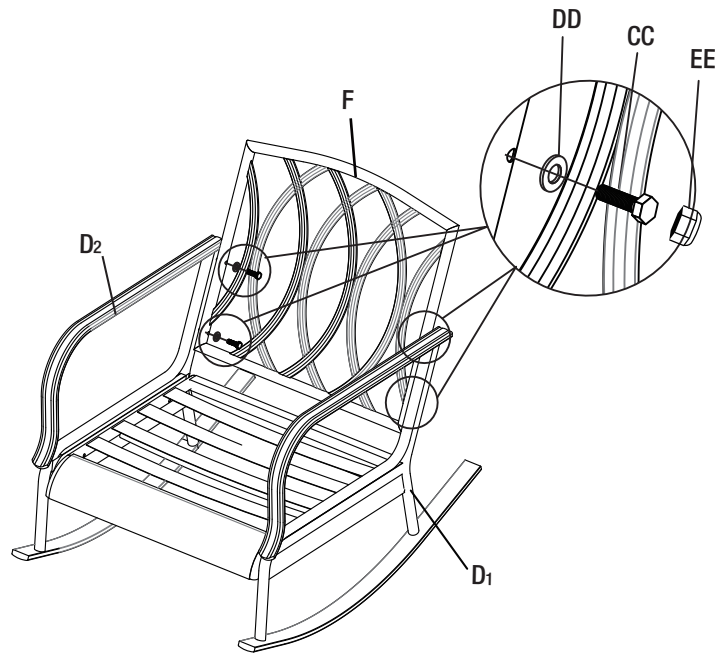

### 6 Attaching The Cushions

 
- Put the seat cushion (K) and back cushion (L) onto the chair.
- The chair is now ready for use.
- Repeat step 4~6 for the second rocking chair.

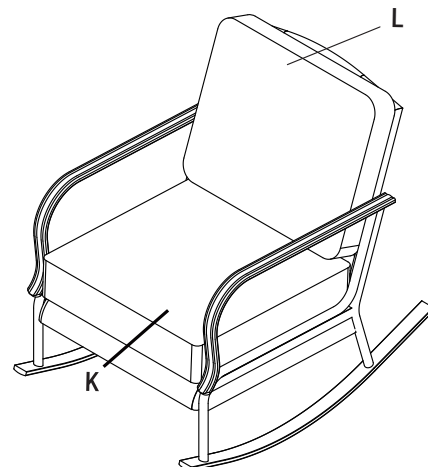


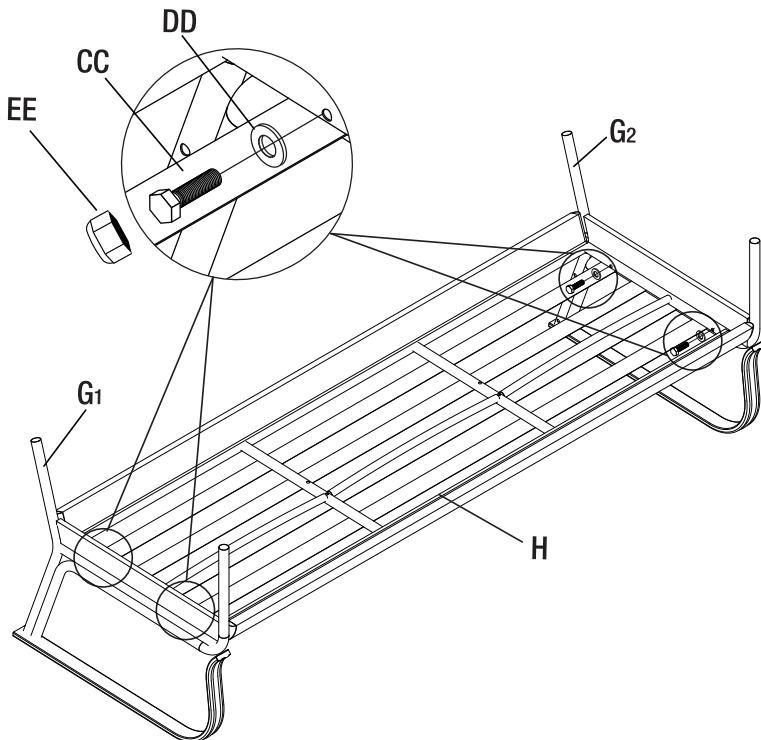 
## Assembly (continued)

### 7 Attaching The Legs To The Seat

- Place the seat frame (H), left arm (G<sub>1</sub>) and right arm (G<sub>2</sub>) on a soft, flat non-abrasive surface.
- Attach the left arm (G<sub>1</sub>) and the right arm (G<sub>2</sub>) to the seat frame (H) using the M6\*40 Hex bolts (CC) and washers (DD).


 **DANGER:** at least 2 persons required for this sofa assembly.


 **IMPORTANT:** Do not fully tighten the bolts, only hand tighten until assembly is complete.

 


### 8 Attaching The Back To The Legs

- Attach the back frame (I) to the left arm (G<sub>1</sub>) and right arm (G<sub>2</sub>) using M6\*40 Hex bolt (CC) and washer (DD).

 **DANGER:** at least 2 persons required for this sofa assembly.

 **IMPORTANT:** Do not fully tighten the bolts, only hand tighten until assembly is complete.

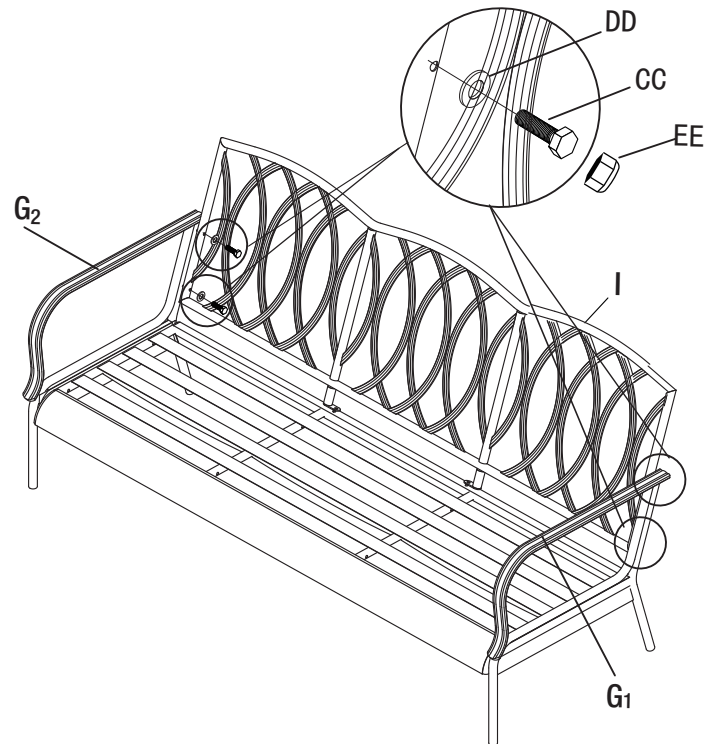


## Assembly (Continued)

### 9 Attaching The Back To The Seat

- Attach the back frame (I) to the seat frame (H) using the M6\*15 Hex bolts (AA) and washers (DD).




 **IMPORTANT:** Do not fully tighten the bolts, only hand tighten until assembly is complete.

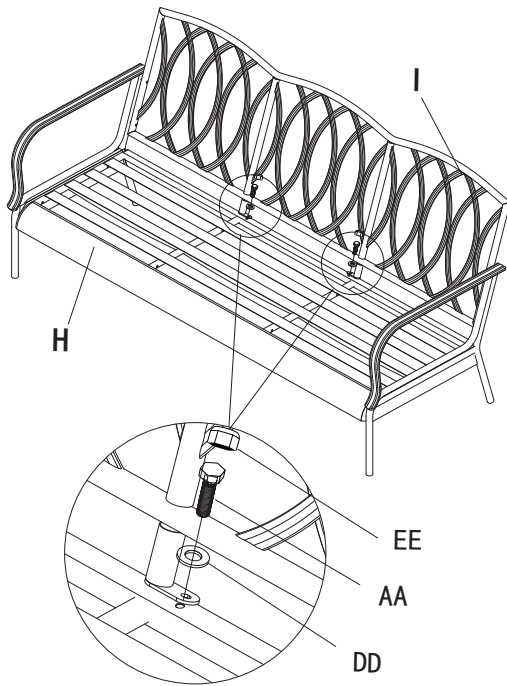


### 10 Attaching The Support Leg

 - Attach the support leg (J) to the seat frame (H) using the M6\*15 Hex bolts (AA) and washers (DD).
- Please ensure all the bolts are assembled correctly. Tighten all the hex bolts (AA) and (BB) with the wrench (FF). Attach all the hex bolt caps (EE).

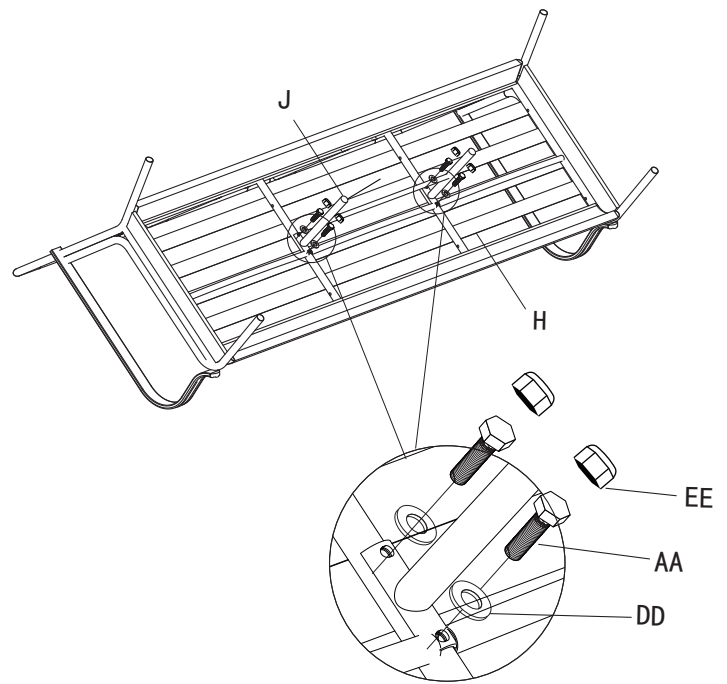

### 11 Attaching The Cushions

 - Put the seat cushion (K) and back cushion (L) onto the chair.
- The sofa is now ready for use.

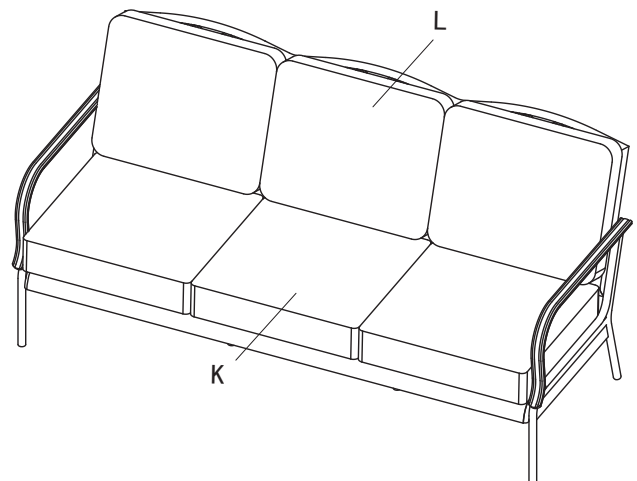

## Care and Cleaning

---

- Clean the furniture frame with a wet towel using a mild soap and water solution, dry completely with a soft towel.
- Clean the cushions and the sling seat material with a mild solution of soap and water. Hang cushions to drip dry completely. It is recommended that cushions be stored in a dry area during rain and if they are not in use and indirect sunlight. Do not machine wash or dry. Do not use bleach or strong solvents to clean any of your patio furniture. It will harm both fabrics and metal finishes.
- Caution should be used when using oils, lotions and other chemicals such as chlorine or repeated exposure to extreme weather conditions (including heat), which may cause permanent discoloration to the fabric.
- To maintain and protect the furniture, always cover it with an outdoor furniture cover or store in a safe dry area when not in use for long periods of time.

# HAMPTON BAY®

Questions, problems, missing parts? Before returning to the store,  
call Hampton Bay Customer Service  
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

**1-855-HD-HAMPTON**

**HAMPTONBAY.COM**

Retain this manual for future use.