

TROUBLESHOOTING:

	Possible Cause	Corrective Action
Bulb will not light	1. Bulb is burned out	1. Replace light bulb
	2. Power is off	2. Make sure power supply is on
	3. Faulty wire connection	3. Check wiring
Fuse blows or circuit breaker trips when light is turned on	Crossed wires or power wire is grounding out	Check wire connections

PRODUCT MAINTENANCE:

1. To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the shade and surface of the fixture.
2. To clean the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the inside shade and interior surface of the fixture.
3. Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.


LIMITED WARRANTY

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. **The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor / expense costs involved in the replacement or repair of said product.**



INSTRUCTION MANUAL INTERIOR 3-LIGHT SEMI-FLUSHMOUNT GRAYTON

HOME DEPOT SKU 611-549 UPC (773546224772)
BLACK FINISH

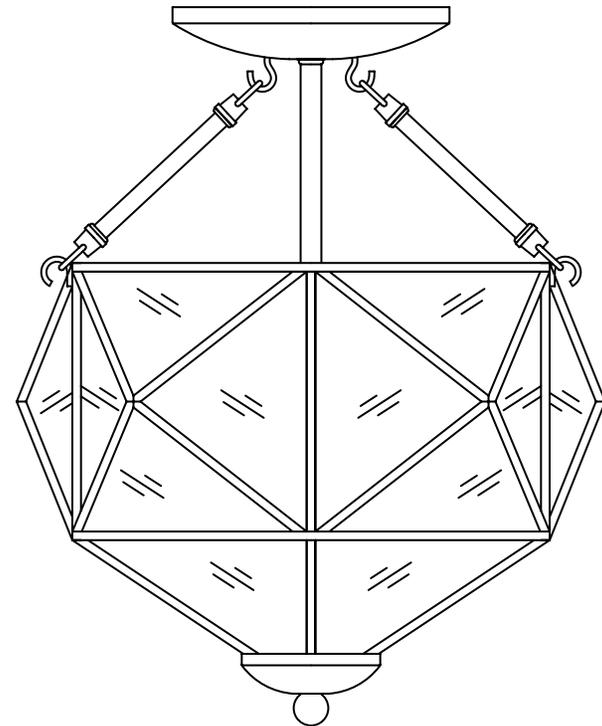

Thank you for purchasing this Hampton Bay interior decorative lighting. This product has been manufactured with the highest standards of safety and quality.

FEATURES:

This three light semi-flushmount has suspended chambers of clear etched glass that cascades a balanced spectrum of light within your home décor.

QUESTIONS, PROBLEMS, MISSING PARTS:

Before returning to your local Home Depot, please call our Customer Service Team at 1-877-527-0313 or visit www.homedepot.com. Please reference your **SKU 611-549 or (UPC 773546224772)**.

CAUTION:

1. Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.
2. CONSULT A QUALIFIED ELECTRICIAN IF YOU HAVE ANY ELECTRICAL QUESTIONS.
3. If you have any non-electrical questions about this fixture, please contact our Customer Service Team at 1-877-527-0313 or visit www.homedepot.com. Please reference your **SKU 611-549 or (UPC 773546224772)**.
4. Keep your receipt and these Instructions for Proof of Purchase.

INSTALLATION:



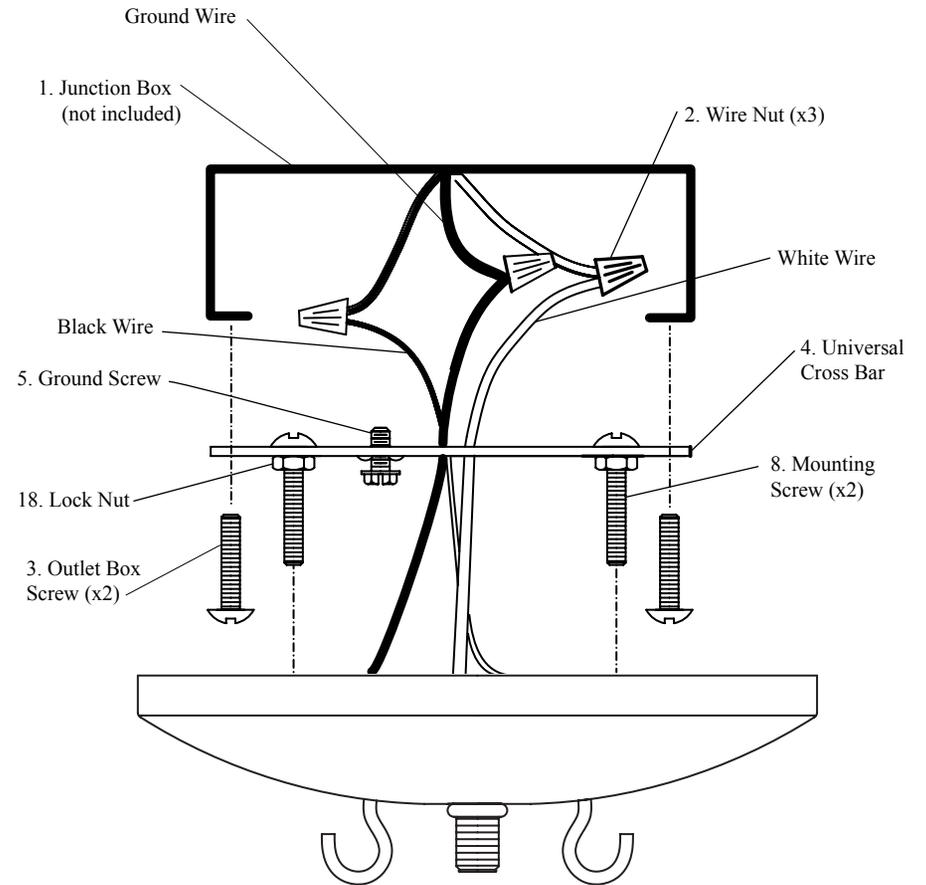


Figure #1

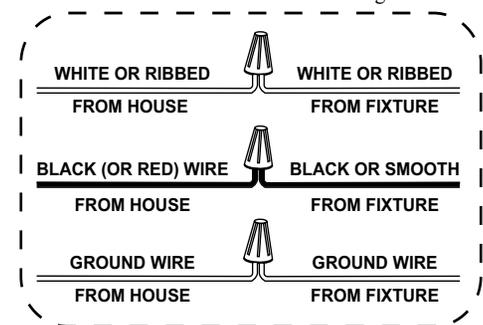

ADDITIONAL PARTS FOR INSTALLATION (included):

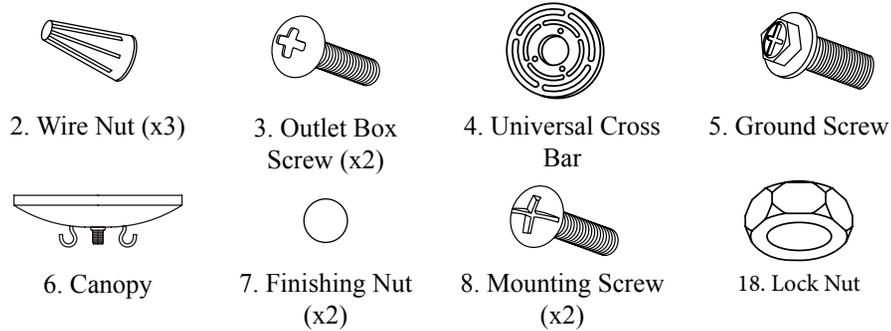


INSTALLATION INSTRUCTIONS:

1. Turn off power at main fuse box.
2. Mount universal cross bar (4) to junction box (1) with outlet box screw (3). Make sure black and white wires of junction box (1) run through the middle opening of the universal cross bar (4).
3. Fasten open end of ground wire (bar copper or green wire), to ground wire or ground screws (5) of junction box (1) or ground screws (5) on universal cross bar (4). (Refer to Figure #1)
4. Connect black wire of power supply to black wire of the fixture and connect the white wire of the power supply to the white wire of the fixture. (Refer to Figure #1)


NOTE: Always use wire nuts (2) or marrettes (included) to connect wire and push all excess wire and connections back into junction box (1).

5. Mount canopy (6) over universal cross bar (4) and tighten with 2 finishing nuts (7).

TOOLS REQUIRED FOR ASSEMBLY & INSTALLATION (not included):

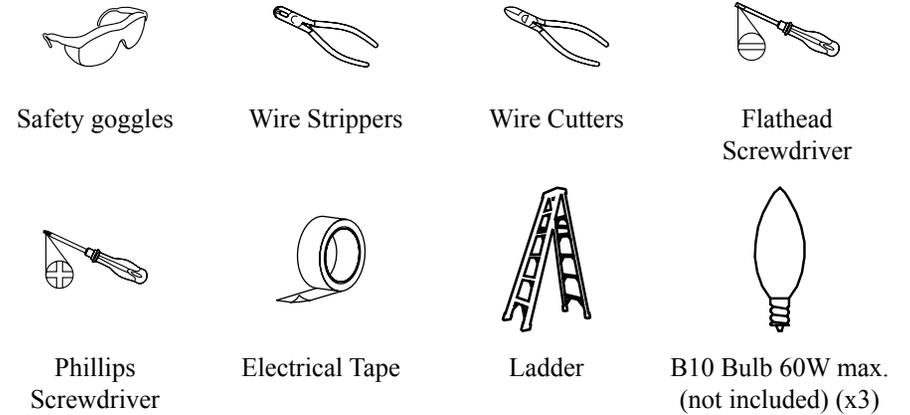

ADDITIONAL PARTS FOR ASSEMBLY (included):

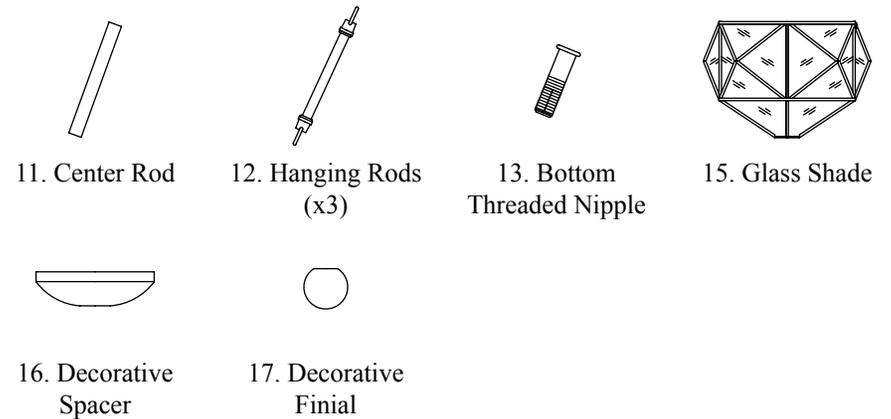

ASSEMBLY INSTRUCTIONS:

1. Carefully unpack the fixture; lay out all parts on a clean surface.
2. Attach center rod (11) to canopy finial (10). Then connect fixture frame to the base of the center rod (11).
3. Tighten bottom threaded nipple (13) to the bottom of the glass shade (15).
4. Place glass shade (15) over the bottom threaded nipple, then install the decorative spacer (16) over bottom threaded nipple (13).
5. Secure installation with decorative finial (17). Do not over tighten!
6. Complete assembly by attaching the hanging rods (12) to canopy hooks (9) and glass shade hooks (14).

SHADE AND BULB INSTALLATION:

1. Install 60W max. B10 bulbs (not included).

ASSEMBLY:

