

Model: BBB87269 Instruction Manual

DC:102015

Atomic Digital Wall Clock



Table of Contents

welcome	
Get Started	1
Button Functions	2
Settings: Time, Date, etc	3
Time Zone Settings and 12/24 Hour Time	
Set Time Alarm	5
Activate/Deactivate Alarm	
Snooze	5
Reset Button	
Care and Maintenance	
Specifications	6
Warranty and Support	6
FCC Statement	7
Canada Statement	7

Welcome!

Thank you for purchasing the Atomic Digital Wall Clock, designed for years of trouble free performance. Please read this important note about setup. Thank you!

IMPORTANT:

After installing batteries, the clock will look for the Atomic time signal for 10 minutes. The buttons will not function during the signal search.

Options:


- Hold the **Atomic Search** button $\widehat{\uparrow}$ for 5 seconds to stop the Atomic signal search.
- Manually set the time, date, and time zone.
- The clock will search for the Atomic time signal again after midnight.
- Press Atomic Search button anytime, to start an Atomic signal search.

For information about Atomic Time, visit:

www.nist.gov/pml/div688/grp40/wwvb.cfm

Get Started

 Insert 3 new "C" Alkaline batteries into the clock. Observe the correct polarity.

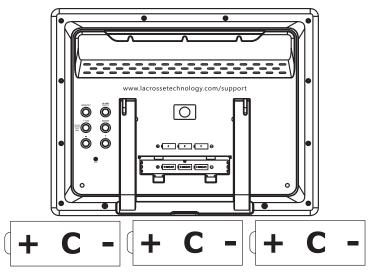

2. Wait for the clock to set itself to Eastern time zone (default), then press the **ZONE** button to select your time zone.

3. Stop the initial Atomic Time Search and set the time manually.

Button Functions

MODE/SET

Normal Time Display:

- Press and release to enter alarm mode
- Hold 5 seconds to set time

Alarm Mode:

- Hold 5 seconds to set alarm
- · Press and release to confirm

ALARM

 Press and release to activate or deactivate time alarm

+12/24

Normal Time Display:

- Press and release to select 12 hour or 24 hour time format
- Hold 5 seconds to change time zone

Time Set or Alarm Set Mode:

- Press and release to adjust value by 1
- Hold to adjust value quickly

SNOOZE

When alarm rings, press to activate snooze

MINUS

Time Set or Alarm Set Mode:

- Press and release to adjust value by 1
- Hold to adjust value quickly

Atomic Tower Button

 Hold 5 seconds to start or stop Atomic Time signal search

RESET

 Press once with a paper clip to return clock to default settings

Note: When clock is searching for Atomic time and tower icon is flashing, buttons will not function. Hold the Tower button for 5 seconds to stop the search, so buttons can be used.

















Settings: Time, Date, etc.

- Hold the MODE/SET button to enter time set mode.
- Press the +/12/24 or buttons to adjust values.
- Press **MODE/SET** to confirm adjustments and move to next item.

Settings order:

1. Hour, 2. Minutes, 3. Seconds, 4. Year, 5. Month/Date format (M/D or D/M), 6. Month, 7. Date, 8. DST indicator

Press **MODE/SET** to exit, or wait 30 seconds without pressing buttons to return to the normal time display.

Set Hours, Minutes and Seconds









Set Year and Date Format (Month/Day) or (Day/Month)



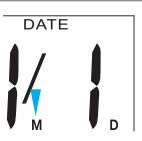

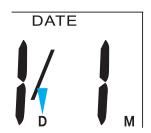

Set Month and Date





Select Daylight Saving Time (DST) Indicator ON/OFF






Time Zone and 12/24 Hour Time Format

Select Time Zone

- 1. Hold the +12/24 button to select the time zone.
- 2. There are four time zones:
- P = Pacific
- M = Mountain
- C = Central
- E = Eastern

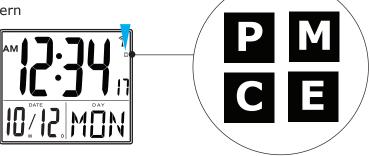

Select 12 Hour Time or 24 Hour Time

- 1. Press the + 12/24 button to select 12 hour or 24 hour time format.
- 2. Default is 12 hour time.
- 3. With 24 hour time AM/PM will not display.





24 Hour Time

Set Time Alarm

- 1. Press the **MODE/SET** button to enter Alarm Mode.
- 2. **AL** will show in place of the seconds...
- 3. Hold the **MODE/SET** button to enter alarm set mode.
- 4. Press the +/12/24 or buttons to adjust a hour.
- 5. Press the **MODE/SET** button to confirm and move to the minutes.
- 6. Press the **+/12/24** or **-** buttons to adjust the minutes.
- 7. Press the **MODE/SET** button to confirm and exit.

Setting Order:

- 1. Hour
- 2. Minutes

Set Alarm Hour and Minutes





Activate/Deactivate Time Alarm

- Press the **ALARM ON/OFF** button to activate the alarm.
- The bell icon will appears when alarm is active.



- Press the **ALARM ON/OFF** button to deactivate the alarm.
- The bell icon will disappear.

Snooze

- When the alarm sounds, press the SNOOZE button to trigger snooze alarm for 5 minutes.
- The snooze icon **Zz** will flash above the time.

Reset Clock

- If the clock display appears distorted or is not responding to buttons, use a pen or paper clip to press **RESET** one time.
- This will reset the clock to default settings.

Care and Maintenance

- Do not mix old and new batteries.
- Do not mix Alkaline, Standard, Lithium, or Rechargeable batteries.
- Always purchase the correct size and grade of battery most suitable for intended use.
- Replace all batteries of a set at the same time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed with correct polarity (+ and -).
- Remove batteries from equipment which is not to be used for an extended period of time.
- Promptly remove expired batteries.

Specifications

Power	• 3-C, IEC, LR14 batteries (not included)
Battery Life	• 12 months with reputable batteries brands
Dimensions	• 15.65" H x 19.25" W x 1.57" D (39.75 cm H x 48.89 cm W x 3.99 cm D)

Warranty and Support

La Crosse Technology, Ltd. provides a 1-year limited time warranty (from date of purchase) on this product relating to manufacturing defects in materials & workmanship.

Before returning a product, please contact our friendly customer support with questions or visit our online help:

Phone: 1-608-782-1610

Online Product Support:

www.lacrossetechnology.com/support

Product Registration:

www.lacrossetechnology.com/support/register

View full warranty details online at:

www.lacrossetechnology.com/warranty info.pdf

Warranty Address:

La Crosse Technology, Ltd 2830 S. 26th St. La Crosse, WI 54601

Protected under U.S. Patents: RE43903



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher.

This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences.

All trademarks and patents are recognized.

Canada Statement

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.