CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when it is not in use. Dust regularly with small brush or vacuum. Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

NOTICE

Please make sure that you have all parts indicated before you begin assembly of this item.

Part List and Hardware List


PIECE	DESCRIPTION	PICTURE (QUANTITY
A	Back		1x
в	Seat		1x
с	Right side		1x
D	Left side		1x
E1	Allen Bolt	@ <u></u>	8x
E2	Allen Screw	ور المعادمة (M6 x 60)	5x
E 3	Extra Bolt	(ع) M6 x 50	1x
E 4	Allen Key		1x



MODEL# PAT6725 Product Dimension: 38.98"W x 72.83"D x 26.77"H


Weight capacity : 600 lbs. Warning : Do not stand on the bench Warning : Do not torque bolts / screws



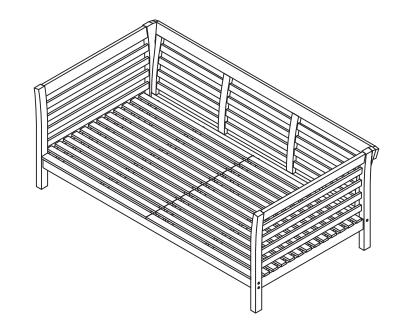

PREPARATION

Before beginning the assembly of the product, make sure all parts are present. Compare the parts with the package contents list and hardware contents list. If any parts are missing or damaged, do not attempt to assemble the product. Tool required for assembly (included): Allen Key.

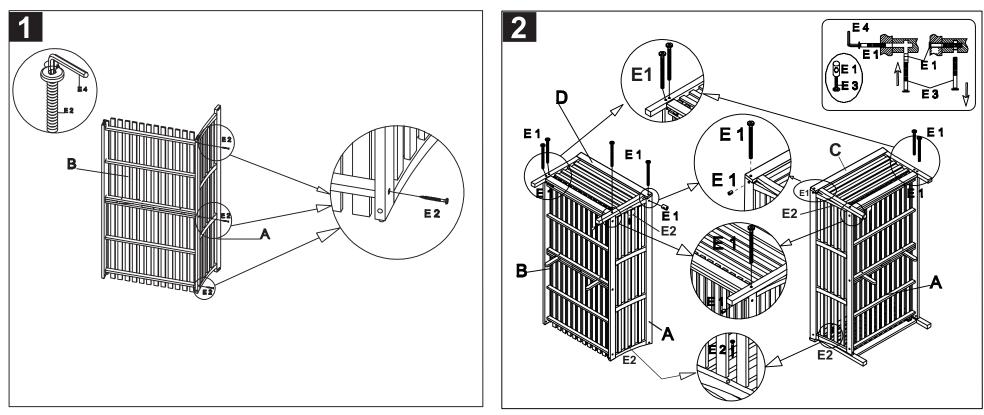

Step 1: attach the seat (B) to the back (A) by using the Allen Screw (E2) and tighten with the Allen Key (E4).

Step 2: attach the left side (D) to the seat and back as shown on the picture. Then fit by Allen Bolt (E1) and Allen Screw (E2) by using the Allen Key (E4). Repeat again with the right side (C).Tighten all bolts with the Allen Key (E4).