



# Use and Care Guide

Item #1002658103  
Model #NS OPP G64-B

 
## 8 ft. x 8 ft. Pop-Up Canopy



### PACKAGE CONTENTS



A - Canopy x1



B - Canopy frame x1



C - Stake x8



D - Hex wrench  
(for maintenance only) x1




E - Wheeled storage bag x1

## Setting Up the Canopy


### 1 OPENING THE CANOPY FRAME

- With a person on each end, lift and partially pull the canopy frame (B) apart.

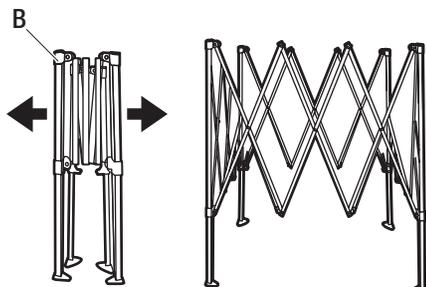


### 2 ATTACHING THE CANOPY

- Unfold the canopy (A) and place on top of the canopy frame (B).
- Secure the canopy (A) to the corners of the frame (B) by attaching the velcro tabs on the inside of the canopy (A) corners to the velcro tabs on the corners of the frame (B).

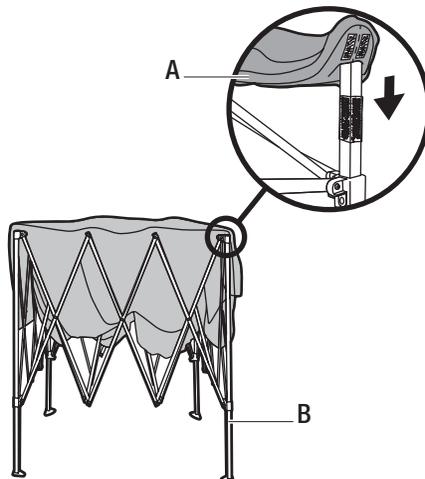


### 3 LOCKING THE FRAME

- From each corner of the canopy frame, lift the slider up until it clicks into the spring button.

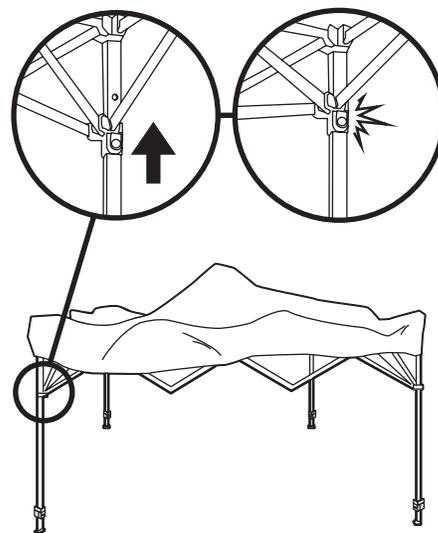


### 4 ADJUSTING THE CANOPY HEIGHT

- Push the push button and then pull down on each canopy leg to extend the canopy to your desired height.

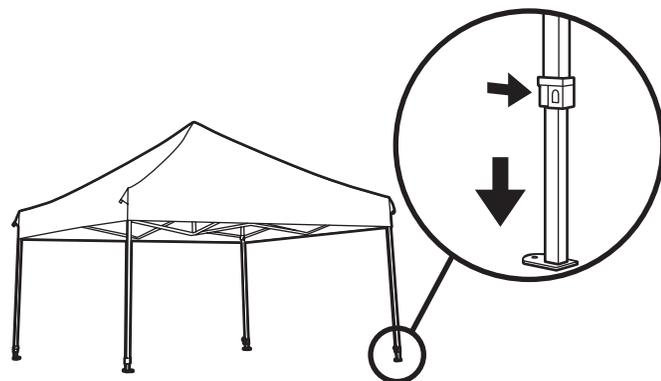

### 5 SECURING THE CANOPY IN PLACE


- Insert a stake (C) into the foot of each canopy leg.
- Measure out from the each leg to a proper distance and secure four stakes (C) to the ground. Tie the pre-attached ropes to the stakes (C) on the ground. Ensure the rope has the proper tension by adjusting the plastic adjusters on the ropes.

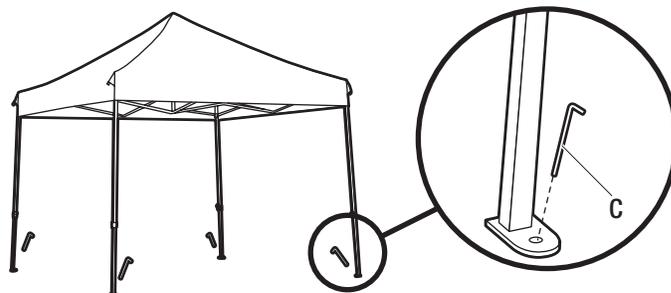

## Taking Down the Canopy


### 1 REMOVING THE STAKES AND SHORTENING THE LEGS

- Pull up all stakes from the ground.
- Press the push button on each leg and shorten the legs to their original height.

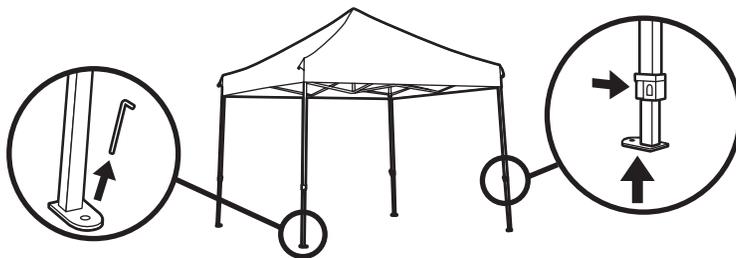


### 2 COLLAPSING THE CANOPY

- For each corner of the canopy, press the red button and pull down the slider until the spring button appears.

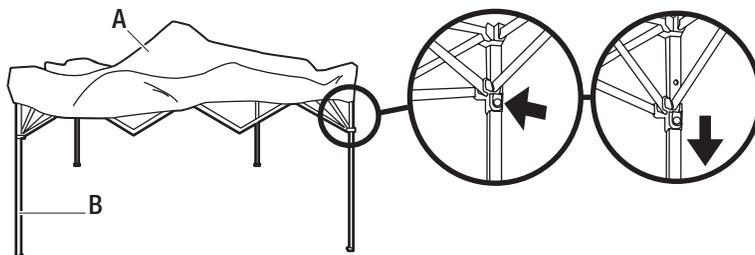


### 3 FOLDING THE FRAME

- Lift one corner of the frame until all legs are raised off the ground except for the 1 leg on the opposite corner. Push inward until the frame is fully closed.

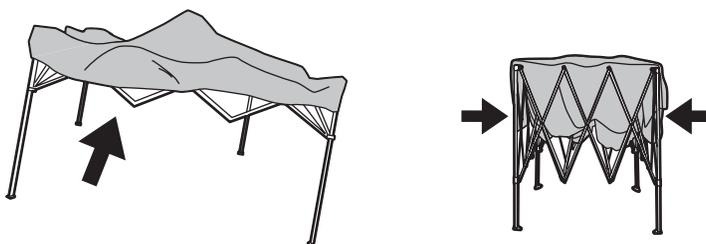

### 4 PACKING THE CANOPY IN THE STORAGE BAG

- With the canopy feet facing the rollers, slide the storage bag (E) over the closed canopy frame.
- Close the zipper on the storage bag (E).

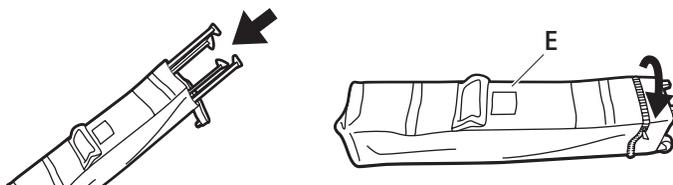

## Safety Information

Please read and save these instructions before attempting to set up this tent.

**WARNING:** KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.  
This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

**CAUTION:** Take care not to pinch your fingers in the frame during set up and take down.

**CAUTION:** Never set up or continue to use in any rain, wind, or storm conditions, especially lightning storms. Damage can occur to the tent and put you and others in potential danger.

**CAUTION:** Avoid setting up the tent on steep inclines.

**CAUTION:** Do not use this tent for permanent shelter. It is designed for temporary use only.

**CAUTION:** Never leave the tent unattended.

This product contains composite wood that complies with Phase 2 of CAATCM 93120 for formaldehyde.  
Manufacture ID: Guangxi Gaolin Forestry Inc. 24/02/2019

## Care and Maintenance

- Hand wash the canopy using only mild soap and water. Never use harsh detergents, abrasives, or bleach.
- Do not machine wash.
- Never fold or store the canopy when it is wet or damp. Allow it to dry completely to avoid mildew.

## Warranty

The manufacturer warrants for a period of 1 year from the original date of purchase, this product against any defects in materials or workmanship. At its discretion, the manufacturer may provide replacement parts to the original purchaser. Original receipt or proof of purchase as well as proof of defect is required. The manufacturer will not be responsible for shipping costs incurred outside the continental USA. Warranty is valid for the original purchaser 1 year from the date of purchase and is not transferable. This warranty does not cover any product purchased through non-authorized dealers and/or online auction websites.


### WHAT IS NOT COVERED

This 1 Year Limited Warranty does not cover normal wear and tear, abuse or misuse of this product including damage from inclement weather conditions, such as wind, rain, or hail. In case of inclement weather, remove all valuables and persons and seek appropriate shelter. Under no circumstances will the manufacturer be liable or responsible for any incidental or consequential damages. This product is designed and intended for recreational use only. Prolonged exposure to UV rays will cause any fabric to fade and deteriorate and is NOT covered by this 1 Year Limited Warranty. All replacement products or parts will assume the remaining warranty of the original product. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

Contact the Customer Service Team at 1-800-305-1726 or visit [HOMEDEPOT.com](http://HOMEDEPOT.com).

# Spare Parts

To inquire about replacement parts, please call 678-224-5227, extension 1.

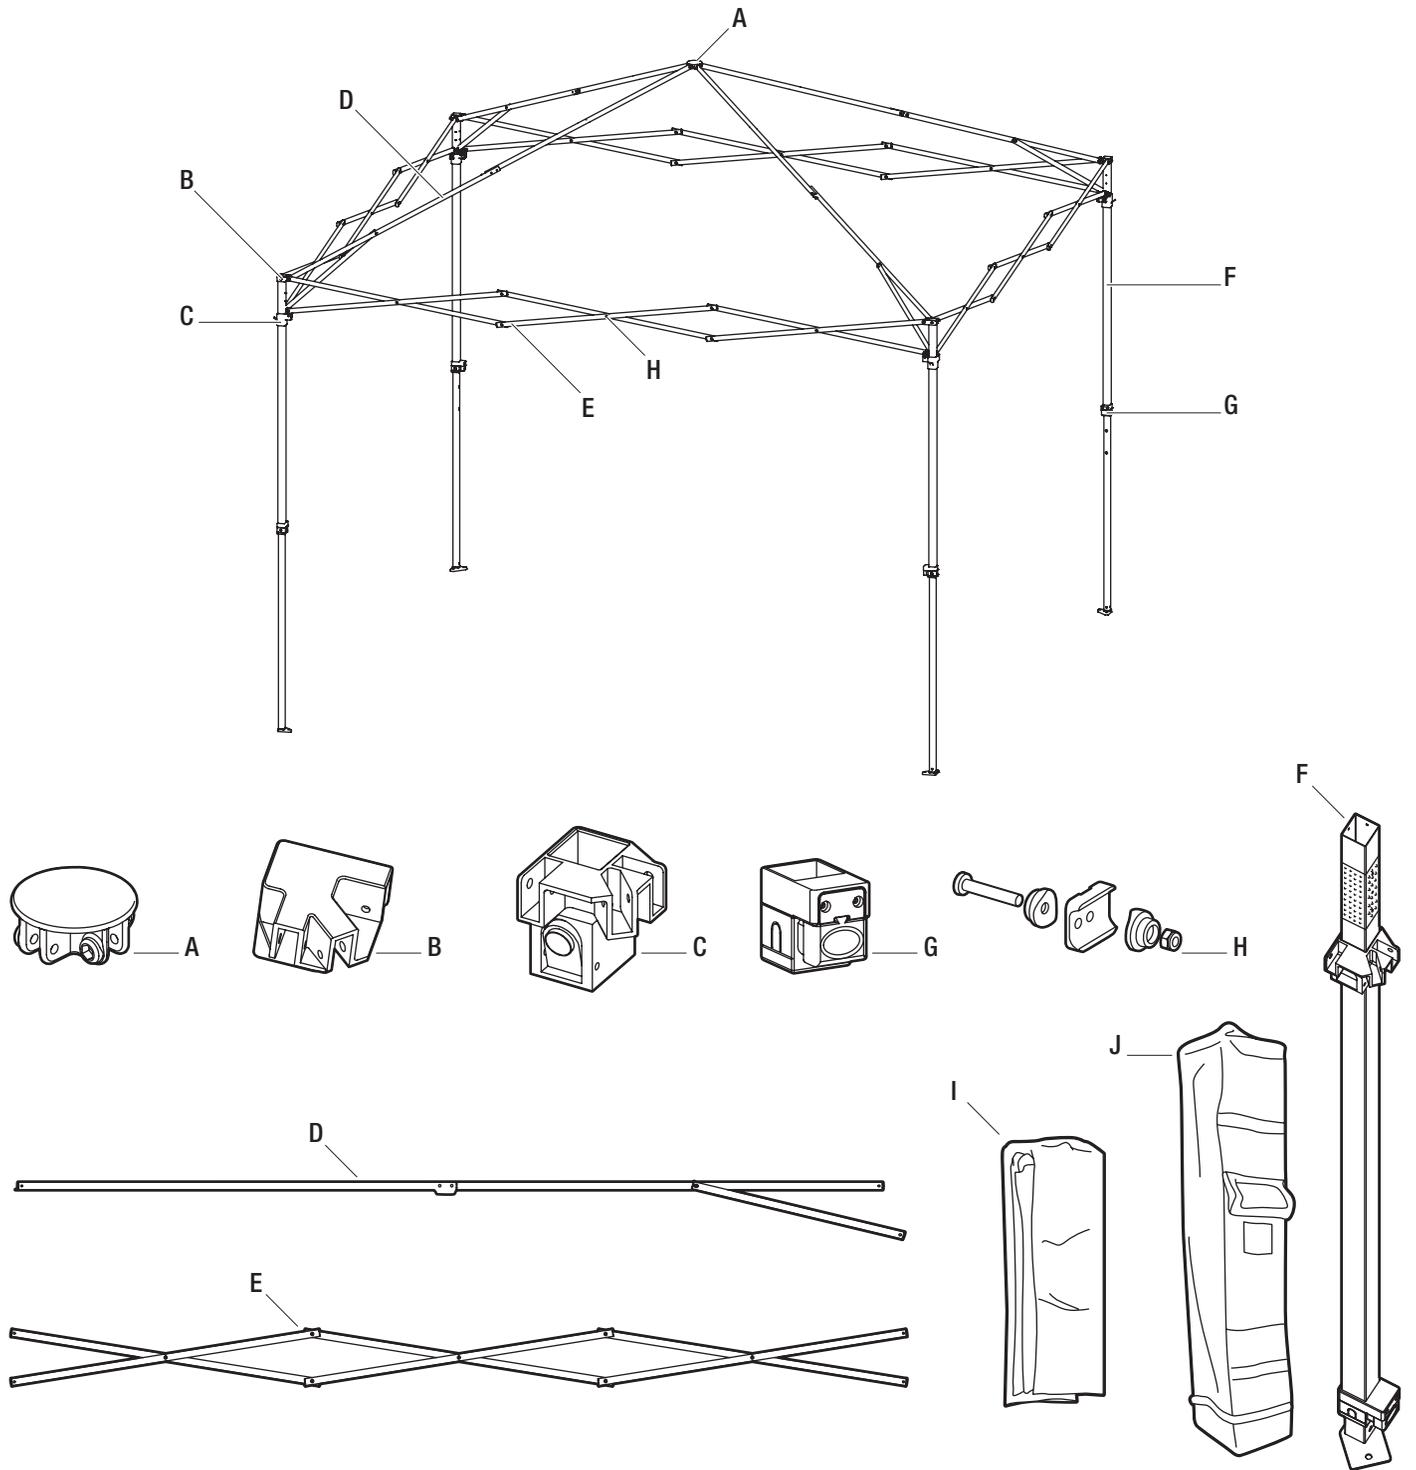

Part	Description	Reference Number
A	Central Hub	SP016
B	Top Cap	SP017
C	Slider	SP018
D	Ceiling Assembly	SP019
E	Eave Assembly	SP020
F	Leg Assembly	SP021
G	Leg Extend	SP022
H	Bolt Kit	SP011
I	Top	SP023
J	Wheeled Storage Bag	SP024