


USER GUIDE

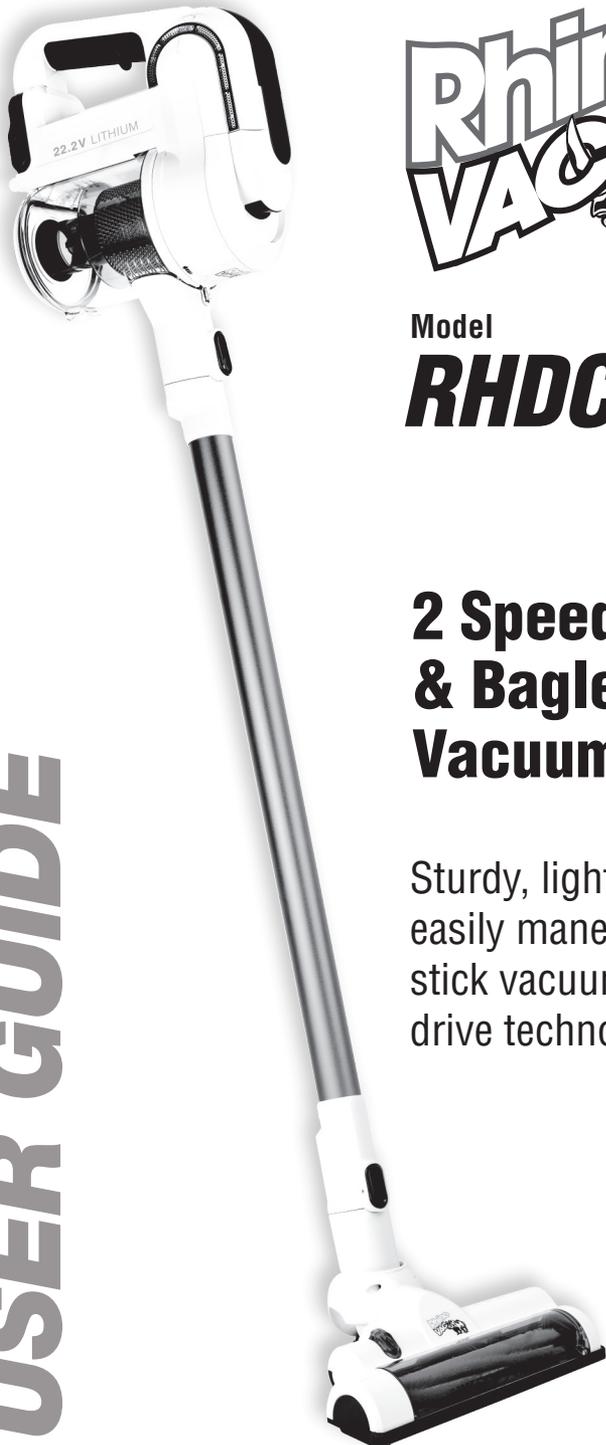

Model


RHDC2

2 Speed Cordless & Bagless Stick Vacuum

Sturdy, lightweight and easily maneuverable stick vacuum with BLDC drive technology.



RHDC2 ASSEMBLY

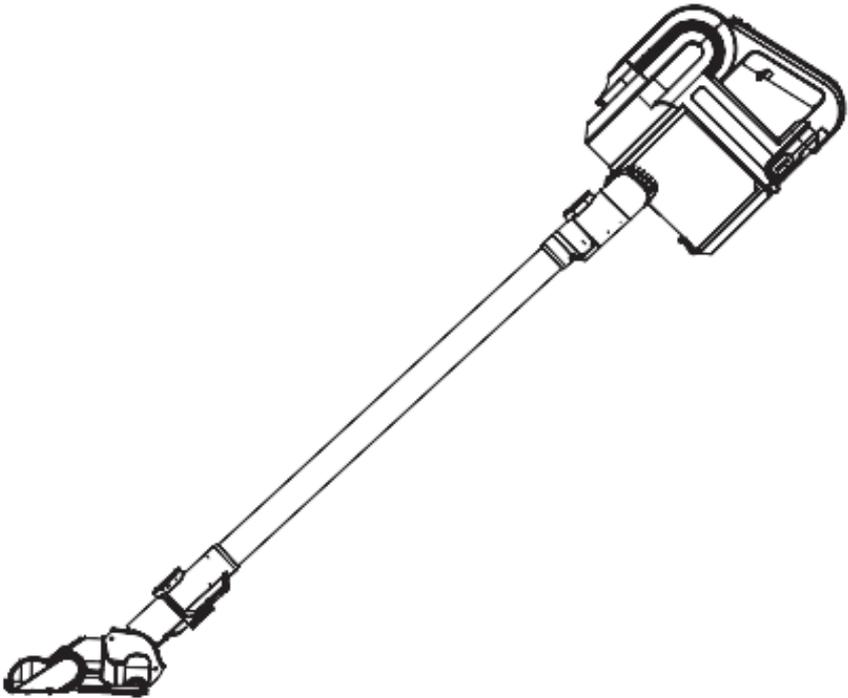


**Read all safety precautions before use.
Retain instructions for future reference.**

SAFETY PRECAUTIONS

1. This appliance can be used by children aged from 8 years and above and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without adult supervision.
2. This appliance is designed for domestic use only.
3. To disconnect the charger from a socket, grasp it and pull. NEVER use the cord to disconnect the charger.
4. DO NOT use outdoors.
5. DO NOT leave the appliance unattended when it is switched on.
6. If the supply cord is damaged, the charger must be discarded and replaced. DO NOT try to fix it.
7. DO NOT vacuum the following objects; otherwise, the vacuum cleaner will be damaged, catch fire or even cause severe human body injuries:
 - DO NOT vacuum large or sharp objects such as broken glass,
 - DO NOT vacuum harming liquid solvents like gasoline, detergent or corrosive acids,
 - DO NOT vacuum flammable or explosive substance such as gasoline or alcohol.
8. Check the device and connections regularly for visible damage. The device must not be used if the housing is damaged or another damage is present.
9. DO NOT use the appliance if any part is damaged or defective. Repairs by unqualified persons could be dangerous. Repairs should be carried out by a service agent or a suitably qualified person by relevant safety regulations.
10. DO NOT squeeze, twist or bend the charger's cord. Connect the charger somewhere safe, risk-free of tripping over its cord. Also keep the cord away from any heated source.
11. DO NOT manipulate the device nor the charger with wet hands.
12. DO NOT aim the vacuum cleaner to people or animals when in operation.
13. Connect the charger in a dry electrical outlet.
14. Only use the device with the accessories provided with the stick vacuum at purchase.
15. Use only with the provided charger at purchase.
16. This appliance includes Li-ion batteries; DO NOT incinerate the batteries or expose to high temperatures, as they may explode.

COMPONENTS

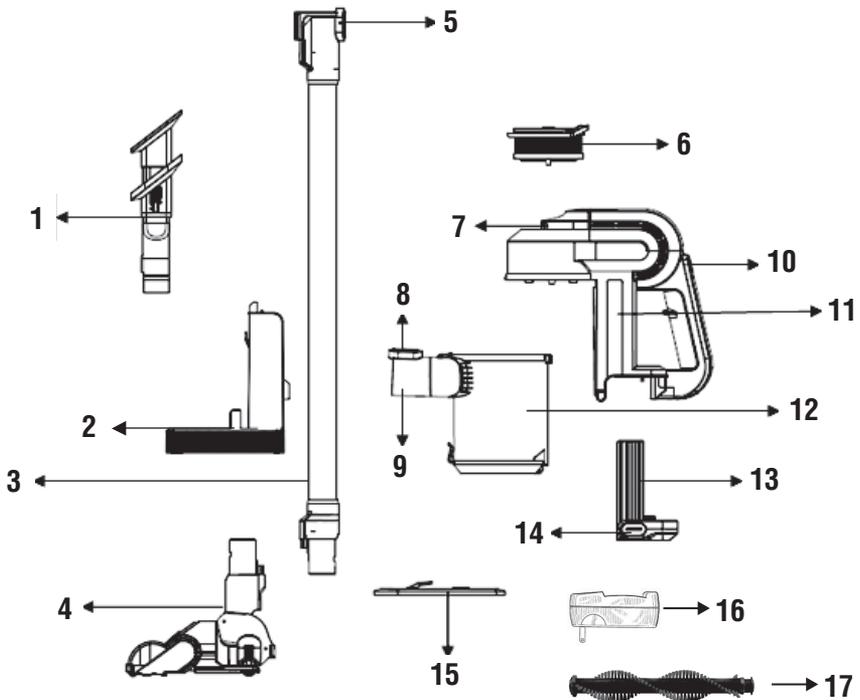

1. 3-in-1 Tool
2. Charging Base
RHDC2 - Base - Optional
3. Aluminum Tube
4. Carpet & Floor Turbo Brush
5. Quick Release Push Button
6. Filter
7. Lock For The Filter Compartment
8. Tools Release Button
9. Tube Inlet

10. On / Off Indicator
11. Main Body
12. Dust Bin
13. Li-ion Battery
14. Battery Lock
15. Wall Mount Bracket Hanger
16. Charger
17. Replacement Roll Brush

TECHNICAL DATA


Model	RHDC2
Rated voltage	22.2 V DC

Unpacking and Assembling

Verify that all the components are in the box (see page 4).


Step 1.

Install the battery as shown in the drawing below.

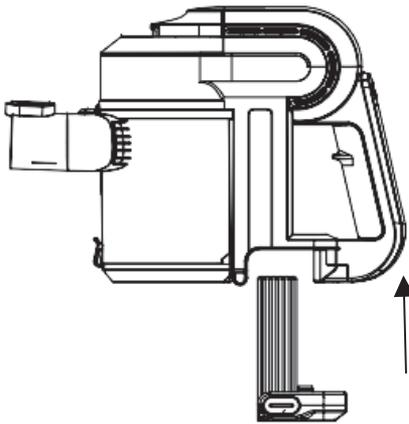


Step 2.

Insert the aluminum tube in the turbo brush as shown in the drawing below.

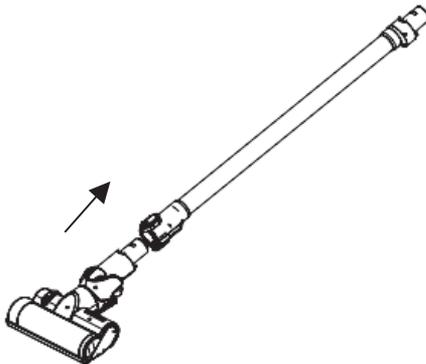

Step 3.

Insert the aluminum tube in the main body as shown in the drawing below.

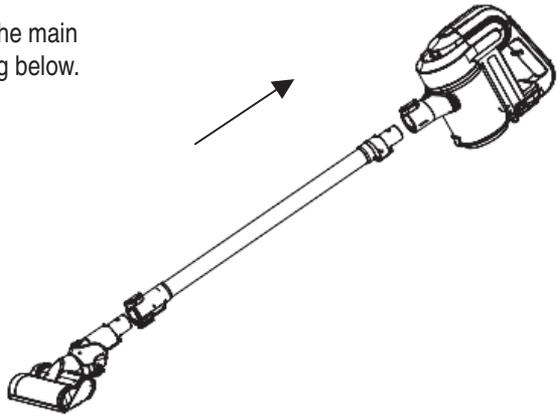


Step 4.

Insert the 3-in-1 tool in the aluminum tube or directly in the main body as suggested in the drawing below.




Simply push out the tip

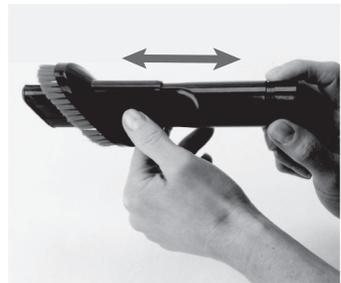

Push and slide



Result

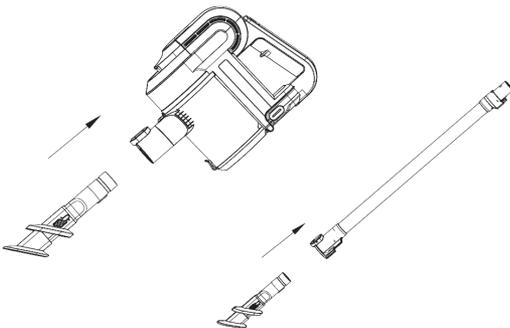

Vacuuming floors and carpets

You should regularly check that the nozzle cushions and the brush roll are clean to avoid unwanted marks on hard floors.

Follow step 1 to step 3 to assemble the device and press on the ON/OFF button to start the motor.

Vacuuming tables, furniture, car seats, etc.

Follow step 4 to install the 3-in-1 tool.

Pressing the ON/OFF button:


- Once will start the vacuum without the Turbo Brush.
- Twice will start the Turbo Brush.
- Thrice will turn off the device.

CHARGING

Turn off the stick vacuum. Plug the charger into the wall outlet. Locate the charging port on the main body and connect to begin charging.


It takes approximately 3 hours to fully charge the battery. The charging LED will turn off once charging the battery is complete. You may, for better performance, let the stick vacuum plugged in its charger while not in use.

The adaptor may become warm during charging: this is normal.

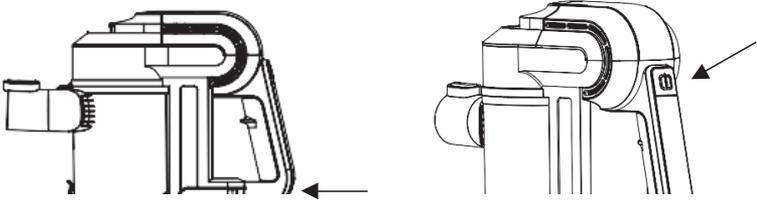


If you purchased the optional charging station for your stick vacuum, refer to the illustration below to charge the battery.

Charging station is **OPTIONAL**.

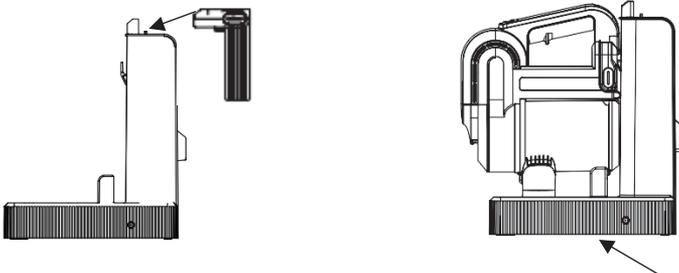


HOW TO EMPTY & CLEAN THE DUST BIN

1. Release the aluminum tube from the main body.

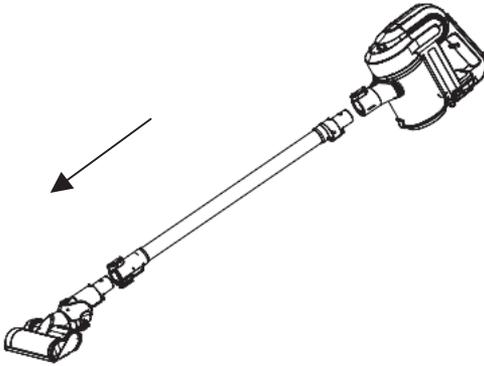

2. Press on the release latch to open the dust bin and empty its content in any trash bin.

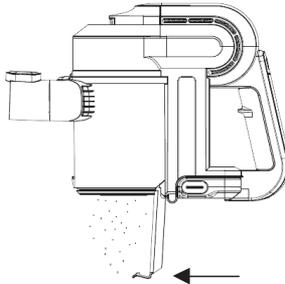


3. To clean the cyclone component from the dust bin, we suggest using a toothbrush or any small brush. Remove the dust bin from the main body by pressing on the release button. Before assembling back the dust bin to the main body, make sure all the components are dry.



TO CLEAN OR REPLACE THE FILTER


4. Press the button to open the front cover of the main body and take out the filter. Wash the filter under running water. Let it completely dry before reinstalling it.

To replace the filter, follow the same instructions as above or as illustrated below.

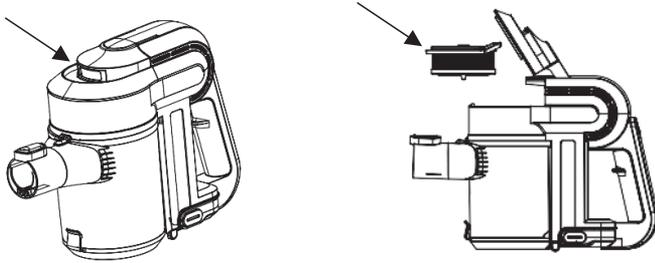

TO REINSTALL THE COMPONENTS

Follow step 1 to 4 on page 5 and 6.

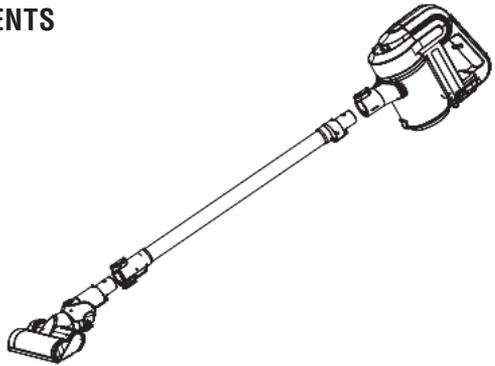


HOW TO CLEAN THE TURBO BRUSH

The device will shut down if the turbo brush is jammed or has cumulated to much debris.

If so, turn off the device and check for any debris causing the jam (often, hair or carpet thread is the issue). We suggest using scissors or a sharp knife to free unwanted debris.

The Roll Brush itself might need cleaning.

IMPORTANT: Do not wash the Roll Brush with water.

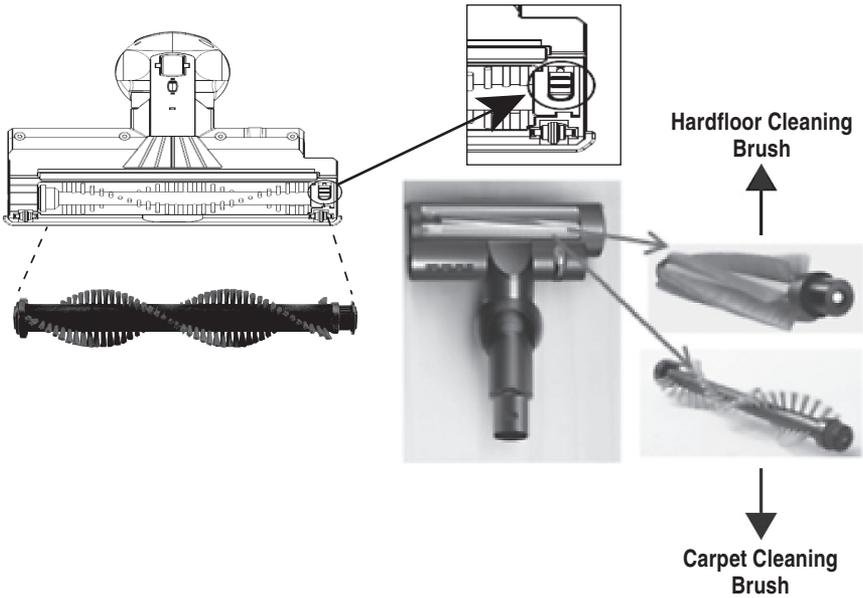



Cleaning the Wheels

Consider cleaning the wheels periodically. Wheels can be cleaned by prying out the wheel axle with a small screwdriver. After cleaning, wheels can easily be snapped back in their original socket by a simple thumb push.

How to Install the Wall Mount Bracket Hanger

On drywall, install the included plastic sleeve anchors first. Mark your hanging point and screw in place the wall mount bracket hanger at a superior height than the device itself. After installation, you will be able to hang your device as illustrated.

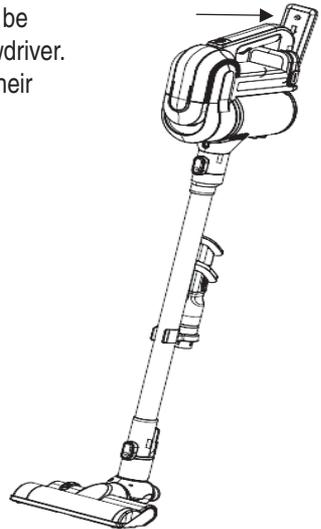

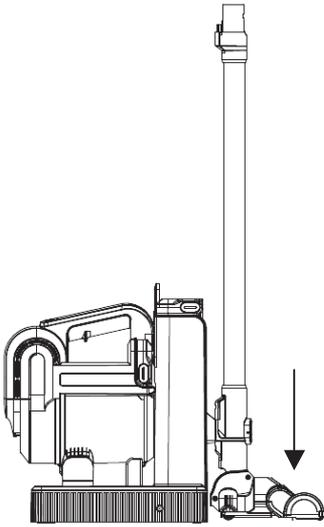

If you have purchased the optional charging base station, insert the device as illustrated.

NOTE: Visit www.rhino-vac.com to order the optional "charging base".

Basic Technical Data

BATTERY: 22.2 V 2200 mAh Li-ion

ADAPTER: Input 100~240V 50Hz

OUTPUT: 27V 800 mAh

CHARGING TIME: 3 hours



DISPOSAL

If the device is to be disposed, the battery should be removed. Used battery should never be disposed with household waste. A battery should always be taken to a recycling facility.

Made in China



VISIT OUR WEBSITE AT
www.rhino-vac.com

CONGRATULATIONS & THANK YOU
for having chosen one of our product.



ATTENTION

Do not return the unit to the retailer
before having spoken with us.

Our most precious wish is that
you really love your vacuum cleaner!

In case of problems, contact our experts at 1 800 361-2043
or by email at info@rhino-vac.com