

ADJUSTING YOUR MASTERFLOW AUTOMATIC FOUNDATION VENT

YOUR NEW VENT HAS BEEN FACTORY SET TO OPEN AT APPROXIMATELY 70 DEG FAHRENHEIT AND CLOSE AT APPROXIMATELY 40 DEG FAHRENHEIT

TO ADJUST FOR MORE DESIREABLE RESULTS, YOU CAN ADJUST THESE SETTINGS YOURSELF BY SIMPLY, VERY SLIGHTLY, TURNING THE SLOTTED WHITE POST THROUGH THE OPENING IN THE METAL COVER ON THE END OF THE VENT.

TO MAKE IT **CLOSE AT A COLDER** TEMPERATURE, TURN IT **CLOCKWISE**.

TO MAKE IT **CLOSE AT A WARMER** TEMPERATURE, TURN IT **COUNTER-CLOCKWISE**.

KEEP IN MIND THESE ADJUSTMENTS SHOULD BE VERY SLIGHT-LIKELY NO MORE THAN 1/16TH OF A TURN IN EITHER DIRECTION

