INSTRUCTION MANUAL

MC-2900PM

The MegaChef Crepe and Pancake Maker Breakfast Griddle



Important safeguards

- ❖ This appliance may not be used by children under the age of 14 and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- **❖** THE HOT PLATE GETS VERY HOT ENSURE YOU PLACE THE CREPE AND PANCAKE MAKER ON A COUNTER WHERE CHILDREN MAY NOT REACH THE HOT PLATE TO AVOID SERIOUS INJURY.
- Children under the age of 14 may not clean or operate the appliance and must be supervised at all times when near the appliance while it is in use or is cooling down.
- Ensure the cord is not damaged in any way prior to use. If it is in any way damaged, immediately return the unit.
- When using electrical appliances, basic safety precautions should always be followed, including the following:
 - Read all instructions.
 - Do not touch hot surfaces. Use handles or knobs.
 - To protect against electrical shock do not immerse cord, plugs or appliance in water or other liquid.
 - Close supervision is necessary when any appliance is used by or near children.
 - Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
 - Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
 - The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
 - Do not use outdoors.
 - Do not let the cord hang over the edge of a table or counter, or touch a hot surface
 - To disconnect, remove plug from wall outlet.
 - Do not use this appliance for other than intended use.

Save these instructions.

This product is for household use only.

Do not immerse this product in water.

Functions and Use:

- 1. Nonstick grill plates ensure effortless food release and quick cleanup.
- 2. Twin Light power and ready Indicators display On in Red and Ready in Green

Components:



NOTE: This product is for House Hold Use Only, and is not suited for commercial use and applications.

Getting started

- Remove all packing material and any stickers from your new crepe and pancake maker.
- Wipe plates with a damp cloth or sponge to remove any dust. Wipe dry with a soft cloth or paper towels. **DO NOT SUBMERGE IN WATER TO CLEAN.**
- Select a location where the unit is to be used:
 - You'll need to leave enough space between the back of the unit and the wall to allow heat to flow without damaging your walls and cabinets.
- Plug the cord into a standard electrical outlet, please ensure your wall plug voltage matches to the unit.
- Once you are ready to heat up your Crepe and Pancake Maker, turn the knob clockwise.
 Heat Settings:
 - 0 Min = 68 Degrees Fahrenheit 230 Degrees Fahrenheit
 - Min- Max = 230 Degrees Fahrenheit 410 Degrees Fahrenheit

Once the unit has reached your desired temperature, the green light will turn off letting you know you're ready to cook.

Care and Cleaning

Cleaning

Important: Unplug and allow it to cool before cleaning. Never immerse the unit in water or any other liquid.

- 1. Wipe cooking plates with a damp cloth and a non-abrasive soap or dishwashing detergent. Wipe with a clean, soft, damp cloth and towel dry.
- 2. Storage: Store cleaned machine in a clean, dry place.
- 3. Important: Never store while it is still hot or still plugged in.
- 4. Important: Never wrap cord tightly around the appliance. Do not put any stress on cord where it enters unit, as this could cause it to fray and break.

Specification

Voltage:120V~ Frequency: 60Hz . Power: 1200W

For Warranty Information and Assistance

Please visit:

www.MegaChef.com

Or call:

1 (424) 543-1628



This marking indicates that this product should not be disposed with other household. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.