

# Owner's Manual and Instructions

## 33 inch Square Fire Pit

**Models: AD213C, AD213S**

### Important!


Please read and follow ALL instructions before assembling or using this product, particularly the safety statements on back. Failure to follow instructions and warnings could result in damage to property, serious injury or death.



### Parts Check List

Check package for all parts needed for assembly

Part Description	QTY.	Part
<input type="checkbox"/> Stand Legs	4	A
<input type="checkbox"/> Outer Support Ring	1	B
<input type="checkbox"/> Inner Support Ring	1	C
<input type="checkbox"/> Log Grate	1	D
<input type="checkbox"/> Storage Cover	1	E
<input type="checkbox"/> Screen Lifting Tool	1	F
<input type="checkbox"/> Hardware	1	G
<input type="checkbox"/> Screen Handle	1	H
<input type="checkbox"/> Fire Bowl	1	I
<input type="checkbox"/> Spark Screen	1	J

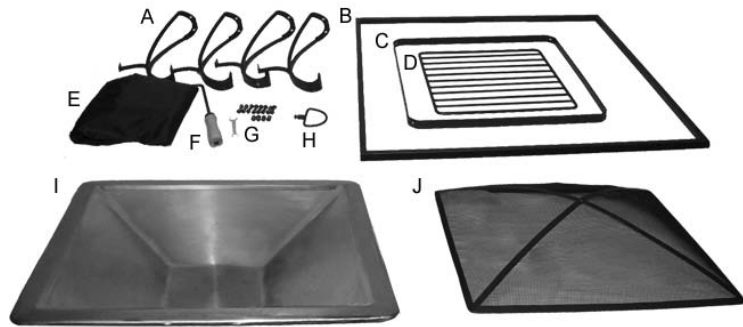

### Check all items for damage.

Call us at (800) 230-6530 (M-F, 9 am - 5 pm, EST) or email us at [customerservice@asiadirectinc.net](mailto:customerservice@asiadirectinc.net) if you need any assistance with this product.

### Assembly Instructions

- Carefully unpack all parts from box.
- Align holes in Legs and assemble to Outer Support Ring as shown (Figure 1) using bolts provided. Hand tighten only.
- Align holes and connect the Inner Support Ring with bolts as shown (Fig. 2).
- Tighten all bolts in Outer and Inner Support Rings at this time.
- Insert fire bowl.
- Place Log Grate in bottom of fire bowl.
- Attach screen handle to screen with bolt. Your fire pit is now ready for use.

Figure 1



Figure 2



Figure 3



Figure 4



(CONTINUED ON BACK)

# WARNING

**Failure to follow instructions and warnings could result in damage to property, serious injury or death.**

- Outdoor Use Only. Never use in enclosed area. Use in unventilated areas will endanger your life.
- Keep away from all combustible materials including gasoline and other flammable liquids and vapors.
- Use on a level, noncombustible surface only.
- Keep away from house, decking, garage, balconies, or overhangs.
- Avoid using during dry or windy conditions.
- Keep out of reach of children.
- Do not overfill or use to burn leaves or trash.
- Exercise the same care you would with an open fire.
- Never leave unit unattended while hot or in use.
- Completely extinguish fire before leaving.
- Use gloves to handle or move. Ashes can remain hot for a long time after fire is extinguished.
- Dispose of cold ashes properly.
- Use storage cover only when unit is cool to the touch.

**Contact local authorities regarding possible burn restrictions before using product.**

## **Maintenance:**

- As with any outdoor appliance, periodic maintenance is required to return painted surfaces to original appearance. When rust appears on painted surfaces, use sandpaper or steel brush to remove rust particles and re-coat with a rust-inhibiting paint intended for outdoor surfaces. Follow manufacturer's directions.
- Fire bowl may change colors over time with use. This is normal and expected.
- Fire bowl may be cleaned with water and mild detergent.
- Do not use abrasive detergents or pads to clean fire bowl.
- Keep fire pit covered when not in use.

## **ADDITIONAL INFORMATION:**

Call us at (800)230-6530, Monday-Friday 9 a.m. – 5 p.m. EST, or email us at [customerservice@asiadirectinc.net](mailto:customerservice@asiadirectinc.net) if you have any problems or questions regarding this product.