 


PRODUCT OVERVIEW

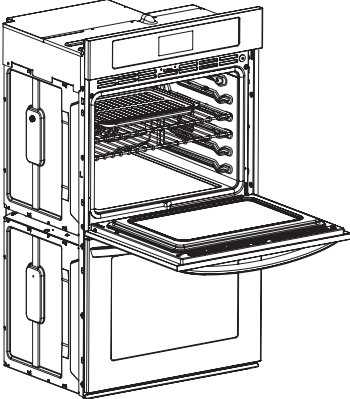

 
ACCESSORIES

Make sure that all parts are included after purchasing this product.




electric convection built-in oven

 
 
Accessories for Cooking

- 
Grid
- 
Standard racks (4 ea)
- 
Broiler pan


 
Accessories for Installation

- 
6 Wood Screws
For Mounting
(4 needed for installation
and 2 extras)

Accessories for EasyClean®

- 
Spray bottle (1ea)
- 
Non scratch
Scouring Pad (1ea)

Manuals

- 
Owner's manual
- 
Installation manual

 
! NOTE

- Contact LG Customer Service if any accessories are missing.
- For your safety and for extended product life, only use authorized components.
- The manufacturer is not responsible for product malfunction or accidents caused by the use of separately purchased, unauthorized components.
- The images in this guide may be different from the actual components and accessories, which are subject to change by the manufacturer without prior notice for product improvement purposes.

OVEN OVERVIEW

 
Make sure to understand the name and function of each part.

* Throughout this manual, the features and appearance may vary depending on your model.

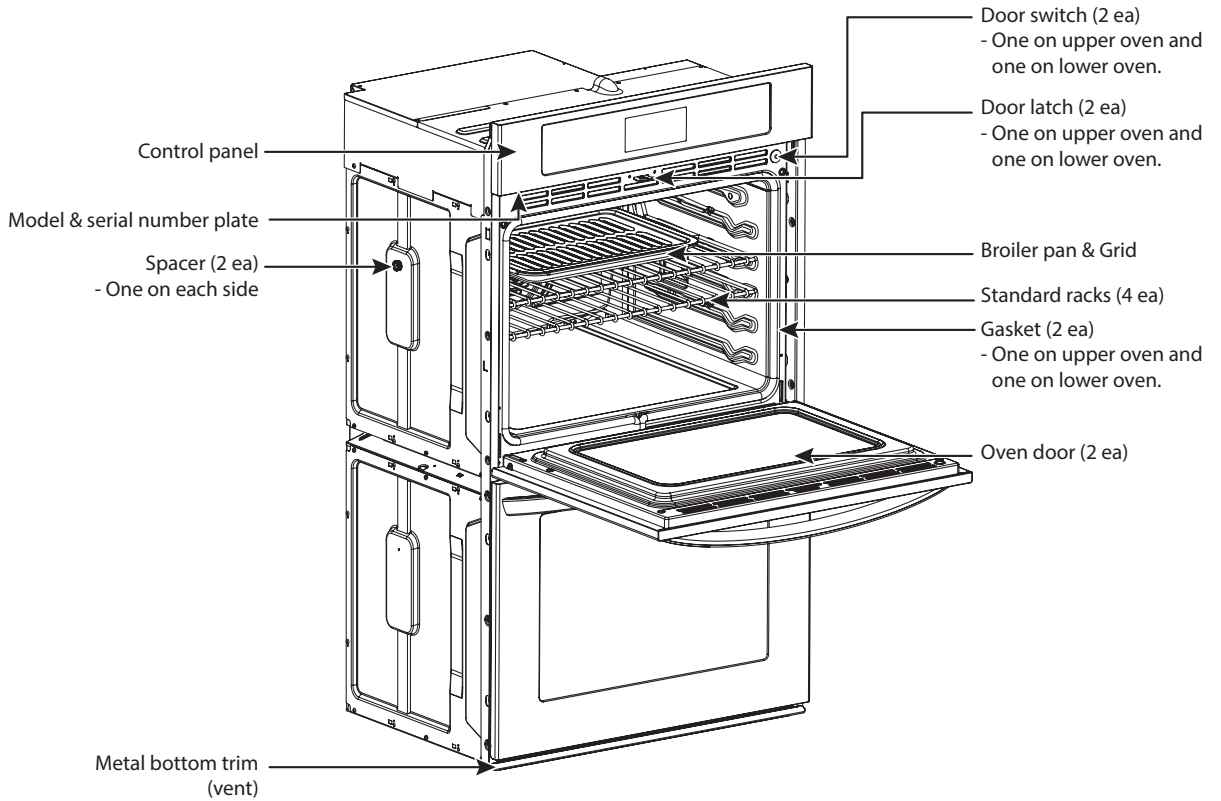

CONTROL PANEL OVERVIEW

READ THE INSTRUCTIONS CAREFULLY BEFORE USING THE OVEN. For satisfactory use of the oven, become familiar with the various features and functions of the oven as described below. **Detailed instructions for each feature and function are listed in this owner's manual.**

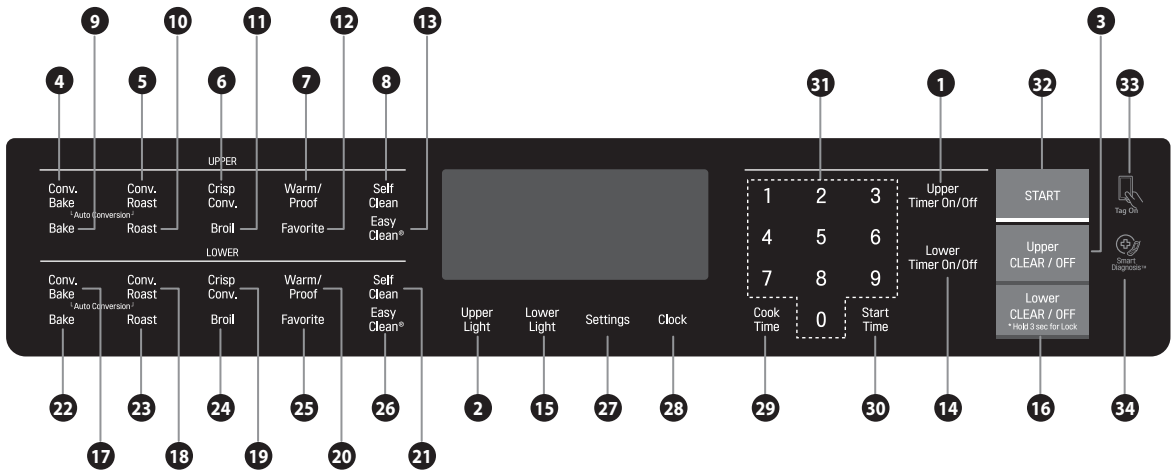

UPPER OVEN

Name	Description
1 UPPER TIMER ON/OFF	Use to set or cancel the timer of the upper oven.
2 UPPER LIGHT	Use to turn the oven lights of the upper oven on and off.
3 UPPER CLEAR/OFF	Use to stop cooking, cancel settings of the upper oven.
4 CONV. BAKE	Use to select the Convection Bake function of the upper oven.
5 CONV. ROAST	Use to select the Convection Roast function of the upper oven.
6 CRISP CONV.	Use to select the Crisp Convection function of the upper oven.
7 WARM/PROOF	Use to select the Warm/Proof function of the upper oven.
8 SELF CLEAN	Use to select the Self Clean function of the upper oven.
9 BAKE	Use to select the Bake function of the upper oven.
10 ROAST	Use to select the Roast function of the upper oven.
11 BROIL	Use to select the Broil function of the upper oven.
12 FAVORITE	Use to select the Favorite function of the upper oven.
13 EasyClean®	Use to select the Easy Clean function of the upper oven.

LOWER OVEN

Name	Description
14 LOWER TIMER ON/OFF	Use to set or cancel the timer of the lower oven.
15 LOWER LIGHT	Use to turn the oven lights of the lower oven on and off.
16 LOWER CLEAR/OFF	Use to stop cooking, cancel settings of the lower oven.
17 CONV. BAKE	Use to select the Convection Bake function of the lower oven.
18 CONV. ROAST	Use to select the Convection Roast function of the lower oven.
19 CRISP CONV.	Use to select the Crisp Convection function of the lower oven.
20 WARM/PROOF	Use to select the Warm/Proof function of the lower oven.
21 SELF CLEAN	Use to select the Self Clean function of the lower oven.
22 BAKE	Use to select the Bake function of the lower oven.
23 ROAST	Use to select the Roast function of the lower oven.
24 BROIL	Use to select the Broil function of the lower oven.
25 FAVORITE	Use to select the Favorite function of the lower oven.
26 EasyClean®	Use to select the Easy Clean function of the lower oven.

COMMON FUNCTION

Name	Description
27 SETTING	Access and adjust oven settings. See pages 14 and 15.
28 CLOCK	Use to set the time of day.
29 COOK TIME	Use to set the length of the cook time. (Bake, Conv. Bake/Roast only)
30 START TIME	Use to set delay time. (Bake, Conv. Bake/Roast, Self Clean only)
31 NUMBER PADS	Use to enter a temperature and all times.
32 START	Use to START all functions in the oven. To activate OVEN LOCK press and hold for 3 seconds.
33 SMART FEATURES	The Tag On icon, for use with Smart Features.
34 SMART DIAGNOSIS™	Use with the Smart Diagnosis feature.

 NOTE

If F- and a number appear in the display and the oven control signals, this indicates a function error code. See page 38.

- Touch the **UPPER** or **LOWER CLEAR/OFF** pad.
- Allow the oven to cool for one hour. Put the oven back into operation.
- If the function error code repeats, disconnect the power to the oven and call for service.
- **If your oven was set for a timed oven operation and a power outage occurred**, the clock and all programmed functions must be reset.
- **The time of day will flash in the display when there has been a power outage.**