


USE AND CARE GUIDE

CAMBRIDGE PATIO LOVESEAT WITH CUSHION

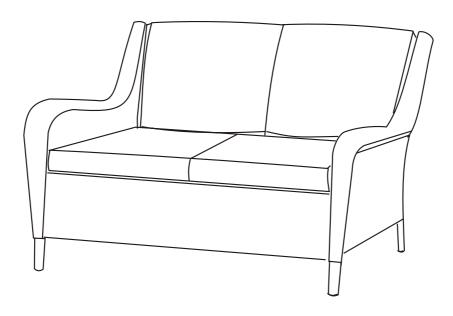

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 6 p.m., EST, Monday-Friday

1-855-HD-HAMPTON

HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this *loveseat*. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Table of Contents	2
Safety Information	2
Set Up Your Furniture Properly	
Examine Your Furniture	2
Observe Weight Limits	2
Warranty	2
What is Covered	
What is Not Covered	2

Pre-Assembly	3
Planning Assembly	
Hardware Included	
Package Contents	4
Assembly	5
Care and Cleaning	6

Safety Information

SET UP YOUR FURNITURE PROPERLY

- Ensure that all parts are assembled properly and fully tightened as per the instructions.
- When placing in the desired location, ensure that all legs are resting on the same surface.

EXAMINE YOUR FURNITURE

 Examine occasionally to ensure that there are no loose parts. If loose parts are found, they must be re-tightened fully before additional use.

OBSERVE WEIGHT LIMITS

The weight limits for the following products are listed below:

□ Chair: 300 lbs □ Sofa: 700 lbs

□ Swivel Chair: 300 lbs
 □ Loveseat: 500 lbs
 □ Ottoman: 150 lbs
 □ Dining Table: 100 lbs
 □ Dining Chair: 200 lbs



CAUTION: If you overload your furniture, injuries can occur.

Warranty

TWO YEAR FRAME, WEAVE AND FABRIC LIMITED WARRANTY

WHAT IS COVERED

We warrant the frame, weave and fabric to be free of manufacturing defects to the original purchaser for two years. For glass table top we warrant 30 days from the date of purchase.

WHAT IS NOT COVERED

This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty.

We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

 
Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.Hamptonbay.com.

Pre-Assembly

PLANNING ASSEMBLY

To prevent damage, place all parts on a soft surface during assembly. Remove all protective caps before beginning assembly.

HARDWARE INCLUDED












Part	Description		Quantity
AA	Bolt	φ 1/4x35mm	8
BB	Washer	Φ 6mm	10
CC	Cap for bolt	Φ6mm	10
DD	Bolt	ф 1/4x20mm	2
EE	Hex wrench	4mm	1

Pre-Assembly (continued)

PACKAGE CONTENTS

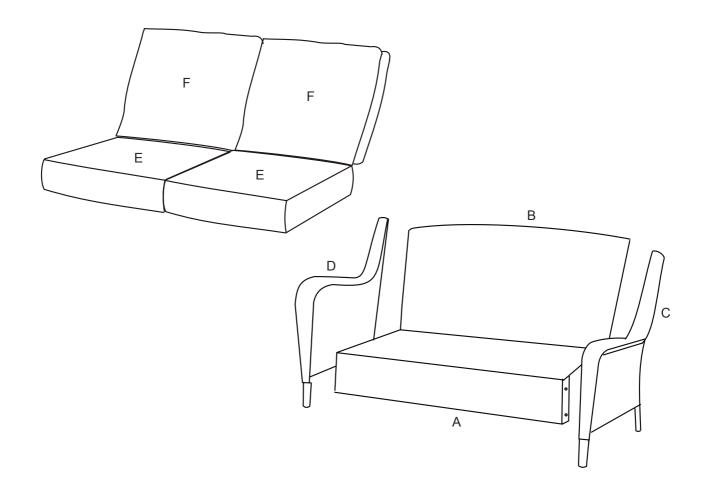


Description	Quantity
Seat	1
Back	1
Left arm	1
Right arm	1
Seat cushion	2
Back cushion	2
	Seat Back Left arm Right arm Seat cushion

Assembly


1 Attaching the back

- Attach the back (B) to the seat (A) by aligning two holes on the back (B) with the two holes on the seat (A). Insert bolts(DD) with washers (BB).
- ☐ Tighten half way using the Hex wrench (EE) . Do not tighten completely.

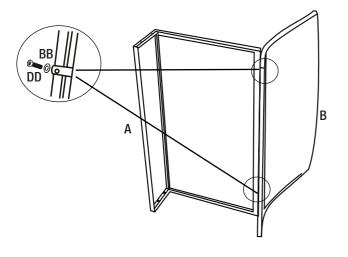


2 Attaching the left arm

- Attach the left arm (C) to seat (A) fasten with bolts (AA) and washers (BB). Tighten half way using the Hex wrench(EE).
 Do not tighten completely. (Fig 1)
- Attach the back (B) to the left arm (C) by aligning the hole on the back (B) with the hole on the left arm (C). Insert bolts(AA) with washers (BB) and tighten half way using the Hex wrench (EE). Do not tighten completely. (Fig 2)

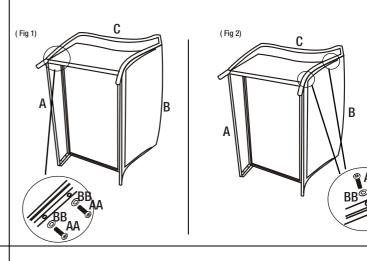


3 Attaching the right arm


- Attach the right arm (D) to seat (A) fasten with bolts (AA) and washers(BB). Tighten half way using the Hex wrench (EE). Do not tighten completely. (Fig 1)
- Attach the back (B) to the right arm (D) insert bolts (AA) with washers (BB) and tighten half way using the Hex wrench (EE). Do not tighten completely. (Fig 2)

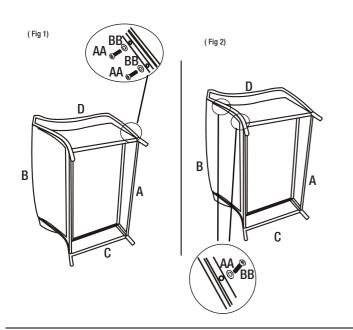

4 Attaching the caps

- Place the loveseat right side up.
- Fully tighten all the bolts (AA) with the Hex wrench (EE) and cover with the bolt caps (CC). (Fig 1)
- Adjust leg levelers as required.
- □ Place the seat cushion (E) and back cushion (F) on the chair. This loveseat is now ready for your enjoymer(tFig 2)

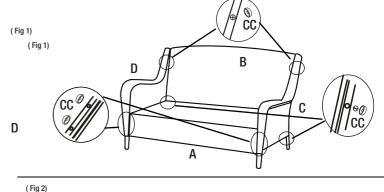

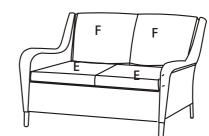

5 HAMPTONBAY.COM
Please contact 1-855-HD-HAMPTON for further assistance.

Care and Cleaning

- □ Before using, wipe with a clean, dry cloth. Do not use bleach or solvents. When not in use, store furniture in a cool, dry place.
- If your set includes cushions or mesh fabric, they may be cleaned by hand with a mild solution of soap and water. Rinse cushion thoroughly and allow to drip dry. Do not machine wash or tumble dry, as cushions may shrink.
- Do not use bleach or solvents on fabrics. When cleaning the table top make sure to use a soft, clean cloth that does not bleed color as well.



Questions, problems, missing parts? Before returning to the store, call Home Depot Customer Service 8 a.m. - 6 p.m., EST, Monday-Friday

1-855-HD-HAMPTON HAMPTONBAY.COM

Retain this manual for future use.