

THE HAMMOCKSOURCE

If you have any questions regarding our products, call our toll-free consumer customer service line: 800.643.3522
Visit our web page: www.thehammocksource.com

Hammock Canopy

Congratulations on your purchase of the Hammock Canopy. We believe that you will find it a product of unsurpassed quality and durability.

The box should contain:

 
- 3- Fiberglass ribs
- 1- Canopy body
- 2- Pieces of chain (30" each)
- 2- 2" Caps with end holes
- 4- Small "S" Hooks
- 4- Lengths of rope for attaching canopy to hammock (tie downs)
- 2- Canopy support poles with caps

Overall Product Dimensions:


4.5' x 15'

Assembly Instructions:

1. Assemble Tri-Beam™ stand per instructions. Do not insert large "S" hooks.

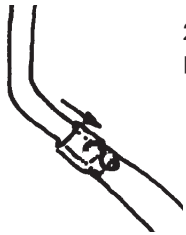

 2. Replace stand upright end caps provided in stand hardware pack with 2" caps with holes provided in the canopy hardware pack.

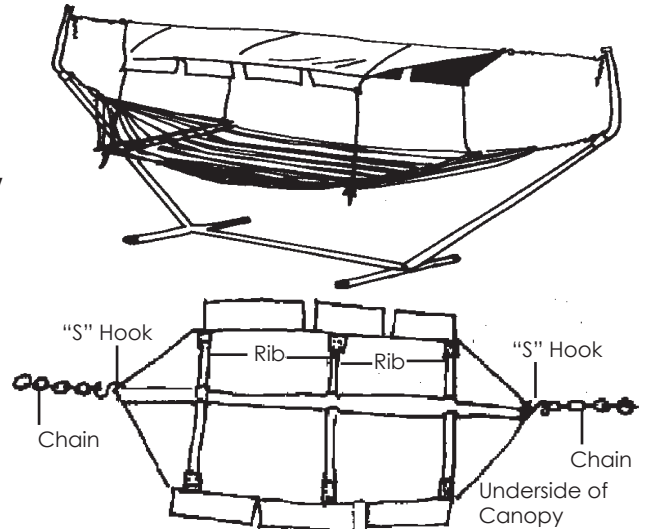

3. Position the short end (without cap) of the canopy support pole into the end of the stand pole, making sure that the holes align. Insert one end of a large "S" hook through the stand pole and the canopy support pole together to secure the canopy support pole to the stand pole.

4. Hang the hammock on the stand; adjusting the chain for the proper height.

THE HAMMOCKSOURCE

If you have any questions regarding our products, call our toll-free consumer customer service line: 800.643.3522
Visit our web page: www.thehammocksource.com

Hammock Canopy

Congratulations on your purchase of the Hammock Canopy. We believe that you will find it a product of unsurpassed quality and durability.

The box should contain:

 
- 3- Fiberglass ribs
- 1- Canopy body
- 2- Pieces of chain (30" each)
- 2- 2" Caps with end holes
- 4- Small "S" Hooks
- 4- Lengths of rope for attaching canopy to hammock (tie downs)
- 2- Canopy support poles with caps

Overall Product Dimensions:


4.5' x 15'

Assembly Instructions:

1. Assemble Tri-Beam™ stand per instructions. Do not insert large "S" hooks.

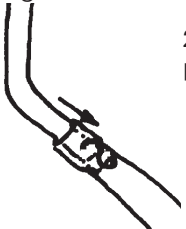

 2. Replace stand upright end caps provided in stand hardware pack with 2" caps with holes provided in the canopy hardware pack.

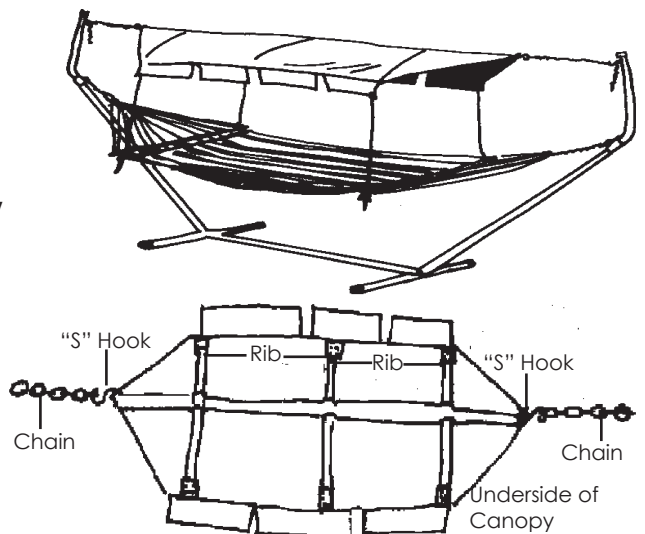

3. Position the short end (without cap) of the canopy support pole into the end of the stand pole, making sure that the holes align. Insert one end of a large "S" hook through the stand pole and the canopy support pole together to secure the canopy support pole to the stand pole.

4. Hang the hammock on the stand; adjusting the chain for the proper height.

5. Attach the small "s" hook into the top of the canopy support pole (repeat for other pole).
6. Unroll the canopy and lay it on the hammock upside down.
7. Insert the three fiberglass support ribs as follows: (middle rib last)
8. Attach a small "s" hook to one length of the chain and attach to grommets at the end of the canopy (repeat for other end of canopy).

A: Insert fiberglass rib through the center loop into one side support pocket.

B: Insert the other end by bowing the rib upward (away from canopy); then inserting the other end into the other side support pocket. Once both ends of the rib are in the side pocket, ribs can be depressed into the canopy.

C: Repeat the procedure for the other two ribs, remembering to insert the middle one last.

9. With the assistance of a friend, grasp each end of the canopy chain, turn the canopy over, and attach the chains to the small "s" hooks on the canopy support poles.

WARRANTY INFORMATION:

Products of The HammockSource are guaranteed to be free of defects in workmanship and materials for up to one year after the purchase date. Prolonged exposure to weather conditions including snow, rain, and humidity are not covered under the warranty nor is damage caused by normal wear, mildew, or improper care including storage, maintenance, and installation. If an item is found to be defective within one year of its purchase, it will be replaced without charge upon the return of the unit accompanied by a sales receipt. If you choose to return an item, you must contact our customer service department at 800.334.1078 to obtain a Return Authorization Number that will allow us to track your unit once it arrives at our warehouse; thereby creating a faster response to your concern.

5. Attach the small "s" hook into the top of the canopy support pole (repeat for other pole).
6. Unroll the canopy and lay it on the hammock upside down.
7. Insert the three fiberglass support ribs as follows: (middle rib last)
8. Attach a small "s" hook to one length of the chain and attach to grommets at the end of the canopy (repeat for other end of canopy).

A: Insert fiberglass rib through the center loop into one side support pocket.

B: Insert the other end by bowing the rib upward (away from canopy); then inserting the other end into the other side support pocket. Once both ends of the rib are in the side pocket, ribs can be depressed into the canopy.

C: Repeat the procedure for the other two ribs, remembering to insert the middle one last.

9. With the assistance of a friend, grasp each end of the canopy chain, turn the canopy over, and attach the chains to the small "s" hooks on the canopy support poles.

WARRANTY INFORMATION:

Products of The HammockSource are guaranteed to be free of defects in workmanship and materials for up to one year after the purchase date. Prolonged exposure to weather conditions including snow, rain, and humidity are not covered under the warranty nor is damage caused by normal wear, mildew, or improper care including storage, maintenance, and installation. If an item is found to be defective within one year of its purchase, it will be replaced without charge upon the return of the unit accompanied by a sales receipt. If you choose to return an item, you must contact our customer service department at 800.334.1078 to obtain a Return Authorization Number that will allow us to track your unit once it arrives at our warehouse; thereby creating a faster response to your concern.

Adjusting Your Hammock Canopy:

To adjust and tighten the canopy, have someone sit in the hammock. This will allow you to pull the chain on the canopy tight and re-hook moving in several chain links until the canopy is adjusted.

To "tie down" the canopy, first tie a knot at one end of the rope and then slip the other end of the rope through the grommet on the canopy flap and tie it to the outside rope of the hammock body closest to the spreader directly under the grommets flap. Repeat this procedure for the remaining three corners. This will allow the canopy to rock with the hammock as it swings in the breeze and will prevent the canopy from blowing completely over.

Care and Maintenance:

Thank you for purchasing our hammock canopy. This canopy utilizes high quality outdoor fabric. It is designed to be weatherable and resist fade. The nature of this fabric makes it easy to clean. Simply wash the fabric portion briskly with a soapy solution of liquid dish washing detergent and warm water. Rinse thoroughly with clean water to remove soap before air drying. For stubborn stains or suntan oil, use *Brush Tip* or *Kleenol 1 Spot Remover*. Follow the directions on the container. Sponge thoroughly with clean water and *air dry*.

5006
11/AO/OA

Adjusting Your Hammock Canopy:

To adjust and tighten the canopy, have someone sit in the hammock. This will allow you to pull the chain on the canopy tight and re-hook moving in several chain links until the canopy is adjusted.

To "tie down" the canopy, first tie a knot at one end of the rope and then slip the other end of the rope through the grommet on the canopy flap and tie it to the outside rope of the hammock body closest to the spreader directly under the grommets flap. Repeat this procedure for the remaining three corners. This will allow the canopy to rock with the hammock as it swings in the breeze and will prevent the canopy from blowing completely over.

Care and Maintenance:

Thank you for purchasing our hammock canopy. This canopy utilizes high quality outdoor fabric. It is designed to be weatherable and resist fade. The nature of this fabric makes it easy to clean. Simply wash the fabric portion briskly with a soapy solution of liquid dish washing detergent and warm water. Rinse thoroughly with clean water to remove soap before air drying. For stubborn stains or suntan oil, use *Brush Tip* or *Kleenol 1 Spot Remover*. Follow the directions on the container. Sponge thoroughly with clean water and *air dry*.

5006
11/AO/OA