


**IF REMOTE CONTROL DOES NOT WORK PROPERLY, PLEASE RESET.**

**REMOTE CONTROL**

(See illustration)

- 1** ON: Turns the lights ON.
- 2** OFF: Turns the lights OFF.
- 3** INCREASE/DECREASE BRIGHTNESS: Press (▲/▼) to choose brightness level (only works in single color mode).
- 4** COLOR CHANGING SPEED: Press (-/+ ) to decrease or increase the color changing speed (only works in color combination mode).
- 5** MODE BUTTON: Press button to select one of the 9 color combination modes. (See chart to the right.)
- 6** RED: Press to change string light color to RED.
- 7** GREEN: Press to change string light color to GREEN.
- 8** BLUE: Press to change string light color to BLUE.
- 9** WHITE: Press to change string light color to WHITE.

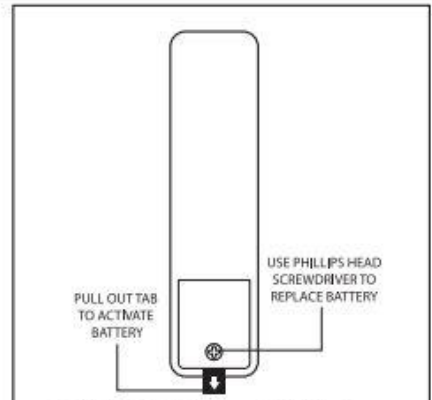

3-Volt, CR2025 battery included.

Always purchase the correct size and grade of battery most suitable for the intended use. Clean the battery contacts and also those of the device prior to battery installation. Ensure the battery is installed correctly with regard to polarity (+ and -). Remove battery from equipment which is not to be used for an extended period of time. Remove used battery promptly. This device complies with RSS-210 of Industry Canada. Operation is subject to the condition that this device does not cause harmful interference.

**RESETTING REMOTE CONTROL**

- Adding or replacing remote control
  - Remote is not working correctly
- 1.** Turn power OFF by unplugging string light power supply.
  - 2.** Press and hold ON button on remote.
  - 3.** While holding ON button, plug-in string light power supply. Bulb will flash 3 times. You've successfully programed your remote.

**For additional remote controls please contact Feit Electric at 1-866-326-BULB (2852)**



**MODE BUTTON FUNCTIONS**

1. Red to green
2. Red to blue
3. Red to white
4. Green to blue
5. Green to white
6. Blue to white
7. Red to green to blue
8. Red to white to blue
9. Red to green to blue to white