



# Toastmaster

— Quality in the kitchen since 1921 —

## TRIPLE 1.5 QT SLOW COOKER

INSTRUCTION MANUAL



 **Toastmaster®**

**MODEL TM-318BS**

 **90+ YEAR HISTORY**  
ESTABLISHED 1921

 **GOLD STANDARD**  
PRODUCT QUALITY

 **DURABLE BY DESIGN**  
BUILT TO LAST

 **INNOVATIVE PRODUCT**  
FOUNDED ON CREATIVITY

 **12 MONTH**  
QUALITY GUARANTEED  
1 YEAR LIMITED WARRANTY

# IMPORTANT SAFEGUARDS

When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. READ ALL INSTRUCTIONS.
2. Do not touch hot surfaces. Use any handles or knobs. Use potholders when removing cover or handling hot containers.
3. To protect against electrical shock, do not place cord, plug or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil, food, water or other hot liquids.
12. Do not use appliance for other than intended use.
13. Lift and open covers carefully to avoid scalding, and allow water to drip into unit.
14. To disconnect, turn control to Off, then remove plug from wall outlet.
15. Removable inserts are designed for use with this appliance only. They must never be used on a range top. Do not set a hot container on a wet or cold surface. Do not use a cracked container.
16. This product is intended for counter top use only.
17. **WARNING:** Spilled food can cause serious burns. Keep appliance and cord away from children. Never drape cord over edge of counter, never use outlet below counter, and never use with an extension cord.
18. **CAUTION:** TO PREVENT DAMAGE OR SHOCK HAZARD NEVER COOK DIRECTLY IN THE HEATING SURFACE OF THE SLOW COOKER. COOK ONLY IN THE CONTAINERS PROVIDED.
19. FOR HOUSEHOLD USE ONLY.

# SAVE THESE INSTRUCTIONS

# OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS



This appliance is for **HOUSEHOLD USE ONLY**. It may be plugged into an AC electrical outlet (ordinary household current). Do not use any other electrical outlet.

## CORD PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## SHORT POWER CORD

A short power-supply cord is used to reduce the risk resulting from it being grabbed by children, becoming entangled in, or tripping over a longer cord.

## LINE CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

**DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.**

## IMPORTANT

During the first few minutes of initial use, you may notice smoke and/or a slight odor. This is normal and should quickly disappear. It will not recur after appliance has been used a few more times.

## BEFORE USING

Solid surface countertops can be easily scratched, cracked, scorched, or damaged, especially when exposed to heat. To prevent damage, the following precautions should be observed when using this product:

- Always use a trivet under heat generating sources such as Slow Cookers.
  - Do not place hot pans, pots, ceramic or stoneware inserts, etc. directly on the countertop surface.
  - Slow Cooker stoneware inserts have a rough bottom. To avoid scratching surfaces, always place the stoneware insert on a heat resistant placemat or trivet.
1. Carefully unpack the slow cooker.
  2. Wash stoneware inserts and glass lids in warm soapy water. Rinse well and dry thoroughly.
  3. Wipe interior and exterior surfaces of the base with a soft, moist cloth to remove dust particles collected during packing and handling. **NEVER IMMERSE THE BASE, CORD OR PLUG IN WATER OR ANY OTHER LIQUID.**
  4. Slow Cooker should be operated before initial use. After cleaning unit, place cooking pots inside the base. Pour 2 cups of water into the stoneware inserts and cover with lids. Plug slow cooker into electrical wall outlet and turn to HIGH setting. Allow to operate approximately 20 minutes.
  5. After 20 minutes, switch OFF and unplug. Allow unit to cool. Remove stoneware inserts, and discard water. Rinse the stoneware inserts, dry thoroughly and replace them in the base.

## STONEWARE INSERTS

Like any ceramic, the stoneware inserts may crack or break if not properly handled.

Failure to follow these instructions can cause breakage resulting in injury or property damage.

- All stoneware is breakable. Handle with care.
- **ALWAYS USE POTHOLDERS WHEN HANDLING HOT COOKWARE.**
- **DO NOT** place hot cookware on counter. Use protective trivet.
- **DO NOT** place stoneware base on any range top burner, under a broiler, microwave browning element, or in a toaster oven.
- **DO NOT** strike utensils against rim to dislodge food.
- **DO NOT** use stoneware inserts to pop corn, caramelize sugar, or make candy.
- **DO NOT** use abrasive cleaners, scouring pads, or any object that will scratch the cookware or accessories.
- **DO NOT** use or repair any item that is chipped, cracked, or broken.
- Bottom of product may be rough. To avoid scratching surfaces, place on placemat, tablecloth, or trivet.
- **DO NOT** use inserts for reheating foods or for general food storage.
- Always place foods into the insert when it is at room temperature; then place insert into base before turning it on.
- **DO NOT** preheat base before adding insert. **NEVER** heat the insert or base when it is empty.

**USE:** The stoneware inserts can be used in conventional, convection and microwave ovens, in the refrigerator and in the dishwasher. They should be used in these applications without the glass lids.

**CARE:** Use only wooden, nylon, or plastic utensils. Metal utensils can scratch or leave gray marks. Stoneware inserts can be washed by hand or in a dishwasher. Load carefully to avoid stoneware-to-stoneware contact and bumping against other items during cycle.

**DO NOT** allow stoneware inserts to soak/stand in water for an extended period of time. Applied heat after soaking may cause glaze crazing. If scouring is necessary, use only plastic

or nylon cleaning pads with nonabrasive cleaners.

- Never subject the stoneware inserts to sudden changes in temperature. NEVER place them where they can come in contact with direct heat (e.g., on top of a range or under a broiler).
- When removing the stoneware inserts from the heating base, be sure to use pot holders or oven mitts.
- Always use pot holders or oven mitts when removing stoneware inserts from cooking base. Do not set stoneware inserts directly on counter top or table; use a trivet or hot pad.
- Unplug unit and allow to cool after use. Do not pour cold water into hot stoneware inserts.

### CARE OF GLASS COVERS:

To prevent cracking or breaking of the glass cover, which may cause personal injury, cover should be treated with special care.

**CAUTIONS: Glass cover may shatter if it is exposed to direct heat or subjected to severe temperature changes. Chips, cracks or deep scratches may also weaken the cover.**

- **KEEP COVER AWAY FROM** broiler, microwave oven, hot stovetop burners, oven heat vents. If cover has been utilized in any of these locations, do not use it again, even if there are no signs of damage. Order a replacement cover immediately.
- **IF COVER BECOMES CHIPPED, CRACKED OR SCRATCHED, DO NOT USE IT.** Discard it and order a replacement.
- **ALWAYS LET COVER COOL** on a dry, heat-resistant surface before handling. Do not place it on cold or wet surfaces, as this may cause it to crack or shatter.
- **ALWAYS USE POTHOLDERS OR OVEN MITTS** when removing the hot cover. To avoid burns from escaping steam, always tilt cover away from hands and face.

## HOW TO USE

Using a slow cooker is easy but different from conventional cooking. This manual contains many helpful hints for successful slow cooking. Many more slow cooker recipes books are available in libraries, bookstores and online. Keep these materials handy whether preparing favorite recipes or trying something new.

This slow cooker has three heat settings: LOW / HIGH / WARM. Use the recommended guidelines offered in the recipe being used to determine cooking time and heat setting. Dishes can be prepared well in advance of mealtime and cooking time regulated so that food is ready to serve at a convenient time. A general rule of thumb for most slow cooker meat-and-vegetable combos is:

### Cooking Time in Recipes

8-10 Hours

4-6 Hours

### Recommended Temperature Setting

LOW

HIGH

Other favorite recipes may be adapted to the slow cooker. All times listed below are approximate and should serve only as cooking guidelines.

### Regular Cooking Time

30 minutes

35-60 minutes

1-3 hours

### Slow Cooker Cooking Times

LOW

6-8 hrs.

8-10 hrs.

10-12 hrs.

HIGH

3-4 hrs.

5-6 hrs.

7-8 hrs.

1. Prepare recipe according to instructions.
2. Place food in stoneware inserts and cover with glass lids.

3. Plug slow cooker into wall outlet and select LOW or HIGH.
4. When food is ready to be served, turn slow cooker OFF and unplug it from outlet.
5. Remove glass lids.

**NOTE:** The WARM setting should NOT be used to cook foods or reheat refrigerated foods. WARM should be used to maintain the serving temperature of previously cooked foods.

**CAUTION: When removing glass covers, grasp the designated area on the covers and lift to allow steam to escape before setting cover aside. To avoid burns, always hold cover so that escaping steam flows away from hands and face.**

6. Using oven mitts, grasp stoneware inserts by the handles and remove from the heating base. NEVER place inserts directly on a counter top. Use a heat-resistant trivet or pad.
7. Serve contents. If serving directly from the cooking pot, always place a trivet or protective padding under pot before placing it on a table or counter top.

## USER MAINTENANCE INSTRUCTIONS

This appliance contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified service personnel if servicing is needed.

### PRECAUTIONS

- **Always turn knob to the OFF position, unplug unit from wall outlet and allow to cool before cleaning.**
- Always handle stoneware inserts carefully and glass lids. Avoid hitting pot against faucet or hard surfaces.
- Do not touch sides of base while food is cooking. Use potholders or oven mitts to lift the stoneware inserts.

### TO CLEAN:

This appliance should be cleaned after every use.

After slow cooker has been allowed to cool, wash stoneware inserts and glass lids in warm, soapy water. Rinse well and dry. If food sticks to the surface of the stoneware inserts, fill the inserts with warm, soapy water and allow it to sit for a few hours before cleaning.

Wipe interior and exterior surfaces of the base with a soft, slightly damp cloth or sponge. NEVER IMMERSER THE BASE IN WATER. NEVER USE ABRASIVE CLEANSERS OR SCOURING PADS TO CLEAN THE COOKING POT OR BASE, AS THESE CAN DAMAGE THE SURFACES.

### Dishwasher Cleaning

Stoneware inserts may be cleaned in an automatic dishwasher. To prevent damage, position them in rack so that they will not hit other items during cleaning.

### Special Cleaning

If stoneware inserts become stained, clean with a non-abrasive cleanser or apply a paste of baking soda with a soft cloth. To remove water spots or mineral deposits, wipe with distilled white vinegar, or pour a small amount into pot and let it soak. After cleaning, wash inserts in warm, soapy water, rinse and dry.

### TO STORE:

Be sure all parts are clean and dry before storing. Store appliance in its box or in a clean, dry place. Never store it while it is hot or wet. To store, place inserts inside the base and the glass lids over the inserts. Never wrap cord tightly around the appliance; keep it loosely coiled.

### **HELPFUL HINTS IN USING A SLOW COOKER:**

- The cover of the slow cooker does not form a tight fit on the stoneware insert but should be centered on the insert for best results. Do not remove the cover unnecessarily – this will result in a major heat loss.
- Stirring is not necessary when slow cooking. However, if cooking on HIGH, stirring occasionally will help to distribute flavors throughout the recipe.
- For best results, the slow cooker should be at least half-filled.
- If cooking soups or stews, allow a 2-inch space between the food and the top of the cooking pot, so ingredients can come to a simmer. When cooking on HIGH, keep checking progress, as some soups may come to boil.
- Less tender, cheaper cuts of meat are better candidates for slow cooking than more expensive varieties. When possible, remove excess fat before cooking. If recipe calls for browning the meat, brown it on a range top using a separate cooking pot and with separate utensil before placing meat in insert of slow cooker.
- The greater the fat content of the meat, the less liquid needed for cooking. If cooking meat with a high fat content, place thick onion slices beneath it, so the meat will not sit and cook in the fat. Roasts may be prepared in cooker without adding liquid, if cooked on LOW.
- Always use a meat thermometer to determine proper temperature.
- Add fresh or thawed fish or seafood to cooking pot an hour before serving, as these ingredients can fall apart during long hours of cooking.
- Since raw vegetables usually take longer to cook than meats, cut vegetables into uniform, bite-sized pieces (about ½ inch in diameter) before adding them to the cooking pot.
- If recipe calls for milk, sour cream or other fresh dairy products, add them just prior to serving, as these ingredients tend to break down during long hours of cooking. If preferred, substitute condensed creamed soups (undiluted) or evaporated milk. Processed cheese may be substituted for naturally aged cheese.

# ONE YEAR LIMITED WARRANTY

SELECT BRANDS, INC. warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of one (1) year. SELECT BRANDS, INC., at its option, will repair or replace this product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, Select Brands, Inc. will repair or replace the same effecting all necessary parts replacements for a period of one year from the date of purchase.

Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

**CONDITIONS:** This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centers, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty.

Warranty registration is not necessary to obtain warranty on Select Brands, Inc. products. Save your proof of purchase receipt.

**ABOUT YOUR PRODUCT WARRANTY:** Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

**NORMAL WEAR:** This warranty does not cover normal wear of parts or damage resulting from any of the following: Negligent use or misuse of the product; Improper voltage or current; Use contrary to the operation instructions; Deviation from instructions regarding storage and transportation; Repair or alteration by anyone other than SELECT BRANDS, INC. or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

SELECT BRANDS, INC. shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

**HOW TO OBTAIN WARRANTY SERVICE:** You must contact SELECT BRANDS, INC. Customer Service at 1-913-663-4500. A Customer Service representative will attempt to resolve warranty issues over the phone. If telephone resolution is not possible, the Customer Service representative will require your assistance in performing routine diagnostic procedures. This warranty is effective for the time periods listed above and subject to the conditions provided for in this policy.

To register this product and view other fine products, visit us online at [www.selectbrands.com](http://www.selectbrands.com)

TOASTMASTER is a Registered Trademark of Applica Consumer Products, Inc., and used under license by Select Brands, Inc.

Made in China  
2716