

Z-BEAST

FINISH MOWER by **DEK**

Owner's Manual

This manual contains important safety instructions for the gasoline engine powered lawnmower models: 54Z, 62Z

READ SAFETY WARNINGS AND OPERATING INSTRUCTIONS CAREFULLY.
SAVE THIS MANUAL.



Need Help?

Parts, Service
and Technical Assistance call:

1-919-550-3221

www.beastpowerequipment.com

When you call the help-line you will need to have the following information:

Date of Purchase: _____
Location of Purchase: _____
Serial # - Mower: _____
Serial # - Engine: _____
Serial # - Hydro Trans (L) _____
Serial # - Hydro Trans (R) _____

Mower and engine life are extended greatly by performing frequent lubrications, oil changes and regular maintenance. To protect your investment perform routine maintenance.

Copyright© 2010 by GXi Outdoor Power, LLC. All rights reserved.

No part of this publication can be reproduced or distributed without prior written permission of GXi Outdoor Power, LLC Clayton, NC 27520 USA.

DEK is a registered trademark of GXi Outdoor Power, LLC

GXi Outdoor Power, LLC reserves the right to discontinue or change specifications or design at any time without notice and without incurring any obligation whatsoever.

The information and specifications included in this publication were in effect at the time of approval for printing.



This manual contains important safety instructions for Finish Mowers
READ SAFETY WARNINGS AND OPERATING INSTRUCTIONS CAREFULLY
SAVE THESE INSTRUCTIONS.

This owner's manual is considered a permanent part of the finish mower and should remain with the finish mower if resold.

BEAST SERIES

Check out our other great products at www.HomeDepot.com
or visit our web site at www.beastpowerequipment.com

TURF BEAST

36-inch & 54-inch Walk
Behind Mower



Z-BEAST

54-inch & 62-inch Zero-Turn
Mower



SNOW BEAST

36-inch & 45-inch Snow
Blower



BRUSH BEAST

36-inch Brush Mower



BRUSH MASTER

Chipper/Shredder
with 2-Way Feed



THE BEAST

100-inch Tow Behind Mower



Contents

Safety Information and Warnings.....	1
Preparation Safety Precautions	2
Operation Safety Precautions	3
Safety Decals.....	5
Product Specifications	6
Control Panel and Lawn Mower Components	7
Missing Parts Request Form.....	8
Operating Instructions	
Starting the Engine.....	9
Operating the Mower	10
Changing the Height of Cut.....	11
Mowing.....	11
Disengaging Hydrostatic Drive Units	12
Return to Neutral.....	12
General Maintenance.....	13
Maintenance Schedule	14
Service Adjustments	
Engine-to-Blade Belt Adjustment.....	15
Spindle Break Inspection and Replacement	16
Removing the Blades.....	16
Engine-to-Hydrostatic Drives Belt Adjustment	17
Hydro System Adjustment	17
Safety System Adjustment.....	18
Lubrication Points	19
Battery.....	19
Storage Instructions	20
Troubleshooting.....	21
Limited Warranty and Service.....	23

About the Z-BEAST Mower Manual

Congratulations on the purchase of your new Z-BEAST commercial mower. We at GXi Outdoor Power are confident that this mower will provide excellent performance, outstanding quality, and great durability when operated and maintained as directed in this manual.

1. This manual contains assembly, operating, safety, adjustment, maintenance, and troubleshooting instructions. **BEFORE OPERATING YOUR LAWN MOWER, CAREFULLY READ THIS MANUAL IN ITS ENTIRETY.**
2. This owner's manual is considered a permanent part of the mower. It must be available to all operators and/or person(s) servicing the mower. Should the mower be resold, this manual must remain with the mower.
3. All information, illustrations, and specifications contained in this manual were in effect at the time of the publication. GXi Outdoor Power reserves the right to add, delete or modify specifications and/or designs without notice.
4. If you ever have questions in regards to the operation, maintenance or safety of your mower, please contact the GXi Parts & Service, LLC at 1-919-550-3221.

Safety Information

Z-BEAST lawn mowers are designed to give safe and dependable service if operated according to instructions. Read and understand this owner's manual before operating your lawn mower.

Emission Control System InformationThe U.S. and California Clean Air Acts

EPA and California regulations require all manufacturers to furnish written instructions describing the operation and maintenance of emission control systems. The following instructions and procedures must be followed in order to keep the emissions from your engine within the emission standards.

Safety Label Locations

Safety labels are located on your mower to warn you of potential hazards. Read them carefully. If a label comes off or becomes hard to read, contact your GXi Parts and Service, LLC for a replacement.

Operator Responsibility

It is the owner's responsibility that all operators and mechanics must be trained and read this manual before operating the mower as well as being physically able individuals. They should be instructed about safe operating and mechanical procedures. If they can not read or understand English, it is the owner's responsibility to explain all safety operating instructions. The owner or operator is responsible for accidents or injuries occurring to themselves, other people or property. Potential misfortunate incidents can be prevented by the owner/user.

Mower Inspection

For your safety, inspect the lawn mower before each use. Before you begin your inspection, be sure the following conditions are met: the lawn mower should be on a level surface, with the ignition switch off, the key removed, the break set, and the blades disengaged. Also, disconnect the spark plug wires from the spark plugs and ground them against the engine to prevent inadvertent starting.

1. Walk around the mower and look for any fluid spills or leaks on or underneath the mower. Remove any and all excessive debris, dirt, and fluids.

2. Look for signs of damage or excessive wear. Check the tightness of all nuts, bolts, pins, and screws. Tighten any that may be loose and replace any that are missing.
3. Be sure the safety interlock controls are operating properly so that the engine cannot be started unless the ground speed control lever is in neutral and the blades are disengaged.
4. Check the mower blades for any damage or abnormal wear. If replacement is required, replace in sets so that they are balanced.
5. Check the tire pressure on all four tires. Do not exceed the recommended maximum indicated on the tire.
6. Check the belts for wear and correct tension. See page 15 for instructions.
7. Check engine oil and air filters as recommended in the engine manufacturer's manual.

Children

1. Never allow children to operate or ride on mowers.
2. Always keep children at a safe distance when operating or servicing a mower
3. Make sure to always look out for children before you make turns or reverse.
4. Never let children or untrained people operate or service the equipment. Local regulations may restrict the age of the operator



WARNING! Do not use your BEAST lawn mower to carry passengers. Keep bystanders, helpers, pets and children at a safe distance from the machine while it is in operation. Inspect the area where the equipment is to be used and remove all objects such as rocks, toys, and wires which can be thrown by the machine causing serious injury or death.



Wear appropriate clothing including hard hat, safety glasses and hearing protection. Long hair, loose clothing or jewelry may get tangled in moving parts.

Preparation—Safety Precautions

1. Evaluate the terrain to determine what accessories and attachments are needed to properly and safely perform the job. Only use accessories and attachments approved by BEAST.
2. Inspect the area where the equipment is to be used and remove all objects such as rocks, toys, and wire which can be thrown by the machine causing serious injury or death.
3. People, pets, and most importantly children must not be near the area being mowed. Do not operate the mower in their presence.
4. Never operate mower with damaged guards, shields or covers.
5. All users of the mower must be alert and pay attention to safety alerts, symbols, and safety signs.
6. Be sure to inspect mower before each use.
7. Always use roll bar when possible and never remove or modify the roll bar in any way or form.
8. Check the controls and shields to make sure that they are functioning properly before operating. Do not operate if any are damaged or missing.
9. Never operate with discharge deflector raised, removed or altered, unless a grass catcher is being used.
10. Install, and maintain in working order, a spark arrester before using equipment on forest-covered, grass-covered, or brush-covered unimproved land.

Gasoline and other fuels—Safety Precautions

Use extra care when handling gasoline and other fuels as they are flammable and vapors can explode.

1. Only use gasoline approved containers for storage and keep out of reach from children.
2. Do not fill fuel tank completely full. Overfilling may result in fuel leakage. Leave a reasonable amount of space for fuel to expand.
3. If fuel is spilled, do not start the engine. Move the mower away from the area, wipe up the spill thoroughly and wait until fuel vapors have evaporated before starting engine.
4. Do not fill gasoline containers inside a vehicle or on a truck/trailer bed.
5. Never remove gas cap or add fuel when engine is running.
6. Avoid prolonged breathing of gasoline vapors.
7. Never refuel or drain the machine indoors.
8. Keep face away from nozzle and gas tank opening.
9. Keep gas and other fuels away from skin and eyes.
10. Never use the mouth to siphon gas.
11. Never refuel the mower until all moving parts on the mower have stopped.

12. Never smoke when handling fuels and stay away from an open flame where fumes can be ignited by a spark.
13. Always place gasoline containers on the ground away from your vehicles prior to filling.
14. Gasoline is harmful or fatal if swallowed.



DANGER: GASOLINE IS HIGHLY FLAMMABLE AND EXPLOSIVE. Do not add fuel while the engine is running or is hot. Keep open flames, sparks, and heat away from the fuel and store fuel in containers specifically designed for that purpose. **ADD FUEL OUTDOORS ONLY. IF THE FUEL IS SPILLED, DO NOT START THE ENGINE.** Manually push the mower away from the spill and wipe up immediately.

Equipment Operation—Safety Precautions

1. Do not operate the engine in a confined space where dangerous carbon monoxide fumes can collect. Carbon monoxide is odorless, tasteless, and can be fatal.
2. Mow only in daylight or under good lighting conditions.
3. Make sure the mower is in neutral, parking brake is engaged, blades are disengaged, seat belt on, roll bar is raised and the operator is sitting in the proper position before attempting to start the engine.
4. Never operate on wet grass.
5. Watch for pedestrian or vehicular traffic when moving the mower while not in use (i.e., loading, unloading or transporting).
6. Never operate the mower with defective guards or shields, or without the safety devices securely mounted in place and functioning properly.
7. Be aware of discharge and never direct discharge of material toward bystanders nor allow anyone, especially children, near the mower during operation.
8. Do not change the governor settings or over speed the engine.
9. Always stop the engine when you leave the mower, even for a moment.
10. To help reduce fire hazard, keep the engine and the area around the engine free of grass, leaves or any other type of foreign material.
11. Beware of cutting edges. For safety always wear gloves when performing blade maintenance activities. Beware on multiple blade units since the rotation of one blade may cause the rotation of the other blade.
12. Do not operate the mower with the grass chute deflector in the raised position. Serious injury could occur.
13. If lightning is seen or thunder is heard in the operators vicinity, do not operate machine. Instead find shelter, as lightning may cause injury/death.
14. Never raise the mower deck while the blades are running.
15. Stop on a level ground, disengage drive, engage parking brake, and shut off engine before leaving operator's position for any reason including clearing grass catcher or unclogging the chute.
16. Stop the mower immediately and inspect blades after striking objects or if an abnormal vibration occurs and discontinue use until repaired.
17. Keep hands and feet away from cutting unit. This product is capable of amputating hands and feet and throwing objects.
18. Be alert and slow down when making turns. Also look left, right, and behind before changing directions and reversing to be sure there is a clear path.
19. Disengage blades, slow down, and drive cautiously when crossing roads and side walks.
20. Never operate mower under the influence of alcohol and drugs.
21. Use care when loading or unloading the machine into a trailer or truck.
22. Use care when approaching blind corners, shrubs, trees, or other objects that may obstruct vision.
23. Always disengage blades when not in use.
24. Never listen to music with headphones/earphones while operating the mower.

Slope Operation—Safety Precautions

1. Do not mow on slopes greater than 15 degrees.
2. Be extremely careful when operating the mower on a slope. Reduced traction could cause sliding.
3. Do not stop or start suddenly when going uphill.
4. Slow down and use caution when making turns and when changing direction on slopes.
5. Do not operate a riding mower near steep slopes, ditches, or water. Use a walk behind mower or a hand trimmer for these areas.
6. Roll bar should be raised and locked with seat belt buckled even before engine is turned on.
7. Should it be necessary to lower the roll bar, seat belt should not be used.
8. If tires lose traction, disengage the blades and drive slowly and cautiously off the slope.
9. Use extreme care with attachments as they can change the stability of the mower and cause loss of control.
10. Slow down and drive extra carefully on hillsides. Be sure to drive in the recommended direction on hillsides. Turf conditions can affect the machine's stability.
11. The parking brake may not hold the mower if parked on a slope.

IMPORTANT! The mower belts are adjusted to ensure the blades stop turning within seven (7) seconds of releasing the blade control lever. If you are making any belt adjustments whatsoever, for your safety and the safety of others around you, you must ensure the belts are re-adjusted to achieve this design specification.

GASOLINE IS HIGHLY FLAMMABLE AND EXPLOSIVE. FUEL LEAKS, A LOOSE FUEL TANK, OR A LOOSE FUEL VALVE CAN LEAD TO SEVERE INJURY OR DEATH. DO NOT OPERATE THIS MOWER IF ANY COMPONENT OF THE FUEL SYSTEM IS LOOSE OR LEAKS GASOLINE!

DANGER: Do not bypass, modify, alter or disconnect the safety system. Make sure that the safety interlock system is fully operational each time before mowing.

Before setting up your Z-BEAST mower, disconnect the spark plug wires from the spark plugs and ground them against the engine to prevent inadvertent starting. This step should be taken as a precaution whenever you are working on this machine.

Before attempting to use your mower, make sure you are familiar with all of the components and have read the manual.

Need Help?

Parts, Service
and Technical Assistance call:

1-919-550-3221

www.beastpowerequipment.com

Safety Decal Identification

The labels shown below are located on your mower to warn you of potential hazards and provide you with important safety information. If these decals become difficult to read or are missing from the mower, please contact GXi Parts & Service, LLC at 1-919-550-3221 or www.beastpowerequipment.com for a replacement.

⚠ DANGER / PELIGRO



OBJECTS HIDDEN IN THE LAWN CAN BE THROWN BY THE MOWER BLADE. THROWN OBJECTS CAN CAUSE SERIOUS INJURY.

- CLEAR LAWN OF ALL DEBRIS BEFORE MOWING
- DO NOT OPERATE THE MOWER WITHOUT EITHER THE DISCHARGE GUARD OR THE ENTIRE GRASS CATCHER IN PLACE
- WEAR EYE PROTECTION
- KEEP PEOPLE AND PETS AWAY

OBJETOS OCULTOS EN EL CÉSPED PUEDEN SER LANZADOS POR LA CUCHILLA. LOS OBJETOS LANZADOS PUEDEN CAUSAR LESIÓN SERIA.

- QUITAR EXCOMBROS DEL CÉSPED ANTES DE PODARLO
- NO OPERAR LA PODADORA SIN QUE ESTEN EL PROTECTOR DE DESCARGA Y EL COLECTOR DE CÉSPED EN EL LUGAR APROPIADO
- USAR PROTECCIÓN PARA LOS OJOS
- MANTENER PERSONAS Y MASCOTAS ALEJADAS

⚠ DANGER / PELIGRO

KEEP HANDS AND FEET AWAY!
MANTENER MANOS Y PIES ALEJADOS



⚠ DANGER / PELIGRO



OPEN BELTS & FANS. STOP ENGINE BEFORE REACHING UNDERNEATH.

CORREAS Y VENTILADORES ESTAN EXPUESTOS. PARAR EL MOTOR ANTES DE MANIPULAR POR DEBAJO.

⚠ DANGER / PELIGRO



MOVING BELTS AND PULLEYS CAN CAUSE SERIOUS INJURY. DO NOT OPERATE ENGINE WHILE SHIELD IS REMOVED.

LAS CORREAS Y POLEAS EN MOVIMIENTO PUEDEN CAUSAR LESIÓN SERIA. NO OPERAR EL MOTOR MIENTRAS EL PROTECTOR ESTÉ REMOVIDO.

⚠ DANGER / PELIGRO

When adjusting or changing belts, clutch must be adjusted so blades stop within 7 seconds. If blades will not stop, inspect and replace damaged brakes.

Cuándo se ajusten o cambien las correas, el embargue debe ser ajustado para que las cuchillas se paren en 7 segundos, si las cuchillas no se paran, inspeccionar y reemplazar el freno dañado.

⚠ DANGER PELIGRO



- Do NOT mow when children or others are around.
- NEVER carry children even with the blades off.
- NO corte el césped cuando los niños u otras personas presentes.
- NUNCA lleve los niños, incluso con hojas de fuera.
- NE tondez pas quand les enfants ou les autres sont autour.
- NE transportez jamais d'enfants, meme avec des lames au large

⚠ DANGER PELIGRO

AVOID INJURY OR DEATH FROM ROLLOVERS

Keep roll bar locked in the raised position and use seat belt.

NO ROLLOVER PROTECTION WHEN ROLL BAR IS DOWN

Lower the roll bar only if necessary. Do NOT wear the seat belt with the roll bar lowered.

Raise the roll bar when clearance allows.

Always use safe driving practices and do not operate on slopes greater than 15°.

Read the owner's manual and follow all slope operation instructions and warnings.


Feature	Models	
	54Z	62Z
Product Type	Commercial, 0-turn	Commercial, 0-turn
Cutting Width	54-inch	62-inch
Engine	See engine manufacturer's manual	See engine manufacturer's manual
Engine Start	Electric	Electric
Transmission Type	Dual hydrostatic	Dual hydrostatic
Transmission Mfg	Peerless	Peerless
Mower Speeds	Infinitely variable	Infinitely variable
Deck Type	Floating, quick change	Floating, quick change
Cutting Height	1.5– 5 inches(½-inch increments)	1.5– 5 inches(½-inch increments)
Blade Engagement	Manual clutch	Manual clutch
Blade Tip Speed	18,750 ft/min	18,750 ft/min
Anti-Scalping Rollers	3 front/2 rear	3 front/2 rear
No. Blades/ Length	2, 1.5-inch blades	2, 1.5-inch blades
Control System	V-bar E-Z hydro speed control	V-bar E-Z hydro speed control
Fuel/Capacity	Gasoline/7.5 gals.	Gasoline/7.5 gals.
Rear Drive Tires	22-inch X 10-inch turf tread	22-inch X 10-inch turf tread
Front Caster Tires	15-inch X 6-inch smooth tread	15-inch X 6-inch smooth tread
Brake System	Internal hydraulic and mechanical park	Internal hydraulic and mechanical park
Weight	Approx. 1,000 lbs.	Approx. 1,000 lbs.
Height/Length	72 inches x 83 inches	72 inches x 83 inches

**Z-BEAST** Finish Mower

Throughout this manual, instructions are given on the operation of your Z-BEAST mower. We recommend that while going through this manual, you have your mower available for quick and easy access in order to orient yourself with the controls, maintenance and orientation of different parts. Please read through the manual before operating.


Control Panel

Below, you will find a diagram of the control panel. Please take the time to familiarize yourself with the mower controls.

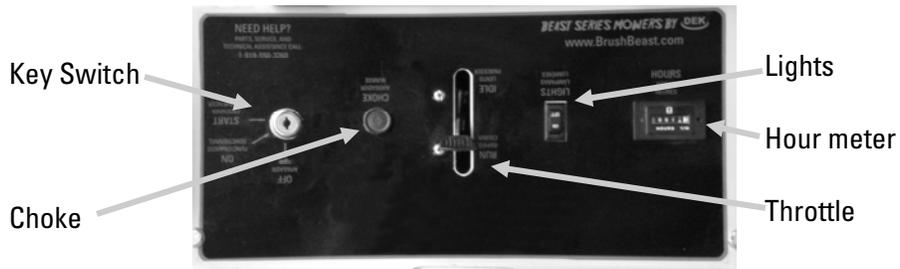

Lawn Mower Component Identification

(Some components may appear different than shown, depending on the model.)

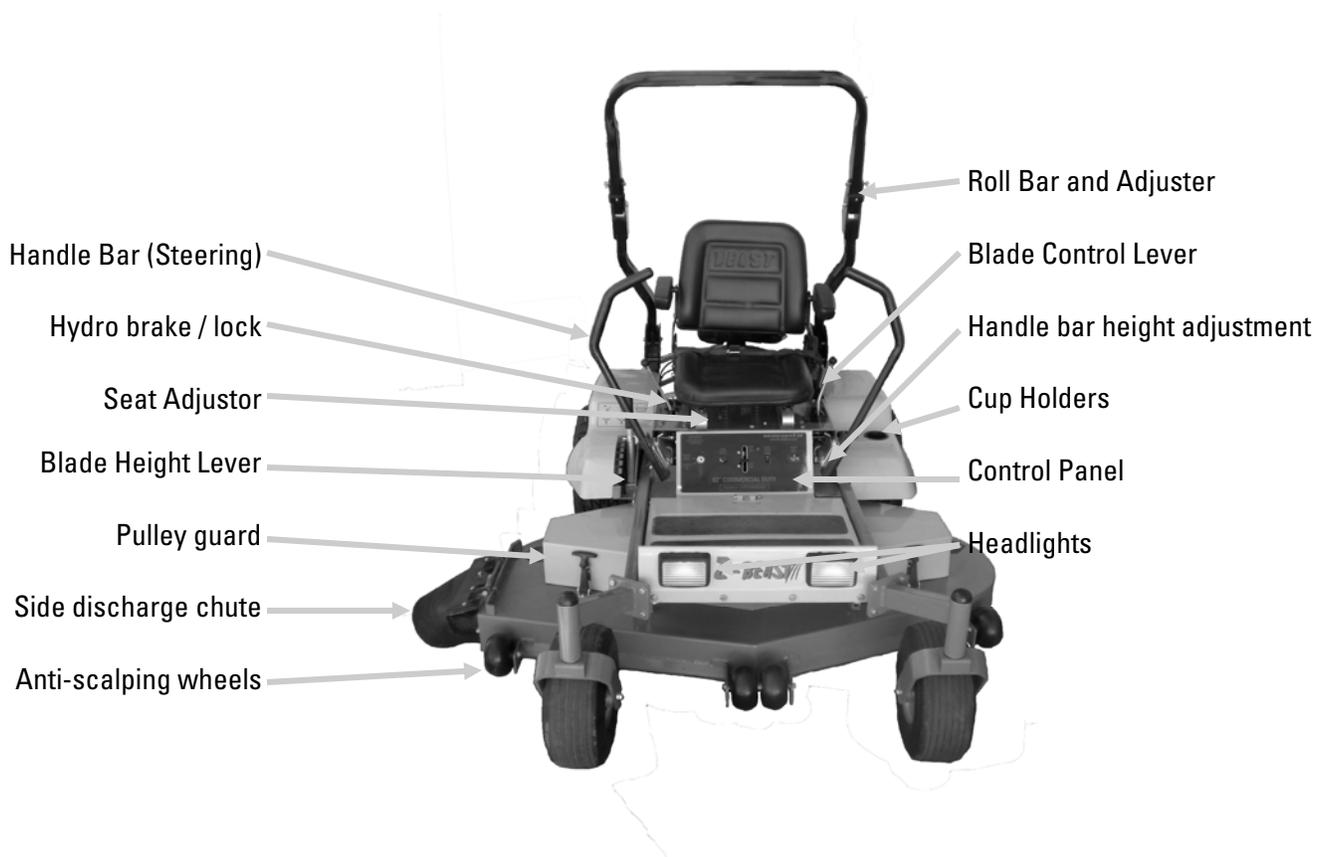

Please indicate the part that you are missing:

- Hardware bag
- Other _____
- Date of purchase _____
- Model #: _____

Name

Address

Phone

Email

Serial #: _____

Comments:

IMPORTANT: Please include your receipt. Without a receipt, your order will be delayed. You may also email us at:


customerservice@gxioutdoorpower.com
Fax: 1-919-550-3277

If emailing, please scan in your proof of purchase.


Step 1: Front Wheel Assembly

Note: Some mowers may be shipped with the front wheels pre-assembled.

- A. Remove packaging materials surrounding the front wheels and remove the bolt threaded into the front wheel. Retain this bolt and washer for future use.
- B. Unscrew the fastener holding the bolt to the steel shipping rack. Set the nut and bolt aside. It will be re-used in the mower assembly process.
- C. Remove the mower from the steel shipping rack.
- D. Slide the front wheel pivot shaft through the sleeve. If the fit is tight, apply some grease to the pivot shaft.
- E. Secure the shaft in place with the hardware that was provided with the wheel.

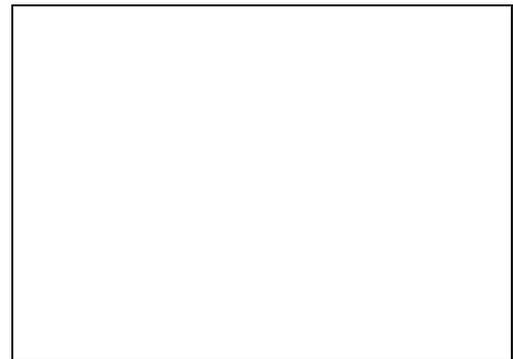

 
- F. Repeat steps A through E for the second front wheel.
- G. Apply grease to the front wheel sleeve grease fittings when complete.



Step 2: Rear Wheel Assembly

Note: Some mowers may be shipped with the rear wheels pre-assembled.

- A. Remove packaging materials surrounding the rear wheels and remove the bolt threaded into the rear wheel. Retain this bolt and washer for future use.
- B. Jack up the mower from the rear center.
- C. Transfer the weight from the jack to the jack stands, using one jack stand on each rear axle.
- D. Make sure that the wheels are facing the correct position before securing. The V-shape on the tires should be facing forward and the valve stem facing out.
- E. When securing the tires make sure to secure the opposite nut from the one secured first similar to securing a car's tires.
- F. Repeat steps A through E for the second rear wheel.
- G. Apply grease to the rear wheel sleeve grease fittings when complete.

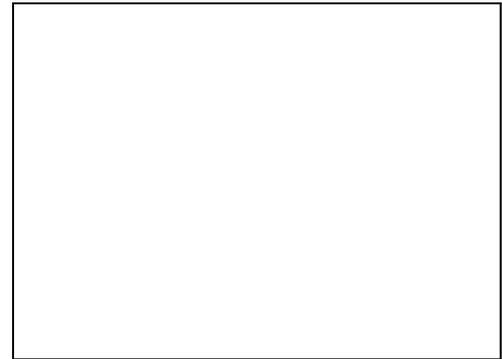

Step 3: Mower Handles Assembly Instructions

- A. Attach handle bars to the suitable position for the operator by making sure that the handles are at a comfortable neutral position. The neutral position can be identified by finding the position of the bars that is capable of being pushed apart.
- B. When adjusting the position of the handle bars be certain that the handle bars can not go further than the operator's arm length.
- C. The handle bars must also be able to be pulled back to its entirety for safety purposes.
- D. When handle bars are in the position best suited for the operator, properly secure the bolts that attach the handle bars to the mower.





DANGER: Battery electrolyte has sulfuric acid which can cause severe burns and is also deadly poison. Never drink and always avoid contact by wearing gloves and safety glasses when servicing the battery.

Attaching Positive Wire

Step 4: Connecting Battery

1. Unwrap the protective tape off the positive wire and attach it to the mower's positive battery terminal on the left side of the mower. When attached to the terminal screw in the wire to keep it in place.
2. Unwrap the tape off the negative wire and ground it to the right side of the mower. Repeat process mentioned above to attach the ground wire.

Attaching Negative Wire



WARNING!

There is no rollover protection while the roll bar is not locked in its fully raised position.

- Never lower the roll bar while mowing.
- Always use seat belt when the roll bar is in its raised position.
- If conditions require the roll bar to be lowered, do not use the seatbelt.

Connect screws through proper holes on bottom of rollbar

Step 5: Connecting Rollover Protection System.

1. Connect the screws through the proper holes on the bottom of the rollover protection bar to the holes on the mower and tighten.
2. Do the same with the opposite side
3. Attach the top part of the rollover bar to the middle part just locked into place using the same method on both the left and right side.
4. Next place the pins into the upper hole on the top bar and lock them to keep the roll bar locked in the upright position.

Attaching middle part

Putting pins in holes

Step 6: Brake Operation**Step 7: Wire Harness Assembly and Connections**

The pre-wired handle bar assembly has a total of four (4) connections. Route the wire harness as shown in the top right photo and make the following connections identified by number in the other photos:


1. Route the smaller, white, 2-pin connector through a hole in the chassis and connect it to the blade activation safety switch 2-pin connector.
2. Connect the larger, 5-pin connector to the mating connector at the rear of the engine.
3. Connect the black wire to a ground lug located on the back or side of the engine.
4. If equipped, attach the yellow wire to the bottom of the starter motor solenoid on the engine, with the positive (red) battery cable.



Attach the positive (red) and ground (black) battery terminal wires to the battery to provide power to the electric starter.

Note: Battery ground should be to the engine block.

Once all connections are made, use the provided black wire-ties to strap the wire harness into place permanently to the handle bars and chassis.

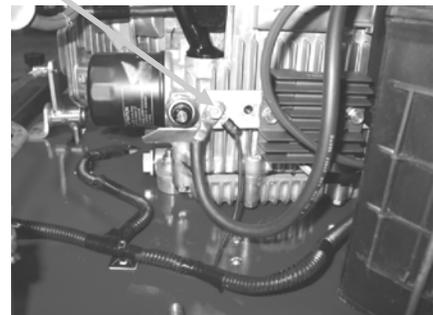

Starting the Engine



Before attempting to use your mower, make sure you are familiar with all of the components and have read the manual.

DANGER: Exhaust contains poisonous carbon monoxide, a colorless and odorless gas. Breathing exhaust can cause loss of consciousness and may lead to death. Do not operate the engine in a confined space where dangerous carbon monoxide fumes can collect.

NOTE: Be sure to add fresh unleaded gasoline and fill the engine to the proper level with manufacturers recommended motor oil before starting your mower.

1. Make sure the shut off valve, located at the bottom of the tank, is in the ON position.



2. Make sure the brake is set and the 2 control handles are spread open into their neutral position.



3. Make sure the blade control lever is in the OFF position.

4. Pull CHOKE and set the throttle to its mid-point.


5. Turn the key clockwise to the START position and allow it to return to the ON position when the engine starts.

6. When the engine starts to run and the key returns to the ON position, push CHOKE off.



Operating the Mower

1. Make sure the brake has been moved to the OFF Position.
2. Pull both control handles to the center.
3. To drive the mower forward, push both handle bars forward away from the chest. The forward speed is directly proportional to the degree these handles are moved forward.
4. To turn the mower left, push to the right handle in front of the left handle or the left handle more towards the neutral position than the right handle.
5. To turn the mower right, perform the handle movements described in step 4 above with except with the opposite handle position.
6. To stop the forward motion of the mower, move both the handles to the center/neutral position.
7. To drive the mower backwards, pull both handle bars backwards toward the chest.
8. To turn backwards to the right or left, repeat the steps in 4 or 5 above except in the opposite direction.
9. To zero degree turn to the right, push the left handle forwards and the right handle backwards.
10. To zero degree turn to the left, push the right handle forwards and the left handle backwards.
11. When in the neutral position, the hydraulic system prevents the mower from moving easily. However, on a grade, the mower can move very slowly (with the engine off or running). Be sure to set the manual parking brake any time the mower is left unattended or is being transported.
12. When the handles are in the middle position they can be pushed away from each other to lock the mower in the neutral .

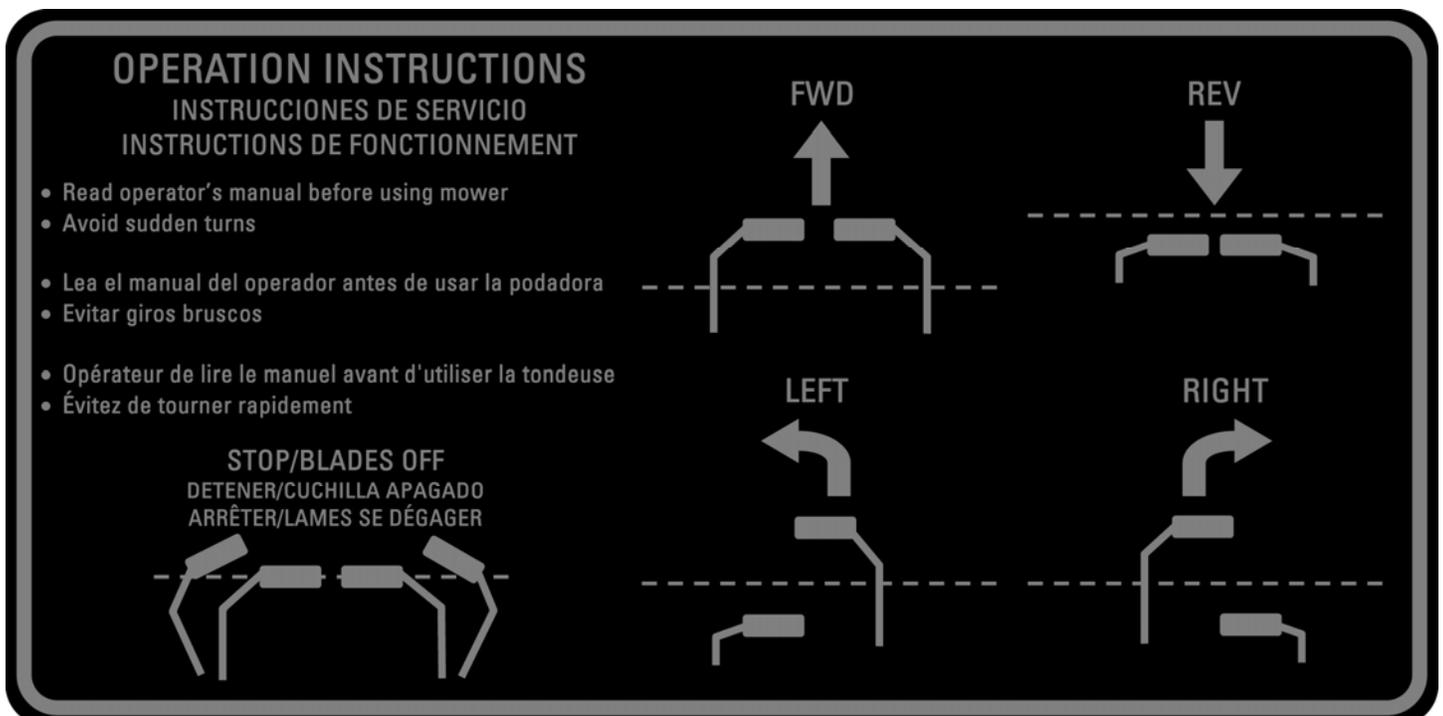

Changing the Height of Cut

Your mower is equipped with an easily adjustable floating deck, which can be adjusted for cut heights of 1½ inches to 5 inches in ½-inch increments. The deck height adjuster is located on the right side of the mower.

How to Change the Cut Height

1. Extend the blade control lever by pulling it up.
2. Pull the lever out to the left to shift the deck up or down to the desired height.
3. When desired height is chosen lock the deck by pushing the handle back into the lock position.
4. After deck height is changed the lever should be pushed back down to its original position.



Note: After mowing, remember to pull the deck to its highest position to avoid scraping and any other kind of damage to the blades or deck.



Mowing



WARNING! Thoroughly inspect the area where you plan to use the mower. Look for items such as stones, sticks, wire, and other foreign objects. If struck by the mower, these and other objects may become projectiles that could lead to serious injury or death. Clear area of all debris.

Keep people and pets at a safe distance.



WARNING! Do not operate the mower with defective guards, shields, or without the safety devices securely in place.

1. When the mower is in position on the area to be mowed, move the throttle to its full speed.
2. **SLOWLY** push the blade control lever forward to the ON position.
3. Begin mowing as described on the previous page, always using safe/comfortable speeds.
4. To stop the blades, pull the blade control lever back to the OFF position.

The Soft Start feature is critical to maintaining belt, clutch, and engine life. NEVER "slam" the blade on/off handle from off to on without pausing an adequate time in the soft start range.


IMPORTANT! The mower belts are adjusted to ensure the blades stop turning within seven (7) seconds of releasing the blade control lever. If you are making any belt adjustments whatsoever, for your safety and the safety of others around you, you must ensure the belts are re-adjusted to achieve this design specification.

Disengaging Hydrostatic Drive Units

Before physically moving the mower when the engine is **NOT** running, the hydrostatic drive units need to be disengaged into free-wheel mode.

To disengage these hydro units:

1. Unscrew both of the bolts that keep in the hydro system.

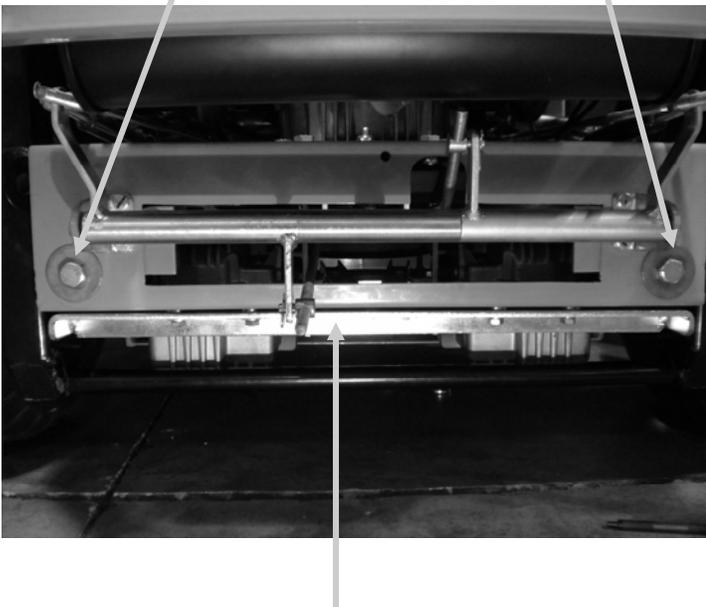

2. If necessary bump the bottom part of the mower with a tool lightly where the hydro systems are located to ensure the system is disengaged

CAUTION! Never bump, hit or push the actual hydros.

To return to operation mode:

1. Place the bolts back in place on the back of the mower.
2. Screw them back to how they were originally.

Return to Neutral



DANGER! Make certain the engine comes to a complete stop before putting your hands in the access panel.

If the mower creeps or will not stop as desired when the handles are in neutral position, adjustments are necessary.

CAUTION: Be sure the engine is OFF before you open the hydro access panel.

1. Remove the bolts to access hydro panel.
2. Using an 8 mm wrench, reach through the bottom of the hydro panel to the return-to-neutral set pin bolts. Loosen bolts on the side that needs adjusting.
3. Be sure the brake is in the OFF position. In a safe operator position, start the engine.
4. With the engine running, slowly move the handle on the side needing adjustment until that side comes to a complete stop. If the mower creeps forward, pull handle in reverse, If the mower creeps backward, pull the handle forward.
5. When the mower stops moving completely the hydro is in the neutral position.
6. Turn off the engine.
7. Slowly tighten the bolts without moving the plate.
8. With the bolts tightened, move to a safe operator position and start the engine.
9. If the creep has returned, repeat the process. Multiple iterations may be required.
10. Reinstall hydro access panel.



The Importance of Maintenance

Regular maintenance is essential to ensure your mower continues to deliver safe and high-quality performance.

To help you properly care for your mower, the following pages include a recommended maintenance schedule, routine inspection procedures, and simple maintenance procedures using basic hand tools. Maintenance is the responsibility of the owner and must be performed regularly. More difficult service tasks or tasks that require special tools are best handled by a recommended service technician or other qualified mechanic.

The maintenance schedule described on page 14 applies to mowers used under normal operating conditions. If you operate your mower under severe conditions, such as sustained prolonged use or high-temperature operations, or use it in unusually wet, dusty or rocky conditions, consult your servicing dealer for recommendations applicable to your individual needs and use.

Be sure to use genuine Z-BEAST mower replacement parts when servicing your mower to assure the best quality, safety and performance.

Need Help? Parts, Service and Technical Assistance
Call: 1-919-550-3221 www.beastpowerequipment.com

Fuel



DANGER: Gasoline is highly flammable and explosive. Do not add fuel while the engine is running or is hot. Keep open flames, sparks, and heat away from the fuel and store fuel in containers specifically designed for that purpose. Add fuel outdoors only and if the fuel is spilled, do not start the engine. Manually push the mower away from the spill and wipe up immediately.

Refer to the Engine Owner's Manual for the type of fuel to use.

A fuel shut off valve is located on the bottom of the fuel tank. It is recommended that the fuel be shut off when transporting between job sites and when storing the mower for extended periods of time.



CAUTION! Before making any adjustments and/or servicing to your Z-BEAST mower, make sure the mower is on a level surface, with the ignition switch off, the key removed, the brake set, and the blades disengaged. Also, disconnect the spark plug wires from the spark plugs and ground them against the engine to prevent inadvertent starting.

If you are performing adjustments or maintenance after operating the mower, allow the unit to cool and always wear protective clothing.

Tire Pressure

Incorrect tire pressure may cause the mower to pull to one side and/or result in uneven cut. Use caution when filling the tires. NEVER exceed the recommended maximum tire pressure as stated on the tires.

Air Filter

Refer to the Engine Owner's Manual for the recommended maintenance.

Engine Oil

CHECK ENGINE OIL BEFORE EACH USE. Refer to the Engine Owner's Manual for the type of oil to use, oil change intervals, and the proper procedures to check and change oil.

Blades

Inspect blades on a daily basis for nicks, bends, and excessive wear. If the blades are worn, cracked, bent, or damaged, replace them before using the mower. Choose genuine Z-BEAST mower replacement blades to ensure quality and performance. (See page 16 for blade removal instructions.)

When sharpening the blades, sharpen only the cutting edges and try to maintain the original angle of the blade. Do not make the cutting edge razor sharp. Remove the same amount from each side of the blade so that balance is maintained.



CAUTION: Always wear work gloves when performing blade maintenance and beware of the cutting edges. Be sure the engine is off, the key removed, and the spark plug wires are disconnected from the spark plugs to prevent inadvertent starting.

Item	Procedure	Time Interval				
		Break-in (first 5 hrs)	Every 8 hrs (daily)	Every 40 hrs (weekly)	Every 100 hrs (Bi-weekly)	Every 200 hrs (monthly)
Belts	Inspect (adjust if needed)	X	X			
Blades	Inspect and/or Sharpen		X			
Engine Air Filter	Inspect (see Engine Owner's Manual)					
Engine Cooling Areas	Clean (see Engine Owner's Manual)					
Engine Oil	Check (see Engine Owner's Manual)					
	Change (see Engine Owner's Manual)					
Engine Oil Filter	Change (see Engine Owner's Manual)					
Engine Spark Plug	Inspect (see Engine Owner's Manual)					
Fuel Filter	Replace				X	
Fuel Line	Check				X	
Grease Fittings	Refer to page 19					
Hardware	Check for proper tightness	X		X		
Mower Main Frame	Remove debris from under belt cover		X			
Safety Interlock System	Check Operations and Switches		X			
Tires	Check Air Pressure			X		
Spindle/Blade Brakes			X			

Cleaning the Mower

It is recommended that the Z-BEAST lawn mower be cleaned on a daily basis. Excessive accumulation of dirt, debris, oil, etc. on cutting units, drives, mufflers, and engine may present a potential safety hazard.




DANGER: Before making any adjustments or servicing your mower, make sure the mower is on level ground, the blades are disengaged, the brake set, the key is removed, the engine is off and the spark plug wires are disconnected from the spark plugs to prevent inadvertent starting. If maintenance or adjustments are being performed after operation of the mower, allow the unit to cool since heat build up could cause severe burns.


3. Loosen locking nut.
4. Rotate turnbuckle until desired tension is achieved (approximately 1 inch from stop bolt).
5. Tighten locking nut when finished.
6. Close deck cover.

Engine-to-Blade Belt Adjustment

1. Raise the deck cover and move the blade control lever on the control console to the ON position.

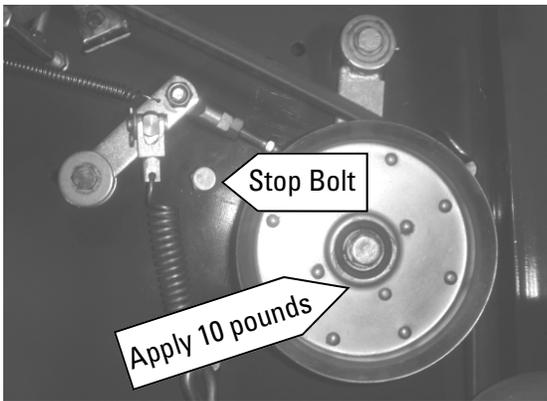

2. With approximately 10 pounds of pressure, push the clutch pulley to tighten the belt. The linkage should stop approximately 1 inch before contacting the stop bolt. If the belt moves within 0.5-inch of the stop bolt, adjustment is necessary. Move the blade control lever back to the OFF position.

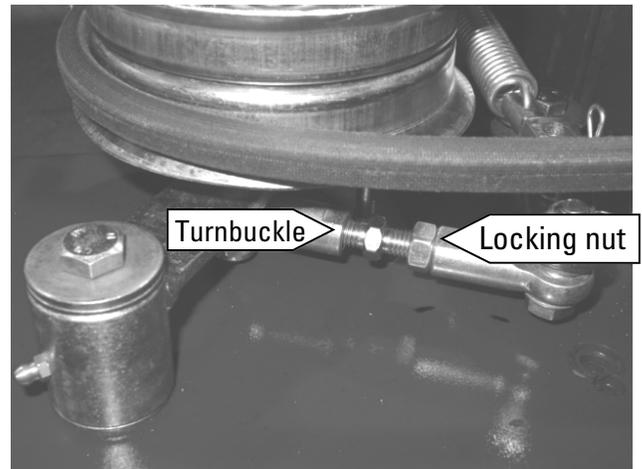

IMPORTANT! The mower belts are adjusted to ensure the blades stop turning within 7 seconds of releasing the blade control lever. If you are making any belt adjustments whatsoever, for your safety and the safety of others around you, you must ensure the belts are re-adjusted to achieve this design specification.




Spindle Brake Inspection and Replacement

IMPORTANT! The mower belts are adjusted to ensure the blades stop turning within seven (7) seconds of releasing the blade control lever. If you are making any belt adjustments whatsoever, for your safety and the safety of others around you, you must ensure the belts are re-adjusted to achieve this design specification.

Blade and pulley brake inspections should be performed every 50 blade on and off cycles.

Before beginning service, park the Z-BEAST on a level surface, turn the blades off, turn the engine off, set the brake, take the key out of the switch, wait an adequate time to make certain no blades are turning, and remove spark plug wires from spark plugs.

1. Engage the blade handle (make certain the engine cannot start) to pull the brakes off of the pulleys.
2. Remove the pulley guard from the deck.
3. Visually inspect the brake pads for wear. Make certain that no metal is touching the pulleys.

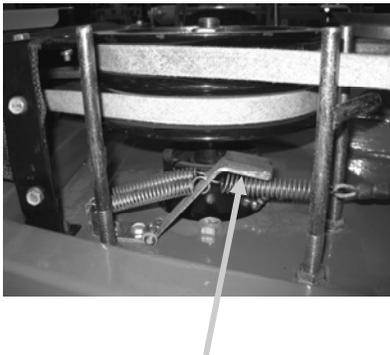

4. The brake pad material should be approximately 1/8-inch thick. Replace the brakes if the material is less than 1/16-inch thick.

Note: Replacing both brakes is recommended if replacement of one brake is required.

5. To replace the brake, use a pair of pliers to remove the springs.
6. Remove the two mounting bolts and disconnect the spring from the cable.
7. Discard all of these parts. DO NOT reuse springs. New brakes are equipped with new springs for proper braking.
8. Install the new brakes by reversing the procedure in steps 5 and 6.

9. Disengage the blade handle and inspect the brake contact surface. All of the brake pad contacting material should be contacting the bottom of the pulley.

Note: Springs may vary from those pictured based on the particular application.


Removing the Blades

Required tools: Two (2) 15/16" box end wrenches



CAUTION! Beware of the cutting edges on the blades. The rotation of one blade may cause the other blade(s) to rotate. Always wear work gloves when handling blades.

1. Park the mower on level ground, set the brake and block the rear wheels to prevent accidental rollback.
2. Raise the front end of the mower and place on a jack stand.
3. Use one wrench to loosen nut A while holding bolt B with the other wrench. (See adjacent photo.)

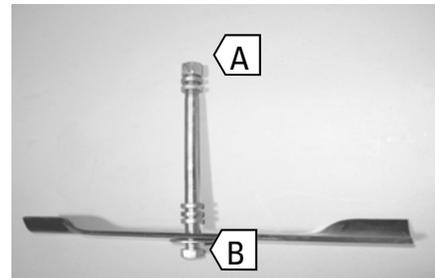

4. Slide the blade bolt down through the mower deck and out.
5. To reinstall, insert the blade bolt through the cutting deck.
6. Install the blade spacers that were removed, back onto the blade bolt followed by the nut and tighten. (See figure below.)

IMPORTANT: The number of spacers should always be the same on each blade bolt. NEVER put the spacers below the blade and NEVER straighten or weld the blades.

IMPORTANT! The mower belts are adjusted to ensure the blades stop turning within 7 seconds of releasing the blade control lever. If you are making any belt adjustments whatsoever, for your safety and the safety of others around you, you must ensure the belts are re-adjusted to achieve this design specification.

Engine-to-Hydrostatic Drives Belt Adjustment

1. The engine-to-hydrostatic drives belt is located underneath the rear deck. The belt should move approximately 1/8 to 3/16-inch with three (3) to five (5) pounds of pressure applied to the belt midway between the hydrostatic drive pulleys when initially installed. After approximately 1 hour of running time, verify that the belt tension is still correct and tighten if necessary

Important: Do not over-tighten the belt.


2. To adjust the belt, turn the nut on the threaded tension rod found on the right, rear corner of the mower.
3. Do not over-tighten. This could cause damage to the hydraulic drive systems.

**Hydro System Adjustment**

The hydrostatic drives are coupled to the output drives with a multi-v belt. Occasional retensioning of the belt may be necessary. If performance decreases or hydro control handles are activated and the wheels do not turn, inspect the multi-v belt.

1. Remove the hydro access panel. (not present in photo)

2. Tighten nut to tighten belt. Belt tension should be 1/16-inch deflection under seven (7) pounds of pressure.

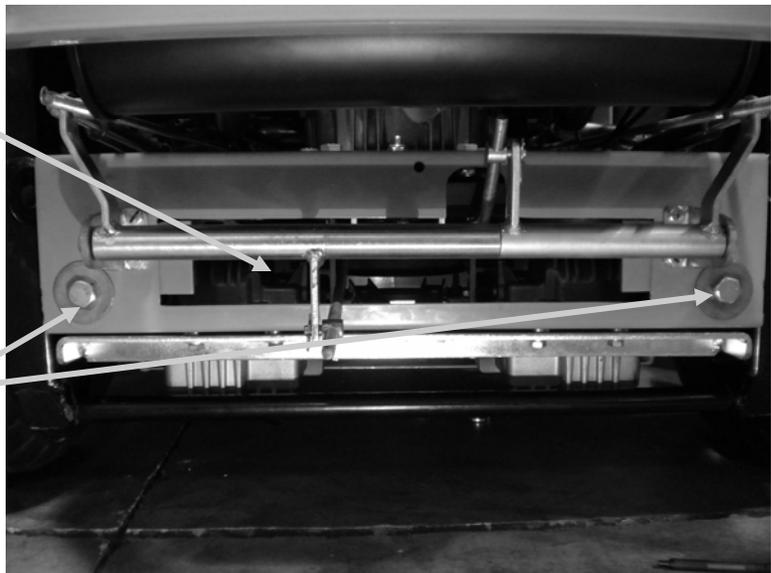

Safety System Adjustments



WARNING: Do not bypass, modify, alter, or disconnect the safety system. Make sure that the safety interlock system is fully operational each time before mowing. Failure to do so could present danger to you and others around you.

There are generally three (3) ways to adjust the sensitivity of a safety switch. The most appropriate way to adjust each switch depends upon the application, location, and the nature of the problem you are encountering.

Method 1: Adjust location using the mounting screws


1. Move the blade control lever to OFF.
2. Loosen screws (A) until safety switch (B) moves freely.
3. Slide safety switch (B) firmly against blade bell crank (C).
4. Tighten screws (A) and check that safety switch (B) does not move.

Method 2: Adjust location using adjustment nuts on switch body

1. Loosen locking nut (C) on the sensor shaft.
2. Adjust switch location by turning the nuts.
3. Tighten the locking nut when proper adjustment is achieved.

Method 3: Relocate mounting holes

In rare cases where the components become misaligned, the easiest means of adjusting the location is to elongate the existing holes or add new holes to achieve a tighter fit between the activation rod and the sensor.

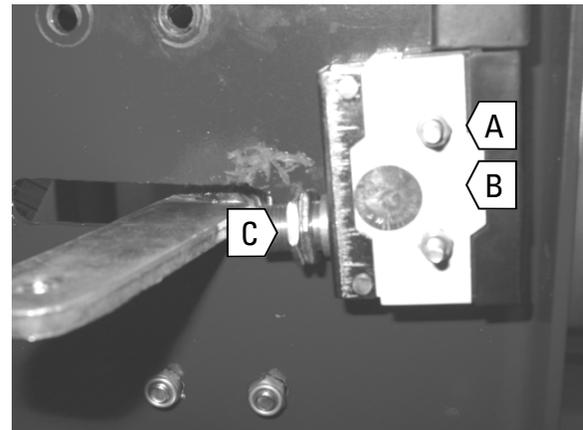

To ensure proper lubrication of moving parts, GXi recommends that you lubricate the following components with a high-quality, EP2 high-temperature-based grease or equivalent. Should the conditions of operation be more severe than normal, the lubrication interval may need to be shortened. GTR/OPE grease is the recommended lubricant.

Lubrication Point Locations

54-inch & 62-inch mowers have 10 lubrication points.

Lubricate after every 50 hours of usage

1. Front wheels (2 locations, 1 on each wheel shaft)



2. Spindles (3 locations on 54-inch & 62-inch mower decks).



Note: The lower spindle bearing is sealed on the bottom and open on the top. The upper spindle bearing is sealed on both sides. Failure to frequently replenish grease will cause premature lower bearing failure. Frequent application of grease to this bearing is critical to achieving long spindle life in harsh duty environments.

3. Mower deck clutch pulley pivot



Changing Battery

When disconnecting the battery make sure to disconnect the negative terminal first and the positive last. When reconnecting, connect the positive first and the negative last.



Charging Battery

Always charge battery in an open well ventilated area, away from sparks and flames. Unplug charger before connecting or disconnecting from battery and always wear protective clothing and use insulated tools.



DANGER: Battery electrolyte has sulfuric acid which can cause severe burns and is a deadly poison. Never drink and always avoid contact by wearing gloves and safety glasses when servicing the battery.



WARNING: Do not allow battery terminals to touch any metal parts of the mower when removing the battery. Never allow metal tools to short between the battery terminals and metal parts of the mower as this may cause sparks. Sparks can also cause the battery gasses to explode which can result in injury/death.

Short Term Storage

- Let engine cool before storing and do not store near flame, high heat, and possible ignitions from sparks.
- Always clean off all flammable material as well as grime and dirt before storage.
- Never use a pressure washer and avoid drenching the control panel, motor, engine, and hydro pumps with water.
- Wash with mild detergent and water only.
- After washing the machine engage the engine at high and let the mower run for 5 minutes.
- Shut off fuel for storing or transporting.
- Carefully release pressure from components with stored energy.
- Store mower only on the ground.
- Do not drain fuel indoors or near a flame.
- Use jack stands to support components when required.
- Always park machine on level ground and set the parking brake when storing.
- Store the machine in a clean and dry environment.
- Always remove the key from the ignition.
- Add a petroleum based conditioner in the gas tank and run for 5 minutes to distribute through mower.

Extended Storage

- Change air filter.
- Make sure all fuel is drained before storing.
- To ensure all fuel is drained from the mower, run the mower until it runs out of gas before storage.
- Check the spark plugs condition and pour two tablespoons of engine oil in the spark plug holes and leave the spark plugs off.
- Cover the machine when in storage.
- Remove Battery and clean terminals and cable connectors. Store battery in a cool dry place.
- Everything mentioned in short term storage should also be applied to extended storage.

Problem	Possible Causes	Solution
Engine will not start	<ol style="list-style-type: none"> 1. Key in the OFF position 2. Insufficient fuel in the tank 3. Air bubble in the fuel line 4. Fuel valve in OFF position 5. Choke not ON 6. Choke linkage out of adjustment 7. Low engine oil 8. Blade control in ON position 9. Loose spark plug wire 10. Fouled spark plug 11. Plugged or dirty air filter 12. Bad gasoline 13. Plugged or dirty fuel filter 14. Safety switches out of alignment or loose 15. Dead battery (electric start models) 	<ol style="list-style-type: none"> 1. Turn key to ON position 2. Add gasoline 3. Prime engine or shake bubble out 4. Turn valve ON 5. Turn choke ON 6. Refer to Engine Owner's Manual 7. Add engine oil 8. Push lever to OFF position 9. Tighten wire or connections 10. Clean or replace the plug 11. Clean or replace the air filter 12. Drain and replace with fresh gasoline 13. Replace the fuel filter 14. Adjust or tighten switches (p. 18) - read warnings! 15. Recharge or replace battery
Engine will not keep running/quits	<ol style="list-style-type: none"> 1. Water in the fuel 2. Loose safety switch 3. Fuel valve is OFF 4. Dirty fuel filter 5. Dirty air filter 6. Low engine oil 	<ol style="list-style-type: none"> 1. Drain and replace with fresh fuel 2. Adjust switch (p. 18) 3. Turn fuel valve ON 4. Replace fuel filter 5. Clean or replace air filter 6. Add engine oil
Engine stops when blades are engaged	<ol style="list-style-type: none"> 1. Loose safety switch 2. Belt tension too high 3. Blades jammed with foreign material 	<ol style="list-style-type: none"> 1. Adjust switch (p. 18) 2. Adjust belt (p. 15) 3. Remove foreign material <p>Note: Firmly pushing the blade control lever into the OFF position to ensure the safety switch is fully engaged can sometimes resolve this problem.</p>
Blades do not turn	<ol style="list-style-type: none"> 1. Broken belt 2. Loose belt 3. Blade activation linkage out of adjustment. 	<ol style="list-style-type: none"> 1. Replace belt 2. Adjust belt (p. 15) 3. Adjust linkage (p. 16)
Belts squeal when blades are engaged	<ol style="list-style-type: none"> 1. Incorrect belt tension 2. Excessive belt wear 	<ol style="list-style-type: none"> 1. Adjust belt tension 2. Replace belt
Belts slip when blades are engaged	<ol style="list-style-type: none"> 1. Incorrect belt tension 2. Excessive belt wear 	<ol style="list-style-type: none"> 1. Adjust belt tension 2. Replace belt

Problem	Possible Causes	Solution
Mower will not move forward or reverse	<ol style="list-style-type: none"> 1. Brake ON 2. Bypass levers pulled out 	<ol style="list-style-type: none"> 1. Release brake on control panel 2. Ensure bypass pins are retracted
Cannot move mower when the engine is off	<ol style="list-style-type: none"> 1. Bypass not engaged 	<ol style="list-style-type: none"> 1. Pull left and right bypass pins and set them in slots in the chassis (p. 12)
Engine is overheating	<ol style="list-style-type: none"> 1. Dirt in the fuel line 2. Dirty air filter 3. Low engine oil 4. Fouled spark plug 5. Misuse of the mower 6. Dull blades 7. Spindle bearing failure 	<ol style="list-style-type: none"> 1. Replace fuel filter and flush tank 2. Clean or replace the air filter 3. Add engine oil 4. Replace spark plug 5. Mow slower, wait for grass to dry out 6. Sharpen cutting blades 7. Take in for service
Grass not cut smoothly or cleanly	<ol style="list-style-type: none"> 1. Dull blades 2. Mowing too fast for conditions 3. Grass is wet or bent over 4. Blade is bent 5. Tire pressure not equal 6. Deck is set at uneven heights 7. Blades are set upside down 8. Excessive grass and debris build up underneath the deck 	<ol style="list-style-type: none"> 1. Sharpen blades 2. Slow down while cutting 3. Let grass dry to stand up 4. Replace blade 5. Add air pressure to low tires 6. Set deck at equal heights 7. Take blades off and install correctly 8. Clean out debris
Mower always pulls to one side	<ol style="list-style-type: none"> 1. Controls out of adjustment 2. Transmission failure 	<ol style="list-style-type: none"> 1. Adjust controls (p. 12) 2. Take in for service

Products Covered by this Warranty	Length of Warranty: *(from the date of original retail purchase)		
	Residential	Commercial	Rental
Engine	Manufacturer's warranty	Manufacturer's warranty	Manufacturer's warranty
Transmission	Manufacturer's warranty	Manufacturer's warranty	Manufacturer's warranty
Mower frame	Lifetime (original owner only)	Lifetime (original owner only)	90 days
Belts, Tires, Battery	90 days	90 days	90 days
Attachments	1 yr limited	1 yr limited	30 day limited

*LENGTH OF WARRANTY: Batteries supplied with applicable products as standard, original equipment are covered by this warranty for a period of 90 days from the date of original retail product purchase. Consumable parts such as oil, spark plugs, filters, and blades are not covered by this warranty.

To Qualify for this Warranty

The product must be purchased in the United States from a dealer authorized by GXi Outdoor Power, LLC to sell those products. This warranty applies to first retail purchaser/owner during the applicable warranty time period. **SAVE YOUR PROOF OF PURCHASE RECEIPT. MUST HAVE PROOF OF PURCHASE TO OBTAIN WARRANTY.**

What GXi Outdoor Power Will Repair or Replace under Warranty

GXi will repair or replace, at its option, any part that is proven to be defective in material or workmanship under normal use during the applicable warranty time period subject to the exclusions stated herein. This warranty is void if the owner fails to follow the prescribed maintenance and operating procedures described in this manual. This specifically refers to ensuring routine lubrications and oil changes are made, that fuel stabilizer is used when the product is stored and that the product is not overloaded.

GXi has the right to recover warranty administration costs from the owner if the root cause of the malfunction is found to be other than defective material or workmanship. In particular, this warranty does not cover: contaminants in the fuel or oil; damage caused by not following the prescribed warnings and operating practices; failure to follow proper maintenance and storage procedures; and physical damage due to misuse, shipping, handling or storage.

Warranty repairs will be made without charge for parts and labor for the first year.

Anything replaced under warranty becomes the property of GXi. Parts replaced under warranty will be considered as part of the original product and any warranty on those parts will expire coincident with the original product warranty.

To Obtain Warranty Service

You must take the BEAST product, accessory, replacement part, apparel or the power equipment on which the accessory or replacement part is installed, and proof of purchase, at your expense, to any BEAST service location in the United States, who is authorized to service that product, during the service location's normal business hours. If you are unable to obtain warranty service, or are dissatisfied with the warranty service you receive, take the following steps: First, contact the manager of the service center involved; normally this will resolve the problem. However, if you should require further assistance, write or call the GXi Parts & Service, LLC 1-919-550-3221

Exclusions

This warranty does not cover: normal wear, contaminants in the fuel or oil; damage as a result of use in an application for which the product was not designed; damage caused by incorporation or use of unsuitable attachments or parts, unauthorized alteration, or other misuse and neglect; damage caused by failure to follow the prescribed warnings, operating practices, proper maintenance and storage procedures; parts affected or damaged by accident and/or collision; damage due to shipping, handling, storage or any causes other than defects in material or workmanship of the product.

Disclaimer of Consequential Damage and Limitation of Implied Warranties

GXi disclaims any responsibility for loss of time or use of the product, transportation, commercial loss, or any other incidental or consequential damage. Any implied warranties are limited to the duration of this written limited warranty.

THIS WARRANTY IS VOID IF THE MANUFACTURING DATE AND THE SERIAL NUMBER ON THE EQUIPMENT HAS BEEN REMOVED OR THE EQUIPMENT HAS BEEN MODIFIED.