


Lift and tilt out door.

Levante la puerta e inclínela hacia fuera.

Levez, inclinez la porte vers l'extérieur et retirez-la.

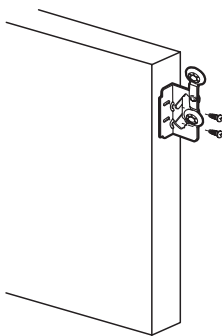

Replace rollers and pre-adjust close to old roller settings.  
Install guide. Gently turn adjustment nut. **DO NOT OVER-TIGHTEN!**

Cambie las ruedas y regúlelas aproximadamente igual que las viejas. Instale el guía. Gire la tuerca reguladora suavemente. **¡NO LA AJUSTE DEMASIADO!**

Remplacez les roulettes et pré-réglez selon les réglages des vieilles roulettes. Installez un guide. Tournez délicatement l'écrou de réglage. **NE PAS RESSERRER EXCESSIVEMENT!**

