



Replacement Foam Door Seal Weather Strip Installation Instructions and Warranty

You will need: Measuring tape and scissors

Step 1:

Remove old weatherstrip gasket by sliding out of carrier, if necessary. Clean carrier/door jamb stop.

Step 2:

Measure the length of the carrier or door stop at the top of the door. Cut a piece of the weatherstrip to fit. Insert cut piece into top of door carrier with open sides of the “v” facing upwards.

Step 3:

Measure the left and right door jamb stop and cut to size. Starting at the top of the door insert the piece into each side door jamb stop pressing firmly into place. The “v” should be facing toward the door jamb. Trim excess length with scissors if needed.

Product Warranty:

This product is warranted to be free from defects in material and workmanship for one year. For replacement product, contact customer@amconservationgroup.com and have proof of purchase available. Manufacture may require original product to be shipped back for evaluation and/or pictures of defective product to be provided.