

# Assembly

The unit is full assembled. The crate is held down by four clips, two on each end. Lift off the shipping crate and remove straps holding down the unit to the pallet. The tamping rod is located in the intake chute and is wrapped to prevent damage. After reading the operators manual secure in the owners manual tube for on-sight reference. Safety switch is shown to kill engine at anytime the unit is running.

