

5 Year Limited Household Warranty

Range Kleen Mfg., Inc. warrants pot racks to be free from defects in workmanship and materials under normal household use to the original purchaser for 5 years from the date of original purchase. To maintain your pot rack, we recommend that you follow the Use and Care instructions carefully.

During this period, Range Kleen Mfg., Inc. will repair or replace, at its option, any defective item returned to Range Kleen with original purchase receipt. If the item is out of production, an item of similar value and function will be substituted. Commercial use of this product voids this warranty. Incidental or consequential damages are not covered by this warranty. This warranty is non-transferable.

This warranty will not cover damage caused by misuse of the product in direct opposition to the supplied use and care. All discoloration, scratches and stains, or other signs of misuse or abuse of the pot rack that do not affect the function of your pot rack is not covered under this warranty.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

Customer Service Information

Should you have any questions or concerns, please contact Customer Service at
419.331.8000, Fax 419.331.4538 or email at info@rangekleen.com
Hours: Monday through Friday, 8:00am-5:00pm EST

Range Kleen Mfg., Inc.
P.O. Box 696
Lima, OH 45802

©2007
Designed in USA/Made in China

F4

Printed in China



Oval Pot Rack



Use and Care

Before using for the first time . . .

Remove all parts from packaging. Layout all parts and compare to the picture below to ensure that you have all parts needed to install your Range Kleen Pot Rack. Should any part be missing, please contact Customer Service at 419.331.8000. (Hours: Monday through Friday, 8:00am-5:00pm EST)

Parts List: (See Photo 1 Below.)

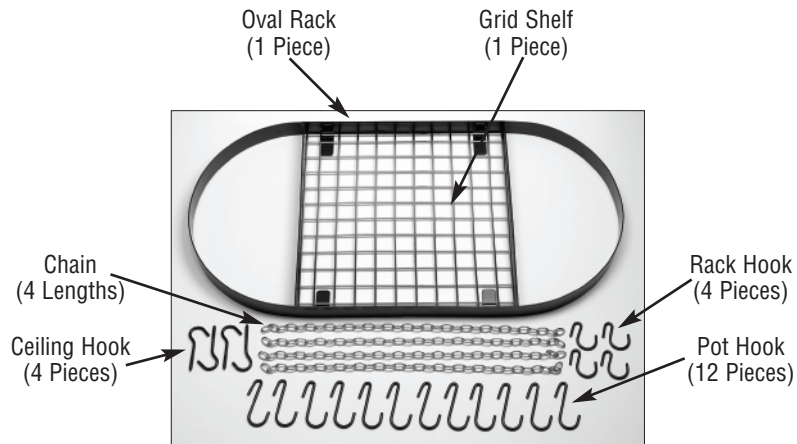


Photo 1

Assembly

1. Always protect the area directly below where you are going to hang your oval pot rack by laying a drop cloth or tarp over the area.
2. Square up the rack directly under the area you are going to attach to the ceiling.

Assembly (cont.)

3. Measure the width and length of the pot rack where the chains will attach as shown in Photo 2.
4. Place a plumb bob or a weight on the end of a string to help assist you in correctly marking your ceiling where the ceiling hooks should be inserted. Double check your markings with a tape measure against the measurements you took in step 3 to make sure that your chain will hang straight.
5. Using a drill, drill the four holes in the ceiling where you have marked. Always use a drill bit that is smaller than the diameter of your ceiling hooks. If you hit ceiling joists in all the holes, proceed by screwing in the ceiling hooks until they are firmly in place.
WARNING: If you do not hit ceiling joists you must visit your local home improvement store to purchase toggle anchors. Make sure that the toggle anchors are rated for the correct weight of at least 50 lbs. minimum. Follow the manufacturer's instructions on how to install the toggle anchors before installing ceiling hooks and moving to Step 6.
6. Attach chain to all the ceiling hooks.
7. Getting a partner to help you finish the installation, each hold opposite ends of the pot rack. Together, attach the rack hooks provided to the pot rack and then to the chain. Double check to make sure all 4 corners are attached properly before releasing the pot rack.
8. Use the provided 12 pieces of pot hooks to display your cookware in your kitchen.

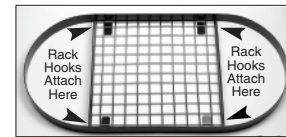


Photo 2

NOTE: MAXIMUM LOAD LEVEL IS 40 POUNDS. DO NOT ATTEMPT TO PLACE MORE THAN 40 POUNDS ON THE POT RACK. THIS COULD RESULT IN PERSONAL INJURY AS WELL AS PROPERTY DAMAGE.