


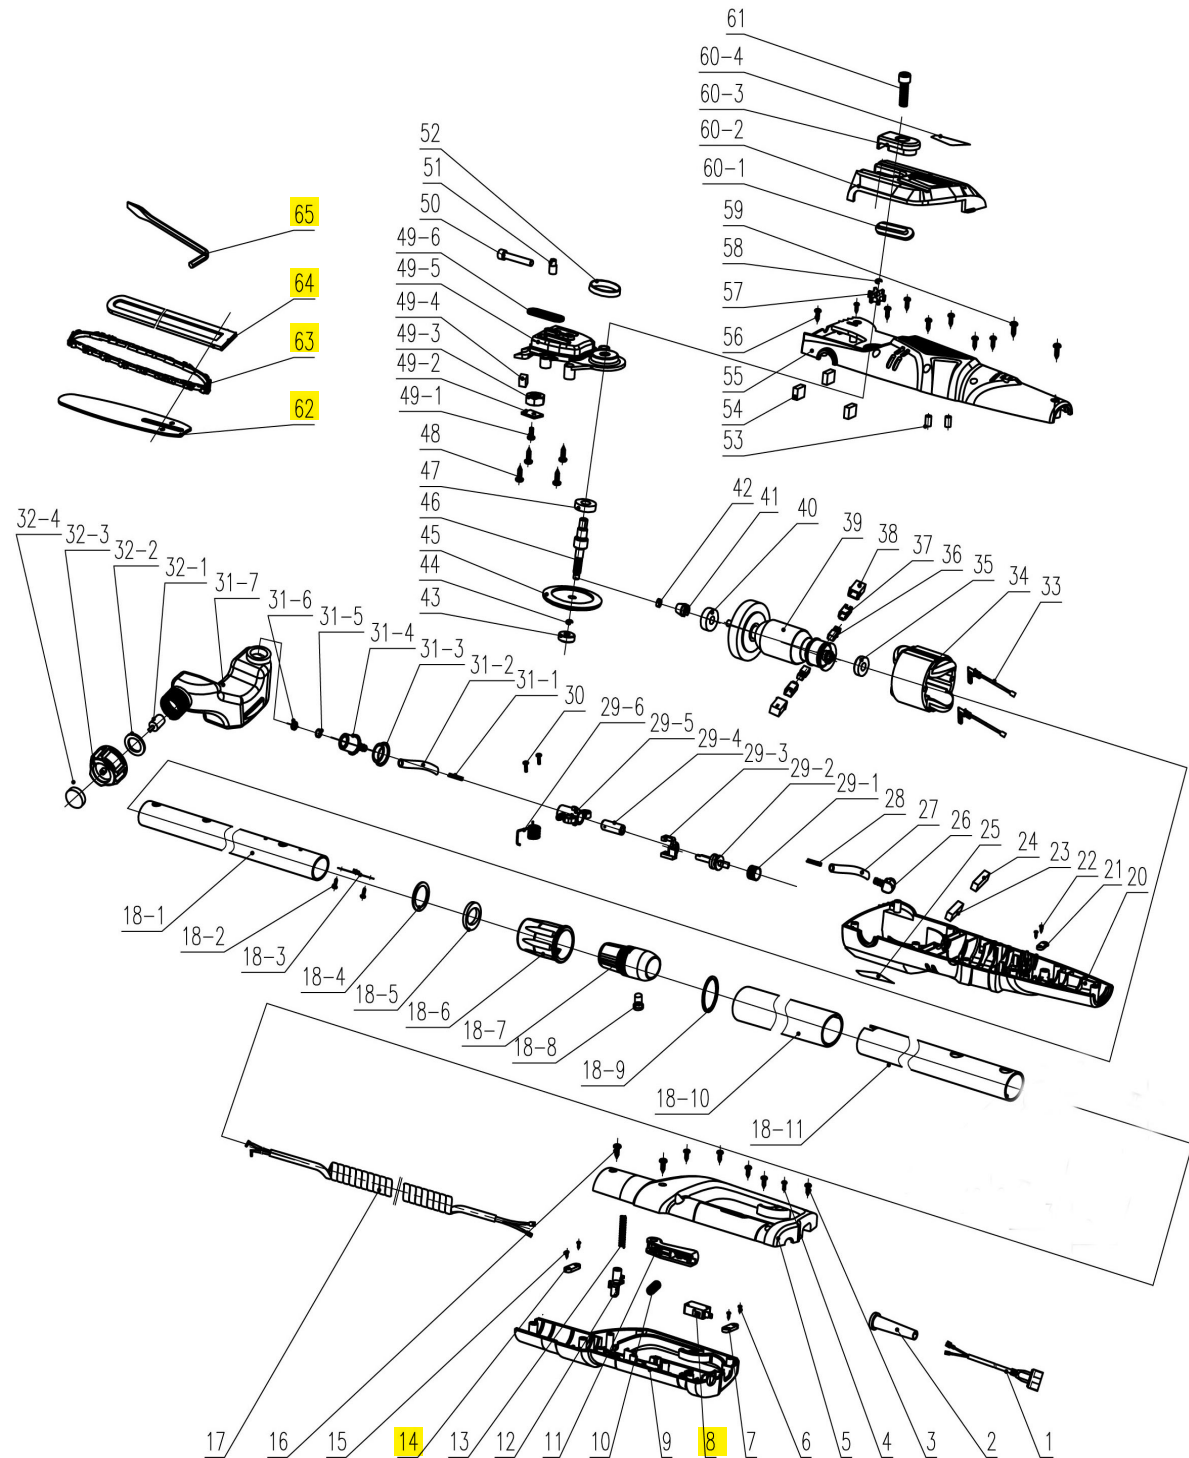

SWJ800E



SWJ800E PARTS LIST

ITEM NUMBER	ITEM DESCRIPTION	PRICE
SWJ800E-1	CABLE	
SWJ800E-2	CABLE SLEEVE	
SWJ800E-3	SELF TAPPING SCREW 4*14	
SWJ800E-4	SELF TAPPING SCREW 4*12	
SWJ800E-5	RIGHT HANDLE	
SWJ800E-6	SELF TAPPING SCREW 4*12	
SWJ800E-7	CABLE CLAMP	
SWJ800E-8	CONTROL SWITCH	
SWJ800E-9	LEFT HANDLE	
SWJ800E-10	SWITCH SPRING	
SWJ800E-11	SWITCH BUTTON	
SWJ800E-12	ANTI-LOCK BUTTON	
SWJ800E-13	ANTI-LOCK BUTTON SPRING	
SWJ800E-14	CABLE CLAMP	
SWJ800E-15	SELF TAPPING SCREW 4*12	
SWJ800E-16	SELF TAPPING SCREW 5*20	
SWJ800E-17	SPRING CONNECTING WIRE	
SWJ800E-18	TUBE ASSY'	
SWJ800E-18-1	MIDDLE TUBE	
SWJ800E-18-2	RIVET	
SWJ800E-18-3	DRAW TUBE REED	
SWJ800E-18-4	BIG TUBE CONNECTION PIECE	
SWJ800E-18-5	BIG TUBE CONNECTION WASHER	
SWJ800E-18-6	BIG TUBE CONNECTION SLEEVE	
SWJ800E-18-7	BIG TUBE CONNECTION	
SWJ800E-18-8	GUIDE PIN	
SWJ800E-18-9	BIG RETAINING RING	
SWJ800E-18-10	TUBE SLEEVE	
SWJ800E-18-11	BIG TUBE	
SWJ800E-20	LEFT HOUSING	
SWJ800E-21	CABLE CLAMP	
SWJ800E-22	SELF TAPPING SCREW 4*12	
SWJ800E-23	SPONGE WASHER	
SWJ800E-24	SPONGE WASHER	
SWJ800E-25	LABLE	
SWJ800E-26	MIDDLE OIL CONNECTION	
SWJ800E-27	TRANSPARENT OIL TUBE	
SWJ800E-28	OIL TUBE FIXING SPRING	
SWJ800E-29	PUMP ASSY'	

SWJ800E-29-1	TURBINE GEAR	
SWJ800E-29-2	TURBINE	
SWJ800E-29-3	PISTON FRAME	
SWJ800E-29-4	PISTON SLEEVE	
SWJ800E-29-5	PUMP BODY	
SWJ800E-29-6	PUMP EXTENSION SPRING	
SWJ800E-30	FLANGE SELF TAPPING SCREW 3*8	
SWJ800E-31	TANK ASSY'	
SWJ800E-31-1	OIL TUBE FIXING SPRING	
SWJ800E-31-2	TRANSPARENT OIL TUBE	
SWJ800E-31-3	TANK OUT OIL AIRPROOF	
SWJ800E-31-4	TANK CONNECTION	
SWJ800E-31-5	SPONGE	
SWJ800E-31-6	TANK CONNECTION CHOKE PLUG	
SWJ800E-31-7	TANK	
SWJ800E-32	TANK CAP ASSY'	
SWJ800E-32-1	VALUE	
SWJ800E-32-2	TANK CAP AIRPROOF	
SWJ800E-32-3	TANK CAP	
SWJ800E-32-4	TANK CAP COVER	
SWJ800E-33	CONNECTING WIRE L=70	
SWJ800E-34	STATOR ASSY'	
SWJ800E-35	BEARING 607	
SWJ800E-36	CARBON BRUSH	
SWJ800E-37	BUSH	
SWJ800E-38	BRUSH HOLDER	
SWJ800E-39	ROTOR ASSY'	
SWJ800E-40	BRARING 608	
SWJ800E-41	SMALL GEAR	
SWJ800E-42	HEX NUT M5	
SWJ800E-43	BEARING 606	
SWJ800E-44	E RETAINING RING	
SWJ800E-45	BIG GEAR	
SWJ800E-46	OUTPUT SHAFT	
SWJ800E-47	BEARING 6900	
SWJ800E-48	SELF TAPPING SCREW 4*12	
SWJ800E-49	RIGHT HOUSING INLAY ASSY'	
SWJ800E-49-1	MACHINE SCREW 4*8	
SWJ800E-49-2	WASHER	
SWJ800E-49-3	SELF LOCKING NUT M8	

SWJ800E-49-4	RIGHT HOUSING INLAY AIRPROOF	
SWJ800E-49-5	RIGHT HOUSING INLAY	
SWJ800E-49-6	OUTPUT OIL AIRPROOF	
SWJ800E-50	STRETCHING SCREW	
SWJ800E-51	TIGHTENING NUT	
SWJ800E-52	SPONGE WASHER	
SWJ800E-53	RUBBLE	
SWJ800E-54	SPONGE WASHER	
SWJ800E-55	RIGHT HOUSING	
SWJ800E-56	SELF TAPPING SCREW 4*14	
SWJ800E-57	SPROCKET	
SWJ800E-58	E RETAINING RING	
SWJ800E-59	SELF TAPPING SCREW 5*20	
SWJ800E-60	END CAP ASSY'	
SWJ800E-60-1	END CAP AIRPROOF	
SWJ800E-60-2	END CAP	
SWJ800E-60-3	SPROCKET CLAMP	
SWJ800E-60-4	NAMEPLATE	
SWJ800E-61	INNER HEX SCREW 8*25	
SWJ800E-62	SPROCKET	
SWJ800E-63	CHAIN SAW	
SWJ800E-64	BLADE SLEEVE	
SWJ800E-65	SPANNER	

Parts available on snowjoe.com

For parts not available on snowjoe.com
contact us at 1-866-SNOWJOE.